

# **LCD MONITOR**

---

---

Gebruikershandleiding (Eng.)

## Table of contents

Important safety information	2
In The Box	4
Connections	4
Rear interface	4
Control Layout	5
How to connect your monitor	5
On-Screen Display (OSD) Operation	6
Remote control	7
AV Input Configuration	8
HDMI Input Configuration	11
VGA Input Configuration	14

**Manufacturer reserves the right to upgrade the product without notice!**

## IMPORTANT SAFETY INFORMATION

### ENVIRONMENT

- Do not install the monitor outdoors or in any hostile environment. To prevent fire or electric shock, do not expose monitor to rain or moisture. Avoid placing the monitor in areas subject to extreme temperature such as direct sunlight or near a heating appliances/equipment (such as amplifiers, etc) as this may result in overheating and damage.
- This monitor is designed to be used in the office or home. Do not subject it to vibrations, dust or corrosive gases.
- To obtain a clear picture, do not expose screen to direct illumination or sunlight. Using the monitor against a bright background and where sunlight or other light sources shine directly on to the monitor can increase eye fatigue

### POWER CORD

- Neither the monitor itself nor any other heavy object should rest on the power cord.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles and the point where they exit from the monitor.
- Firmly grasp the plug when disconnecting the power cord. Do not pull the power cord itself.
- Do not modify or damage the cord. Damage to a power cord can cause fire or electric shock.
- This monitor is designed to operate on 100-240V AC supply. Take caution in connecting it to the correct supply using the correct power cord.

### MOUNTING

- Always place the monitor on a secure table or have it properly mounted to the wall. Do not hang anything on the monitor.
- Ensure the monitor is located close to a power outlet that is easily accessible, as removing the power cord is the only way to isolate power

## USING A WALL MOUNT

**Caution:** Any wall mount must bear a minimum of 5x the monitor's net weight to mount safely. The stand must be removed first before mounting this way.

1. Place the monitor face down on a surface that is soft, yet strong enough to hold the monitor.
2. Use a screwdriver to remove the screws from the four holes on each side of the bottom of the monitor's base.
3. Make sure all cables are already connected to the monitor.
4. Follow the directions included with the wall mount to fix the monitor to the wall.

## STORAGE

- Unplug the monitor if it will not be used for a long period.

## VENTILATION

- Never cover or block the ventilation slots in the monitor. A minimum distance of at least 10 cm should be maintained around the unit for sufficient ventilation.
- Never insert any foreign object, metal or liquid into the ventilation slots, as this could result in fire or electric shock.
- Avoid installing a DVR or other equipment too close to the monitor. Keep such equipment at least 30 cm away from the monitor.

## WATER AND MOISTURE

- The monitor should not be exposed to any moisture or liquid.
- Do not use the monitor near water.
- Do not touch the monitor or cable with wet hands as this may cause electric shock or damage.

## CLEANING


- Unplug the unit from the wall outlet before cleaning.
- Do not use liquid or aerosol cleaners. Use a dry soft lint-free cloth for cleaning. If dust is persistent, wipe with a slightly damp cloth.

## IN THE BOX

1 x LCD Monitor, 1 x AC adapter, 1 x HDMI cable, 1 x User Manual 1 x IR control

## CONNECTIONS

### Rear Interface

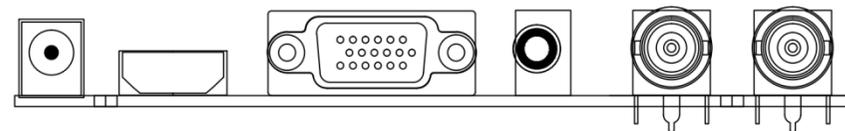

DC      HDMI      VGA      AUDIO IN      VIDEO IN      VIDEO OUT

※**DC:** Only use the 12v DC power supply included with the monitor.

※**AC:** **AC power supply for 27/32/42inch.**

**HDMI:** (High-Definition Multimedia Interface) Supports digital video and audio connections.

**VGA:** 15 pin D-sub cable for standard VGA connection.


**Audio IN:**  
3.5 mm stereo jack connection for audio input when using VGA /AV connector.

**VIDEO/AV IN:**  
BNC connections supporting composite video inputs from equipment such as Cameras or DVR's.

**VIDEO/AV OUT:**  
Composite video loop through output – connect a second monitor.

## CONTROL LAYOUT

The control buttons are located on the right hand rear side of the monitor.

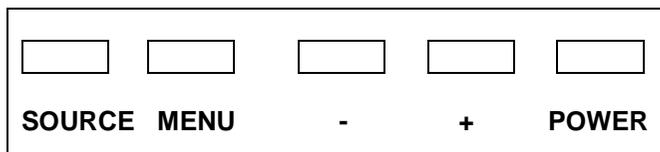

**SOURCE:** Selects input mode – AV,HDMI , VGA.

**MENU:** Access to the On Screen Display (OSD) menu.

**+ and –:** **Volume controls up/down, confirm input source selection and navigation in the OSD.**

**POWER:** Turns the monitor on or off.

## HOW TO CONNECT YOUR MONITOR

### 1. Connecting using AV - Composite Video

Connect your video cable with BNC connector to the AV connector on the rear of the monitor, and the other end to your DVR/Camera etc. If audio input is required, connect the 3.5 mm stereo audio cable to the AUDIO INPUT on the rear of the monitor and to the Audio Output connector on the DVR/Camera etc.

Connect power to the monitor and video source, and switch on. Using the SOURCE button, press repeatedly until either 'AV' (depending on the connection used) is highlighted on the display at the top of the monitor's screen, and press '+' to select.

### 2. Connecting using HDMI

Connect one end of a HDMI cable (optional) to the HDMI connector on the rear of the monitor, and the other to the HDMI out connector on the PC/DVR. This connection will support both video and audio transmission.

Connect power to the monitor and video source, and switch on. Using the SOURCE button, press repeatedly until 'HDMI' is highlighted on the display at the top of the monitor's screen, and press '+' to select.

### 3. Connecting using VGA

Connect one end of a 15-pin monitor cable to the VGA connector on the monitor and the other end to the PC/DVR. **Note - if your PC/DVR connector isn't 15-pin D-sub you may need an adapter to connect with this cable.**

If audio is required, connect one end of the 3.5 mm stereo audio cable (sometimes referred to as 1/8" stereo jack) to the PC Audio IN connector on the back of the monitor and the other end to the audio output on the PC/DVR.

Connect power to the monitor and video source, and switch on. Using the SOURCE button, press repeatedly until 'VGA' is highlighted on the display at the top of the monitor's screen, and press '+' to select.

**Ensure all cable connections are secure - tighten all cable screws. Movement and vibration may dislodge cables that are improperly connected. Route all wiring and cabling away from any heat sources and sharp metal edges to avoid damage.**

## BASIC ON-SCREEN DISPLAY SETUP

1. To access the OSD Menu press 'MENU'.
2. Use the '+' or '-' buttons to select the required menu item, then press the 'SOURCE' button to select the Sub menu.
3. Continue to use the 'SOURCE' button to highlight the required field, then press '+' or '-' to adjust the setting.
4. Press the 'MENU' button to return to previous menu.
5. Press the 'MENU' button again to exit the OSD Menu completely.

## Remote control



Power	Turn On & off the monitor
Power-s	Back light : high, mid , low
	Scale : normal, center, full
Mute	Switches the sound on or off
Lock	Menu lock: lock, unlock
Freeze	Screen Freeze
^, v	Move Up / down highlight icon,
Menu	Display the main on-screen menu
<, >	Press them to turn up or turn down the volume
Auto	Auto adjust (available only VGA mode)
INFO	Press it to display information on the monitor screen
VGA	VGA signal
HDMI	HDMI signal
AV	AV input signal
Source	Press it to display and select the available video signal
0~9	available only password entered
NC	Sensor PIP POP SWAP
EXIT	Press this button to exit the menu

\* Ensure the remote control is pointed toward the remote control window on the display. No obstacles should be placed between the remote control and the remote control window. The effective receiving scope for the signal is 3 meters to the front of the remote control window.

1. To ensure a normal operation, the remote control should not be dropped or damaged in any way. It should also be kept dry and away from all heat sources.
2. Battery replacement is necessary when the remote controller acts inconsistently or stops operating the LCD display.

7.

## Choose the input source

If you hope to enjoy the picture from the external input source, before to select the source, you need to connect the devices, otherwise, when you select the source, the none or no signal will appear on the screen, Press source button on the monitor or remote control, the menu appears on the screen, then press source to select the monitor item, and press “+/- (>)” to ensure it

**VGA:** the input source from VGA terminal output

**HDMI:** the input source from HDMI in terminal output

**AV:** the input source from AV or video camera terminal output

***The layout of the OSD will change depending on the input that is selected.***

## AV - Input Configuration

### 1. Video-Picture



**Smart Picture:** Select defaults or save user setting.

(Standard/Movie/ECO/Personal/Vivid)

**Brightness:** (0–100) Set the brightness of the image.

8.

- Contrast:** (0–100) Set the difference between the light and dark areas of the picture.
- Color:** (0-100)
- Sharpness:** (0-100)
- Tint:** (0-100) only available if NTSC
- Color Temp.:** Select the color temperature.  
(Normal/Warm/Cool/Personal)
- Focus:** ON/OFF
- Advanced control:**



- Noise Reduction:** Low/Medium/High/Off.
- Backlight:** Low/Medium/High.( Some models are available)
- DCR:** Dynamic Contrast Ratio, On/Off
- DCC:** Dynamic color control, On/Off
- Mirror:** (ON/OFF) Image upside mirroring, set up after the need to restart the monitor.
- Screen Markers:** 80%/85%/90%/93%/96%/Off.
- Centre Markers:** (ON/OFF) Image center cross mark.
- Check Field:** Red/Green/Blue/Black White/Off

## 2. Audio



- SOUND MODE:** Set user or preset audio configurations.  
(Standard/ Music/ Speech/Personal)
- BALANCE:** (-50 to +50)
- BASS:** (0-100)
- TREBLE:** (0-100)
- Virtual surround:** (ON/OFF)
- AVL:** (ON/OFF) Automatic Volume Control

## 3. OSD-Setting



**Menu Language:** Select preferred language for OSD.  
(En/Ch/Es/Fr/De/It/Pt/Pl/Ru/Ko/Ar)

**Picture Format:** Full/16:9/4:3/Zoom1/Zoom2/3:2/1.85:1/2.35:1

**Menu Timeout:** 10/20/30/40/50/60Sec/Off. Set seconds for the OSD to automatically close.

**Menu Transparency:** Setting the transparency level of the OSD.  
( Low/Medium/High/Off.)

**Power On Status:** Setting status after power on the monitor.  
(Power On/Keep Last Memory/Standby)

**Blue Screen:** Setting up the monitor screensaver. (ON/OFF)

**Color System:** Setting CVBS color format.

**System Reset:** Restore all factory defaults.

**Color Temp.:** Select the color temperature.  
(Normal/Warm/Cool/Personal)

**Focus:** ON/OFF

**Advanced control:**



**Noise Reduction:** Low/Medium/High/Off.

**Backlight:** Low/Medium/High. ( Some models are available)

**DCR:** Dynamic Contrast Ratio, On/Off

**DCC:** Dynamic color control, On/Off

**Mirror:** (ON/OFF) Image upside mirroring, set up after the need to restart the monitor.

**Screen Markers:** 80%/85%/90%/93%/96%/Off.

**Centre Markers:** (ON/OFF) Image center cross mark.

**Check Field:** Red/Green/Blue/Black White/Off

**HDMI - Input Configuration**

**1. Video-Picture**



**Smart Picture:** Select defaults or save user setting.  
(Standard/Movie/ECO/Personal/Vivid)

**Brightness:** (0-100) Set the brightness of the image.

**Contrast:** (0-100) Set the difference between the light and dark areas of the picture.

**Color:** (0-100)

**Sharpness:** (0-100)

**2. Audio**



- SOUND MODE:** Set user or preset audio configurations. (Standard/ Music/ Speech/Personal)
- BALANCE:** (-50 to +50)
- BASS:** (0-100)
- TREBLE:** (0-100)
- Virtual surround:** (ON/OFF)
- AVL:** (ON/OFF) Automatic Volume Control
- Camera:** Camera Mode (ON/OFF)

### 3. OSD-Setting



- Menu Language:** Select preferred language for OSD. (En/Ch/Es/Fr/De/It/Pt/Pl/Ru/Ko/Ar)
- Picture Format:** Full/16:9/4:3/Zoom1/Zoom2/3:2/1.85:1/2.35:1
- Menu Timeout:** 10/20/30/40/50/60Sec/Off. Set seconds for the OSD to automatically close.
- Menu Transparency:** Setting the transparency level of the OSD. ( Low/Medium/High/Off.)
- Power On Status:** Setting status after power on the monitor. (Power On/Keep Last Memory/Standby)
- Blue Screen:** Setting up the monitor screensaver. (ON/OFF)
- System Reset:** Restore all factory defaults.

### VGA - Input Configuration

#### 1. Video-Picture



- Brightness:** (0–100) Set the brightness of the image.
- Contrast:** (0–100) Set the difference between the light and dark areas of the picture.
- Color Temp.:** Select the color temperature. (Normal/Warm/Cool/Personal)
- Advanced control:**



**Noise Reduction:** Low/Medium/High/Off.

**Backlight:** Low/Medium/High. ( Some models are available)


**Mirror:** (ON/OFF) Image upside mirroring, set up after the need to restart the monitor.

**Screen Markers:** 80%/85%/90%/93%/96%/Off.

**Centre Markers:** (ON/OFF) Image center cross mark.

**Check Field:** Red/Green/Blue/Black White/Off

**VGA: ( Geometry)**

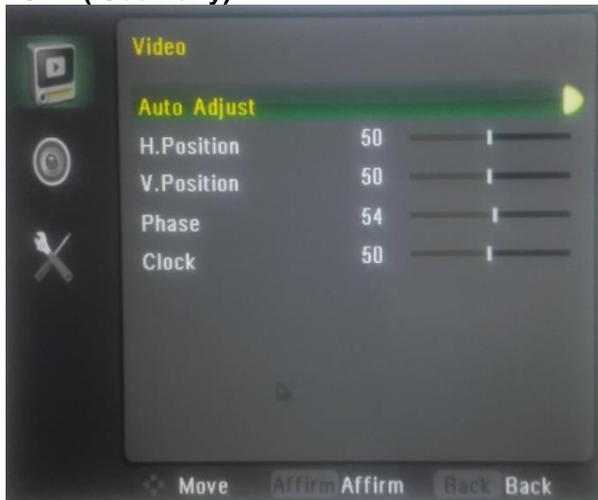

15.

**AUTO ADJUST:**

Perform an automatic configuration of the Phase, Clock, vertical and horizontal position.

**H-POSITION:**

Set horizontal image position.

**V-POSITION:**

Set vertical image position.

**PHASE:**

If the phase of your monitor is not fine-tuned, you may observe the image being unstable in the horizontal axis. Use this option to manually correct.

**CLOCK:**

Manually adjust clock synchronisation.

(If the clock setting of your image is not fine-tuned, you may observe periodic vertical bars of video noise on your image. These bars of noise are usually adjusted out when an Auto Configuration is performed. If the bars of noise are still present, this setting can be used to remove them.

## 2. Audio



**SOUND MODE:**

Set user or preset audio configurations. (Standard/ Music/ Speech/Personal)

**BALANCE:**

(-50 to +50)

**BASS:**

(0-100)

**TREBLE:**

(0-100)

**Virtual surround:**

(ON/OFF)

**AVL:**

(ON/OFF) Automatic Volume Control

16.

### 3. OSD-Setting



- Menu Language:** Select preferred language for OSD.  
(En/Ch/Es/Fr/De/It/Pt/Pl/Ru/Ko/Ar)
- Picture Format:** Full/16:9/4:3/Zoom1/Zoom2/3:2/1.85:1/2.35:1
- Menu Timeout:** 10/20/30/40/50/60Sec/Off. Set seconds for the OSD to automatically close.
- Menu Transparency:** Setting the transparency level of the OSD.  
( Low/Medium/High/Off.)
- Power On Status:** Setting status after power on the monitor.  
(Power On/Keep Last Memory/Standby)
- Blue Screen:** Setting up the monitor screensaver. (ON/OFF)
- System Reset:** Restore all factory defaults.

**END**