


3. SPECIFICATIONS

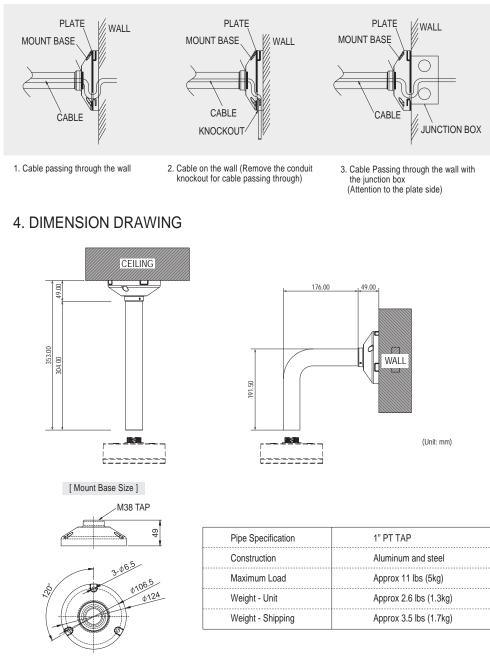


VIDEOR E. Hartig GmbH Carl-Zeiss-Straße 8 63322 Rödermark/Germany
 Tel. +49 (0) 6074 / 888-0
 T

 Fax +49 (0) 6074 / 888-100
 @

 www.videor.com
 W

 www.eneo-security.com
 W

Technical changes reserved © Copyright by VIDEOR E. Hartig GmbH Version 06/2018 DH-6 (#219059) WALL / CELING MOUNT BRACKET

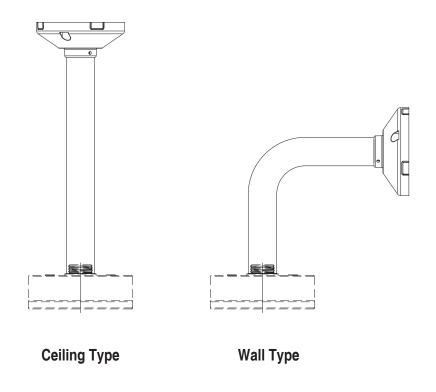


Please read this manual thoroufghly before use, and keep it handy it handy for future reference.

1. ASSEMBLY PARTS LIST

ITE	M Q'TY	PART NAME	DESCRIPTION
1	3	PLASTIC BUSHING	ANCHOR (Ø6.0mm)
2	2	MACHINE SCREW	UNC #8-32 SCREW (L=8mm)
3	1	PLATE	GI 1.6t
4	1	MOUNT BASE	M38 TAP, ALUMINUM
5	3	SCREW TAPPING	M6, L = 35.0mm
6	1	PIPE (90 ° ANGLE TYPE)(Option)	PT 1" M38 TAP, ALUMINUM
7	1	PIPE (STRAIGHT TYPE)(Option)	PT 1" M38 TAP, ALUMINUM
8	1	SEAL TAPE	TEFLON
9	2	SET SCREW	M5 x 5.0mm
10	1	L-WRENCH	
11	3	MACHINE SCREW	M6 x 12.0

* EXPLODE VIEW

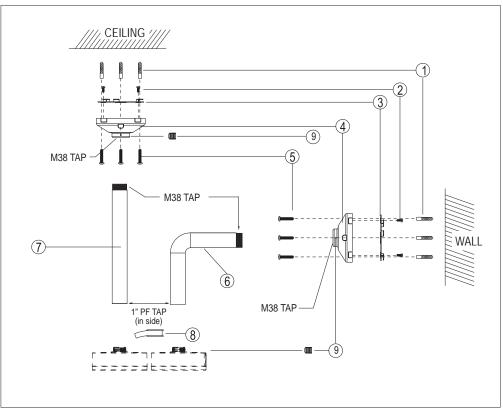

2. INSTALLATION

- Attach the mount base (④) and plate (③)to the ceiling or wall using the supplied M6 tapping screws (⑤) and plastic bushings(①) (Please refer to page 3 for an assembly drawing of the of plate)
- 2. Wind Teflon tape (((a)) around both threaded ends of the pipe (about 20times) for sealing. If necessary, use a sillicone rubber sealant to seal the area where the mount base and the pipe meet.
- 3. Fit the pipe (of which threads are covered by teflon tape) into the mount base (④) and turn until it is securely fastened.
- 4. Pull all the required cables through the mount base((4)) and pipe((6), (7)).
- 5. Align the dome adaptor with the pipe and turn until it is securely fastened.
- 6. Fasten the mount base ((4)), dome adaptor using the set screw ((9)).
- 7. Fasten the vandal proof dome housing to the dome adaptor Wind Teflon tape ((③)).

* How to install the plate

