


3. SPECIFICATIONS

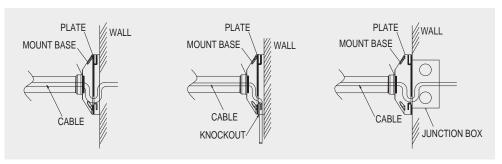


- 1. Cable passing through the wall
- 2. Cable on the wall (Remove the conduit knockout for cable passing through)
- Cable Passing through the wall with the junction box (Attention to the plate side)

4. DIMENSION DRAWING

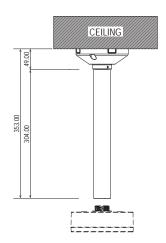

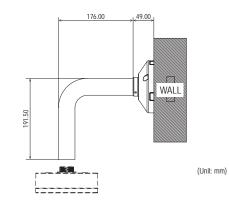

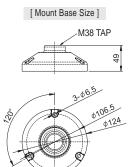

Pipe Specification	1" PT TAP
Construction	Aluminum and steel
Maximum Load	Approx 11 lbs (5kg)
Weight - Unit	Approx 2.6 lbs (1.3kg)
Weight - Shipping	Approx 3.5 lbs (1.7kg)

VIDEOR E. Hartig GmbH Carl-Zeiss-Straße 8 63322 Rödermark/Germany

Tel. +49 (0) 6074 / 888-0 Fax +49 (0) 6074 / 888-100 www.videor.com www.eneo-security.com


Technical changes reserved © Copyright by VIDEOR E. Hartig GmbH Version 06/2018

INSTRUCTION MANUAL



DH-6 (#219059)

WALL / CELING MOUNT BRACKET

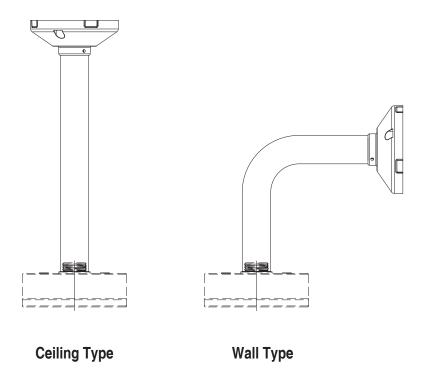

Please read this manual thoroufghly before use, and keep it handy it handy for future reference.


1. ASSEMBLY PARTS LIST

ITEM	Q'TY	PART NAME	DESCRIPTION
1	3	PLASTIC BUSHING	ANCHOR (Φ6.0mm)
2	2	MACHINE SCREW	UNC #8-32 SCREW (L=8mm)
3	1	PLATE	Gl 1.6t
4	1	MOUNT BASE	M38 TAP, ALUMINUM
5	3	SCREW TAPPING	M6, L = 35.0mm
6	1	PIPE (90 ° ANGLE TYPE)(Option)	PT 1" M38 TAP, ALUMINUM
7	1	PIPE (STRAIGHT TYPE)(Option)	PT 1" M38 TAP, ALUMINUM
8	1	SEAL TAPE	TEFLON
9	2	SET SCREW	M5 x 5.0mm
10	1	L-WRENCH	
11	3	MACHINE SCREW	M6 x 12.0

2. INSTALLATION

- 1. Attach the mount base (4) and plate (3) to the ceiling or wall using the supplied M6 tapping screws (5) and plastic bushings(1) (Please refer to page 3 for an assembly drawing of the of plate)
- 2. Wind Teflon tape (®) around both threaded ends of the pipe (about 20times) for sealing. If necessary, use a sillicone rubber sealant to seal the area where the mount base and the pipe meet.
- 3. Fit the pipe (of which threads are covered by teflon tape) into the mount base (4) and turn until it is securely fastened.
- 4. Pull all the required cables through the mount base(4) and pipe(6,7).
- 5. Align the dome adaptor with the pipe and turn until it is securely fastened.
- 6. Fasten the mount base (4), dome adaptor using the set screw (9).
- 7. Fasten the vandal proof dome housing to the dome adaptor Wind Teflon tape (③).

* EXPLODE VIEW

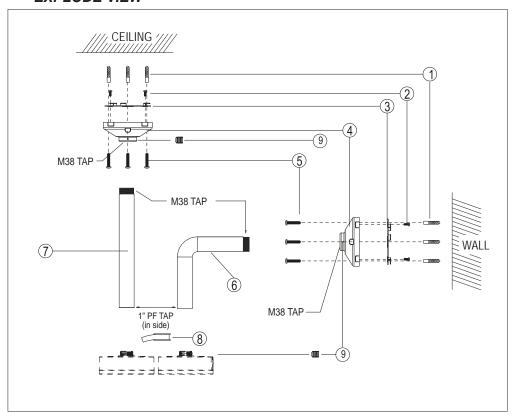

* How to install the plate

