

# Manual

Note that XSNet Series manuals may cover multiple models. To establish if a particular feature or specification in this manual applies to the unit at hand, consult the datasheet of the given model.

Note: The EU Declaration of Conformity for this product can be found at [www.siquira.com/support-files](http://www.siquira.com/support-files).

## Quick Start Guide

This quick start guide describes how to install and use the Hardened Managed PoE (Power over Ethernet) Ethernet Switch. This is the switch of choice for harsh environments constrained by space.

## Functional Description



- Meets EN61000-6-2 & EN61000-6-4 EMC Generic Standard Immunity for industrial environment.
- Up to 24 10/100Base-TX PoE ports and 4 1000Base SFP.
- RS-232 console, Telnet, SNMP v1 & v2c & v3, RMON, Web Browser, and TFTP management.
- Supports Command Line Interface in RS-232 console.
- Supports 8192 MAC addresses. Provides 3M bits memory buffer.
- Supports IEEE802.3af & IEEE802.3at Power over Ethernet (PoE) Power Sourcing Equipment (PSE).
- Supports IEEE802.3/802.3u/802.3ab/802.3z/802.3x. Auto-negotiation: 1000Mbps-full-duplex; 10/100Mbps-full/half-duplex; Auto MDI/MDIX.
- SFP socket for Gigabit fiber optic expansion.
- Store-and-forward mechanism.
- Full wire-speed forwarding rate.
- Alarms for port failure by relay output.
- Terminal Block power input: +48 ~ +57VDC or -48 ~ -57VDC.
- Field Wiring Terminal: Use Copper Conductors Only, 60/75°C, 12-24 AWG torque value 7 lb-in.
- Operating voltage and Max. current consumption: 0.545A @ 55VDC. Power consumption: 390W Max. (Full load with PoE), 30W Max. (Without PoE).
- -40°C to 75°C (-40°F to 167°F) operating temperature range. Tested for functional operation @ -40°C to 85°C (-40°F to 185°F).

- Hardened metal case.
- Supports Rack Mounting installation.

<Note> Make sure to readjust RTC Time of this switch to function accurately after this switch has been powered off for over 72 hours.

## Physical Description


### The Port Status LEDs and Power Inputs



<Note> Relay normal: b and c open, c and a close. Relay alarm: b and c close, c and a open.


LED	State	Indication
Power	Steady	Power on.
	Off	Power off.
Alarm	Steady	Port failure is occurred.
	Off	Port failure is not occurred.
10/100Base-TX		
Link/ACT	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.
1000Base SFP		
Link/ACT	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.

### Terminal Block Power Input

Terminal	Positive Supply	Negative Supply
-	0	-48 ~ -57VDC
+	+48 ~ +57VDC	0
	Earth Ground	

## Console Configuration

- Connect to the switch console:  
Connect the DB9 straight cable to the RS-232 serial port of the device and the RS-232 serial port of the terminal or computer running the terminal emulation application. Direct access to the administration console is achieved by directly connecting a terminal or a PC equipped with a terminal-emulation program (such as HyperTerminal) to the switch console port.
- Configuration settings of the terminal-emulation program:  
Baud rate: 115,200bps  
Data bits: 8  
Parity: none  
Stop bit: 1  
Flow control: none
- Press the “Enter” key. The Command Line Interface (CLI) screen should appear as below:
- Logon to Exec Mode (View Mode):  
At the “switch\_a login:” prompt just type in “root” and press <Enter> to logon to Exec Mode (or View Mode). And the “switch\_a>” prompt will show on the screen.

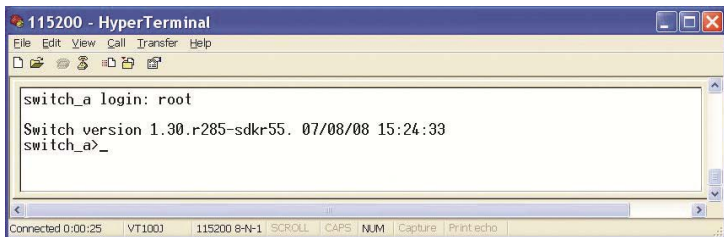


```

115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a login: root
Switch version 1.30.r285-sdkr55. 07/08/08 15:24:33
switch_a>_

```

- Logon to Privileged Exec Mode (Enable Mode):  
At the “switch\_a>” prompt just type in “enable” and press <Enter> to logon to Privileged Exec Mode (or Enable Mode). And the “switch\_a#” prompt will show on the screen.
- Logon to Configure Mode (Configure Terminal Mode):  
At the “switch\_a#” prompt just type in “configure terminal” and press <Enter> to logon to Configure Mode (or Configure Terminal Mode). And the “switch\_a(config)#” prompt will show on the screen.
- Set new IP address and subnet mask for Switch:  
At the “switch\_a(config)#” prompt just type in “interface vlan1.1” and press <Enter> to logon to vlan 1 (vlan1.1 means vlan 1). And the “switch\_a(config-if)#” prompt will show on the screen.  
Command Syntax: “ip address A.B.C.D/M”. “A.B.C.D” specifies IP address. “M” specifies IP subnet mask. “M”= 8: 255.0.0.0, 16:255.255.0.0, or 24: 255.255.255.0.  
For example, At the “switch\_a(config-if)#” prompt just type in “ip address 192.168.1.10/24” and press <Enter> to set new IP address (192.168.1.10) and new IP subnet mask (255.255.255.0) for Switch.

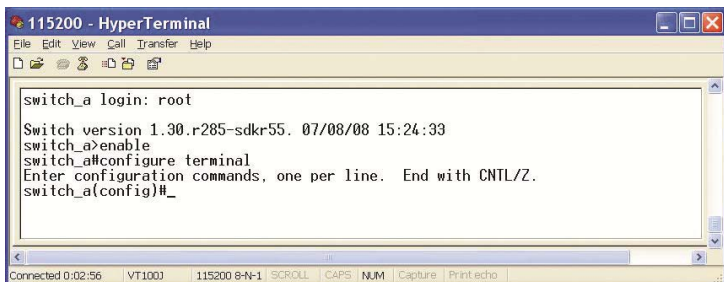


```

115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a login: root
Switch version 1.30.r285-sdkr55. 07/08/08 15:24:33
switch_a>enable
switch_a#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch_a(config)#_


```

## Web Configuration

- Login the switch:  
Specify the default IP address (192.168.1.10) of the switch in the web browser. A login window will be shown as below:

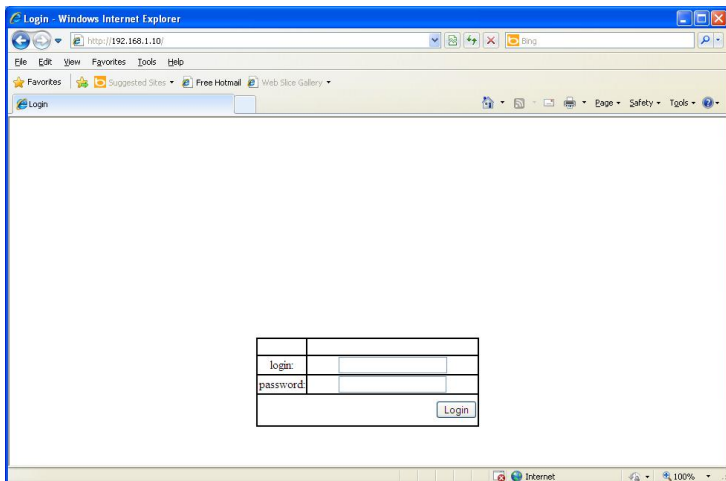

- Enter the factory default login ID: root.  
Enter the factory default password (no password).  
Then click on the "Login" button to log on to the switch.

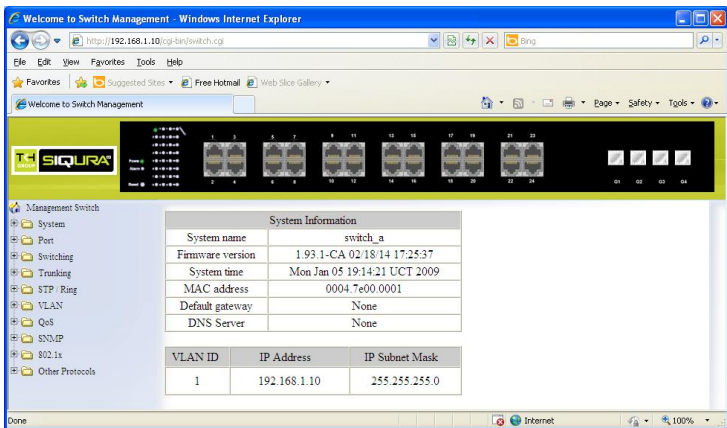

Management Switch

- System
- Port
- Switching
- Trunking
- STP / Ring
- VLAN
- QoS
- SNMP
- 802.1x
- Other Protocols

System Information	
System name	switch_a
Firmware version	1.93.1-CA 02/18/14 17:25:37
System time	Mon Jan 05 19:14:21 UCT 2009
MAC address	0004.7e00.0001
Default gateway	None
DNS Server	None

VLAN ID	IP Address	IP Subnet Mask
1	192.168.1.10	255.255.255.0

## Preface

This manual describes how to install and use the Hardened Managed PoE (Power over Ethernet) Ethernet Switch. This switch introduced here is designed to deliver full scalability with SNMP/RMON web-based management functions by providing:

To get the most out of this manual, you should have an understanding of Ethernet networking concepts.

In this manual, you will find:

Features on the Hardened Managed PoE Ethernet Switch

- Illustrative LED functions
- Installation instructions
- Management Configuration
- SNMP, IGMP...
- Specifications

# Table of Contents

<b>Manual</b>	<b>1</b>
<b>Quick Start Guide</b>	<b>1</b>
FUNCTIONAL DESCRIPTION	1
PHYSICAL DESCRIPTION	2
<i>The Port Status LEDs and Power Inputs</i>	2
CONSOLE CONFIGURATION	3
WEB CONFIGURATION	5
<b>Preface</b>	<b>7</b>
<b>Table of Contents</b>	<b>8</b>
<b>Product Overview</b>	<b>10</b>
HARDENED MANAGED POE ETHERNET SWITCH	10
PACKAGE CONTENTS	10
PRODUCT HIGHLIGHTS	11
<i>Basic Features</i>	11
<i>Management Support</i>	12
FRONT PANEL DISPLAY	13
PHYSICAL PORTS	13
SWITCH MANAGEMENT	15
<i>Web-based browser interface</i>	15
<i>Administration console via RS-232 serial port (CLI)</i>	15
<i>External SNMP-based network management application</i>	15
<b>Installation</b>	<b>16</b>
SELECTING A SITE FOR THE SWITCH	16
INSTALLATION AND PLACEMENT INSTRUCTIONS	16
<i>Mounted to 19-inch Standard Rack</i>	16
<i>Desktop or Any Flat Surface</i>	17
CONNECTING TO POWER	17
CONNECTING TO YOUR NETWORK	18
<i>Cable Type &amp; Length</i>	18
<i>Cabling</i>	18
<b>Switch Management</b>	<b>20</b>
MANAGEMENT ACCESS OVERVIEW	20
ADMINISTRATION CONSOLE (CLI)	21
<i>Direct Access</i>	21
WEB MANAGEMENT	22
SNMP-BASED NETWORK MANAGEMENT	22
PROTOCOLS	23
MANAGEMENT ARCHITECTURE	23




---

<b>SNMP &amp; RMON Management</b>	<b>24</b>
OVERVIEW	24
SNMP AGENT AND MIB-2 (RFC 1213)	25
RMON MIB (RFC 2819) AND BRIDGE MIB (RFC 1493)	25
<i>RMON Groups Supported</i>	26
<i>Bridge Groups Supported</i>	26
<b>Web-Based Browser Management</b>	<b>27</b>
LOGGING ON TO THE SWITCH	27
UNDERSTANDING THE BROWSER INTERFACE	29
SYSTEM	31
PORT	44
SWITCHING	50
TRUNKING	58
STP / RING	61
VLAN	73
QoS	80
SNMP	83
802.1X	88
OTHER PROTOCOLS	92
<b>Command Line Console Management</b>	<b>101</b>
ADMINISTRATION CONSOLE	101
<i>Exec Mode (View Mode)</i>	102
<i>Privileged Exec Mode (Enable Mode)</i>	106
<i>Configure Mode (Configure Terminal Mode)</i>	111
USER INTERFACE CONFIGURATION	115
SYSTEM	118
PORT	128
SWITCHING	134
TRUNKING	143
STP / RING	148
VLAN	164
QoS	170
SNMP	173
802.1X	180
OTHER PROTOCOLS	185
<b>Specifications</b>	<b>203</b>
<b>Appendix A</b>	<b>204</b>
<b>Appendix B</b>	<b>205</b>

## Product Overview

### Hardened Managed PoE Ethernet Switch



Front View

### Package Contents

When you unpack the product package, you shall find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to your authorized reseller.

- The Hardened Managed PoE Ethernet Switch
- User's Manual
- RS-232 cable
- Rackmount brackets with screws

## Product Highlights

### Basic Features

- Meets EN61000-6-2 & EN61000-6-4 EMC Generic Standard Immunity for industrial environment.
- Up to 24 10/100Base-TX PoE ports and 4 1000Base SFP.
- RS-232 console, Telnet, SNMP v1 & v2c & v3, RMON, Web Browser, and TFTP management.
- Supports Command Line Interface in RS-232 console.
- Supports 8192 MAC addresses. Provides 3M bits memory buffer.
- Supports IEEE802.3af & IEEE802.3at Power over Ethernet (PoE) Power Sourcing Equipment (PSE).
- Supports IEEE802.3/802.3u/802.3ab/802.3z/802.3x. Auto-negotiation: 1000Mbps-full-duplex; 10/100Mbps-full/half-duplex; Auto MDI/MDIX.
- SFP socket for Gigabit fiber optic expansion.
- Store-and-forward mechanism.
- Full wire-speed forwarding rate.
- Alarms for port failure by relay output.
- Terminal Block power input: +48 ~ +57VDC or -48 ~ -57VDC.
- Field Wiring Terminal: Use Copper Conductors Only, 60/75°C, 12-24 AWG torque value 7 lb-in.
- Operating voltage and Max. current consumption: 0.545A @ 55VDC. Power consumption: 390W Max. (Full load with PoE), 30W Max. (Without PoE).
- -40°C to 75°C (-40°F to 167°F) operating temperature range. Tested for functional operation @ -40°C to 85°C (-40°F to 185°F).
- Hardened metal case.
- Supports Rack Mounting installation.

**<Note> Press reset button more than 10 seconds to restart Managed Switch and reset Managed Switch password to factory default (no password required on default setting).**

## Management Support

### VLAN

- Port-based VLAN
- IEEE802.1Q tagged VLAN

### TRUNKING

- Port Trunking
- IEEE802.3ad Link Aggregation Control Protocol

### PORT-SECURITY

- Per-port programmable MAC address locking
- Up to 24 Static Secure MAC addresses per port
- IEEE802.1x Port-based Network Access Control

### PORT-MIRRORING

- Port-mirroring

### QOS (IEEE802.1p Quality of Service)

- 4 priority queues


### INTERNETWORKING PROTOCOLS

- Bridging:
  - IEEE802.1s Multiple Spanning Tree
  - IEEE802.1w Rapid Spanning Tree
  - IEEE802.1D Spanning Tree compatible
  - IEEE802.1Q – GVRP
  - IEEE802.1p – GMRP
  - Ring
- IP Multicast:
  - IGMP Snooping
- Rate Control
- NTP

### NETWORK MANAGEMENT METHODS

- Console port access via RS-232 cable (CLI, Command Line Interface)
- Telnet remote access
- SNMP agent:
  - MIB-2 (RFC1213)
  - Bridge MIB (RFC1493)
  - RMON MIB (RFC2819) – statistics, history, alarm and events
  - VLAN MIB (IEEE802.1Q/RFC2674)
  - Private MIB
- Web browser
- TFTP software-upgrade capability

## Front Panel Display



- **POWER**

This LED comes on when the switch is properly connected to power and turned on.

- **Port Status LEDs**

The LEDs are located on the front panel, displaying status for each respective port. Please refer to the following table for more details.

LED	State	Indication
Power	Steady	Power on.
	Off	Power off.
Alarm	Steady	Port failure is occurred.
	Off	Port failure is not occurred.
10/100Base-TX		
Link/ACT	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.
1000Base SFP		
Link/ACT	Steady	A valid network connection established.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.

## Physical Ports

The Hardened Managed Ethernet Switch provides:  
Up to 24 10/100Base-TX PoE ports and 4 1000Base SFP

### CONNECTIVITY

- RJ-45 connectors on TX ports
- Duplex LC connector on SFP 1000Base-SX/LX/BX fiber transceiver

#### **MODE SELECTION**

- 10Base-T full-duplex mode
- 10Base-T half-duplex mode
- 100Base-TX full-duplex mode
- 100Base-TX half-duplex mode
- 1000Base-T/SX/LX full-duplex mode
- Auto-negotiating mode

## Switch Management

### Web-based browser interface

The switch also boasts a point-and-click browser-based interface that lets user access full switch configuration and functionality from a Netscape or Internet Explorer browser.

### Administration console via RS-232 serial port (CLI)

The switch provides an onboard serial port, which allows the switch to be configured via a directly connected terminal.

### External SNMP-based network management application

The switch can also be configured via SNMP.

## Installation

This chapter gives step-by-step instructions about how to install the switch:

### Selecting a Site for the Switch

As with any electric device, you should place the switch where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:

- The ambient temperature should be between  $-40^{\circ}\text{C}$  to  $75^{\circ}\text{C}$  ( $-40^{\circ}\text{F}$  to  $167^{\circ}\text{F}$ ).
- The relative humidity should be less than 95 percent, non-condensing.
- Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards.
- Make sure that the switch receives adequate ventilation. Do not block the ventilation holes on each side of the switch.

### Installation and Placement Instructions

#### Mounted to 19-inch Standard Rack

Locate the accessories supplied in the product package. Use the rackmount brackets and screws to install the switch into any EIA 19" standard rack.

**Step 1:** Attach the brackets to each side of the switch.

**Step 2:** Apply the screws to each side and secure them tightly.

**Step 3:** Carefully position the switch into the rack.

**Step 4:** Align the brackets to the side holes on the rack and use rack screws to secure the switch with the rack.



Step 5: Proceed to the “Connecting to Power” section.

## Desktop or Any Flat Surface


The switch can sit on desktop or any flat surface with adequate space and ventilation. If you want to place it onto a shelf, make sure the shelf can withstand the weight of the switch.

Step 1: Simply put the switch on the desired place.

Step 2: Ensure the switch receives good ventilation.


Step 3: Proceed to the “Connecting to Power” section.

## Connecting to Power



Field Wiring Terminal Markings: Use Copper Conductors Only, 60/75°C, wire range 12-24 AWG, torque value 7 lb-in.

Terminal Block power input:

Terminal	Positive Supply	Negative Supply
—	0	-48 ~ -57VDC
+	+48 ~ +57VDC	0
	Earth Ground	

## Connecting to Your Network

### Cable Type & Length

It is necessary to follow the cable specifications below when connecting the switch to your network. Use appropriate cables that meet your speed and cabling requirements.

#### Cable Specifications

Speed	Connector	Port Speed Half/Full Duplex	Cable	Max. Distance
10Base-T	RJ-45	10/20 Mbps	2-pair UTP/STP Cat. 3, 4, 5	100 m
100Base-TX	RJ-45	100/200 Mbps	2-pair UTP/STP Cat. 5	100 m
SFP				
1000Base-T	RJ-45	2000 Mbps	4-pair UTP/STP Cat. 5	100 m
1000Base-SX	Duplex LC	2000 Mbps	MMF (62.5µm)	550 m 2 km
1000Base-LX	Duplex LC	2000 Mbps	SMF (9µm)	10, 40, 60 km
1000Base-BX	Duplex LC	2000 Mbps	SMF (9µm)	70 km

### Cabling

**Step 1:** First, ensure the power of the switch and end devices are turned off.

**<Note>** Always ensure that the power is off before any installation.

**Step 2:** Prepare cable with corresponding connectors for each type of port in use.

- Step 3:** Consult Cable Specifications Table on previous page for cabling requirements based on connectors and speed.
- Step 4:** Connect one end of the cable to the switch and the other end to a desired device.
- Step 5:** Once the connections between two end devices are made successfully, turn on the power and the switch is operational.

## Switch Management

This chapter explains the methods that you can use to configure management access to the switch. It describes the types of management applications and the communication and management protocols that deliver data between your management device (workstation or personal computer) and the system. It also contains information about port connection options.

This chapter covers the following topics:

- Management Access Overview
- Key Concepts
- Key Guidelines for Implementation
- Web Management Access
- Administration Console Access
- SNMP Access
- Standards, Protocols, and Related Reading

### Management Access Overview

The switch gives you the flexibility to access and manage the switch using any or all of the following methods.

The web browser interface and administration console (CLI) support are embedded in the switch software and are available for immediate use.

## Administration Console (CLI)

The administration console is an internal, character-oriented, Command Line Interface (CLI) for performing system administration such as displaying statistics or changing option settings.

Using this method, you can view the administration console from a terminal, personal computer, Apple Macintosh, or workstation connected to the switch's console port.

### Direct Access

Direct access to the administration console is achieved by directly connecting a terminal or a PC equipped with a terminal-emulation program (such as HyperTerminal) to the switch console port.

When using the management method, configure the terminal-emulation program to use the following parameters (you can change these settings after login):

#### [DEFAULT PARAMETERS]

- ◆ 115,200bps
- ◆ 8 data bits
- ◆ No parity
- ◆ 1 stop bit

This management method is often preferred because you can remain connected and monitor the system during system reboots. Also, certain error messages are sent to the serial port, regardless of the interface through which the associated action was initiated. A Macintosh or PC attachment can use any terminal-emulation program for connecting to the terminal serial port. A workstation attachment under UNIX can use an emulator such as TIP.

## Web Management

The switch provides a browser interface that lets you configure and manage the switch remotely.

After you set up your IP address for the switch, you can access the switch's web interface applications directly in your web browser by entering the IP address of the switch. You can then use your web browser to list and manage switch configuration parameters from one central location, just as if you were directly connected to the switch's console port.

## SNMP-Based Network Management

You can use an external SNMP-based application to configure and manage the switch. This management method requires the SNMP agent on the switch and the SNMP Network Management Station to use the same community string. This management method, in fact, uses two community strings: the get community string and the set community string. If the SNMP Network management station only knows the set community string, it can read and write to the MIBs. However, if it only knows the get community string, it can only read MIBs. **The default get and set community strings for the switch are public.**

## Protocols

The switch supports the following protocols:

### **VIRTUAL TERMINAL PROTOCOLS, SUCH AS TELNET**

A virtual terminal protocol is a software program, such as Telnet, that allows you to establish a management session from a Macintosh, a PC, or a UNIX workstation. Because Telnet runs over TCP/IP, you must have at least one IP address configured on the switch before you can establish access to it with a virtual terminal protocol.

**<Note>Terminal emulation is different from a virtual terminal protocol in that you must connect a terminal directly to the console port.**

### **SIMPLE NETWORK MANAGEMENT PROTOCOL (SNMP)**

SNMP is the standard management protocol for multivendor IP networks. SNMP supports transaction-based queries that allow the protocol to format messages and to transmit information between reporting devices and data-collection programs. SNMP runs on top of the User Datagram Protocol (UDP), offering a connectionless-mode service.

## Management Architecture

All of the management application modules use the same Messaging Application Programming Interface (MAPI). By unifying management methods with a single MAPI, configuration parameters set using one method (e.g. console port) are immediately displayed the other management methods (e.g. SNMP agent or web browser).

The management architecture of the switch adheres to the IEEE open standard. This compliance assures customers that the switch is compatible with, and will interoperate with other solutions that adhere to the same open standard.

## SNMP & RMON Management

This chapter describes the switch's Simple Network Management Protocol (SNMP) and Remote Monitoring (RMON) capabilities.

### Overview

RMON is an abbreviation for the Remote Monitoring MIB (Management Information Base). RMON is a system defined by the Internet Engineering Task Force (IETF) document RFC 2819, which defines how networks can be monitored remotely.

RMONs typically consist of two components: an RMON probe and a management workstation:

- The RMON probe is an intelligent device or software agent that continually collects statistics about a LAN segment or VLAN. The RMON probe transfers the collected data to a management workstation on request or when a pre-defined threshold is reached.
- The management workstation collects the statistics that the RMON probe gathers. The workstation can reside on the same network as the probe, or it can have an in-band or out-of-band connection to the probe.

The switch provides RMON capabilities that allow network administrators to set parameters and view statistical counters defined in MIB-II, Bridge MIB, and RMON MIB. RMON activities are performed at a Network Management Station running an SNMP network management application with graphical user interface.



## SNMP Agent and MIB-2 (RFC 1213)

The SNMP Agent running on the switch manager CPU is responsible for:

- Retrieving MIB counters from various layers of software modules according to the SNMP GET/GET NEXT frame messages.
- Setting MIB variables according to the SNMP SET frame message.
- Generating an SNMP TRAP frame message to the Network Management Station if the threshold of a certain MIB counter is reached or if other trap conditions (such as the following) are met:

**WARM START**

**COLD START**

**LINK UP**

**LINK DOWN**

**AUTHENTICATION FAILURE**

**RISING ALARM**

**FALLING ALARM**

**TOPOLOGY ALARM**

MIB-II defines a set of manageable objects in various layers of the TCP/IP protocol suites. MIB-II covers all manageable objects from layer 1 to layer 4, and, as a result, is the major SNMP MIB supported by all vendors in the networking industry. The switch supports a complete implementation of SNMP Agent and MIB-II.

## RMON MIB (RFC 2819) and Bridge MIB (RFC 1493)

The switch provides hardware-based RMON counters in the switch chipset. The switch manager CPU polls these counters periodically to collect the statistics in a format that complies with the RMON MIB definition.

---

## RMON Groups Supported

The switch supports the following RMON MIB groups defined in RFC 2819:

- RMON Statistics Group – maintains utilization and error statistics for the switch port being monitored.
- RMON History Group – gathers and stores periodic statistical samples from the previous Statistics Group.
- RMON Alarm Group – allows a network administrator to define alarm thresholds for any MIB variable. An alarm can be associated with Low Threshold, High Threshold, or both. A trigger can trigger an alarm when the value of a specific MIB variable exceeds a threshold, falls below a threshold, or exceeds or falls below a threshold.
- RMON Event Group – allows a network administrator to define actions based on alarms. SNMP Traps are generated when RMON Alarms are triggered. The action taken in the Network Management Station depends on the specific network management application.

## Bridge Groups Supported

The switch supports the following four groups of Bridge MIB (RFC 1493):


- The dot1dBase Group – a mandatory group that contains the objects applicable to all types of bridges.
- The dot1dStp Group – contains objects that denote the bridge's state with respect to the Spanning Tree Protocol. If a node does not implement the Spanning Tree Protocol, this group will not be implemented. This group is applicable to any transparent only, source route, or SRT bridge that implements the Spanning Tree Protocol.
- The dot1dTp Group – contains objects that describe the entity's transparent bridging status. This group is applicable to transparent operation only and SRT bridges.
- The dot1dStatic Group – contains objects that describe the entity's destination-address filtering status. This group is applicable to any type of bridge which performs destination-address filtering.

## Web-Based Browser Management

The switch provides a web-based browser interface for configuring and managing the switch. This interface allows you to access the switch using a preferred web browser.

This chapter describes how to configure the switch using its web-based browser interface.

### Logging on to the switch

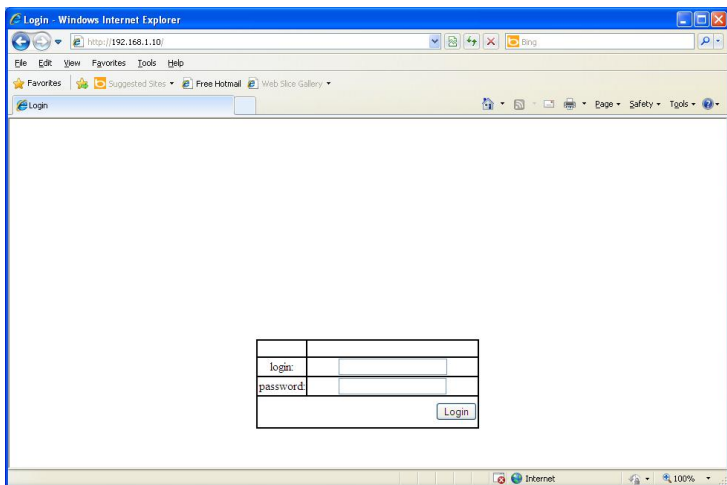

#### **SWITCH IP ADDRESS**

In your web browser, specify the IP address of the switch. Default IP address is 192.168.1.10.

#### **LOGIN**

Enter the factory default login ID: root.

#### **PASSWORD**

Enter the factory default password (no password).


Or enter a user-defined password if you followed the instructions later and

changed the factory default password.

Then click on the “Login” button to log on to the switch.

## Understanding the Browser Interface

The web browser interface provides groups of point-and-click buttons at the left field of the screen for configuring and managing the switch.

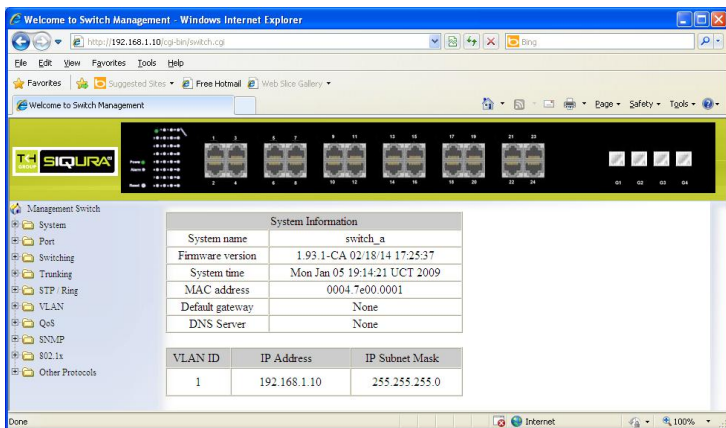

### SYSTEM

System Information, System Name/Password, IP Address, ARP Table, Route Table, Save Configuration, Firmware Upgrade, Alarm Setting, Reboot, Logout

### PORT

Configuration, Port Status, Rate Control, RMON Statistics, Per Port Vlan Activities

### SWITCHING

Bridging, Static MAC Entry, Port Mirroring, PoE, PoE Scheduling

### TRUNKING

Port Trunking, LACP Trunking

### STP / RING

Global Configuration, RSTP Port Setting, MSTP Properties, MSTP Instance Setting, MSTP Port Setting, Ring Setting, Chain Setting

## **VLAN**

VLAN Mode Setting, 802.1Q VLAN Setting, 802.1Q Port Setting, Port Based VLAN

## **QOS**

Global Configuration, 802.1p Priority, DSCP

## **SNMP**

SNMP General Setting, SNMP v1/v2c, SNMP v3


## **802.1X**

Radius Configuration, Port Authentication

## **OTHER PROTOCOLS**

GVRP, IGMP Snooping, NTP, GMRP, DHCP Server

# System

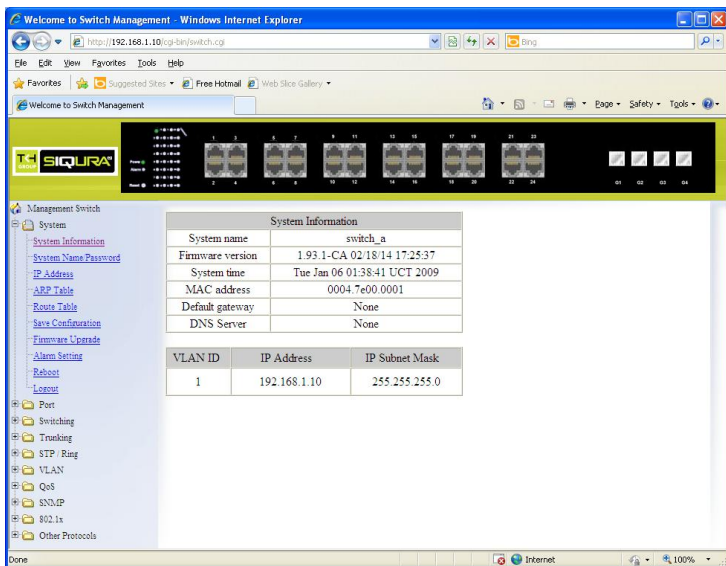

The screenshot shows a web browser window titled "Welcome to Switch Management - Windows Internet Explorer" with the URL "http://192.168.1.10/cgi-bin/switch.cgi". The interface includes a navigation menu on the left with options like "System Information", "System Name/Password", "IP Address", "ARP Table", "Route Table", "Save Configuration", "Firmware Upgrade", "Alarm Settings", "Reboot", and "Logout".

The main content area displays "System Information" with the following details:


System Information	
System name	switch_a
Firmware version	1.93.1-CA 02/18/14 17:25:37
System time	Tue Jan 06 01:38:41 UCT 2009
MAC address	0004.7e00.0001
Default gateway	None
DNS Server	None

Below this, a table shows the VLAN configuration:

VLAN ID	IP Address	IP Subnet Mask
1	192.168.1.10	255.255.255.0

## System Information


The System name, Firmware version, System time, MAC address, Default gateway, DNS Server, VLAN ID, IP Address, and IP Subnet Mask of Switch.

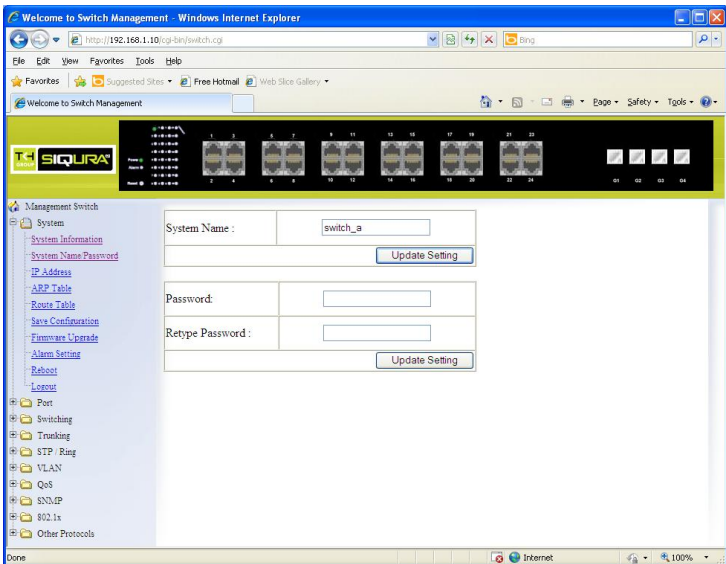

### **System Name/Password**

1. System Name: Click in "System Name" text box. Type a system name if it is blank, or replace the current system name with a new one.
2. Update Setting: Click "Update Setting" button to update your settings.
3. Password: Click in "Password" text box. Type a password.
4. Retype Password: Click in "Retype Password" text box. Type the same password in "Password" text box again to verify it.
5. Update Setting: Click "Update Setting" button to update your settings.



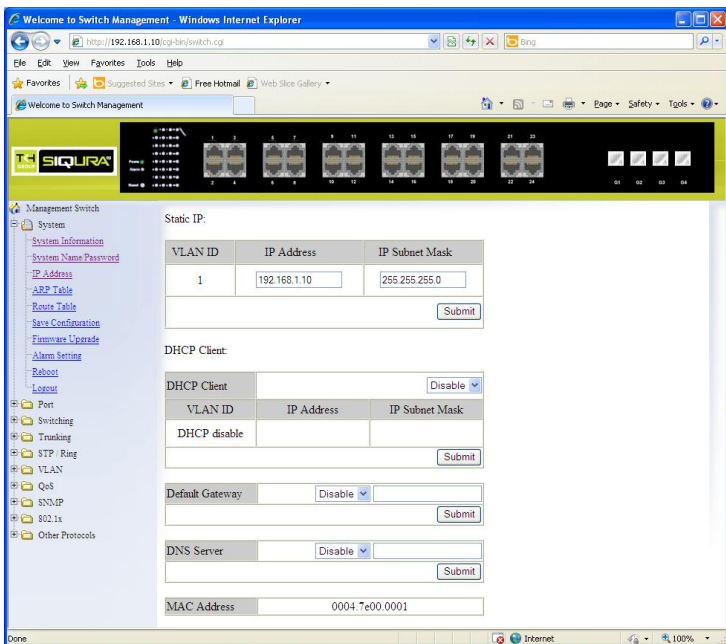


## IP Address

1. IP Address: Click in "IP Address" text box and type a new address to change the IP Address.
2. IP Subnet Mask: Click in "IP Subnet Mask" text box and type a new address to change the IP Subnet Mask.
3. Submit: Click "Submit" button when you finished these selections.
4. You need to enter the new IP address on the browser and reconnect to the switch after IP or subnet mask are changed.
5. DHCP Client: Click "DHCP Client" drop-down menu to choose "Disable" or "VLAN1" (or other VLAN group) from the "DHCP Client" drop-down list to disable or enable DHCP Client Setting for the switch. The managed VLAN is VLAN 1 by default. The managed IP Address will be assigned by DHCP Server when VLAN 1 is chosen as DHCP Client. DHCP Server can assign the Switch another managed IP Address by choosing another VLAN besides VLAN 1 as DHCP Client when Switch has multiple VLANs.
6. Submit: Click "Submit" button when you finished DHCP Client.
7. Default Gateway: Click "Default Gateway" drop-down menu to choose "Disable" or "Enable" from the "Default Gateway" drop-down list to disable or enable Default Gateway Setting for the switch. Click the text box and type a new address to change the Default

Gateway. (Need to choose “Enable” from the “Default Gateway” drop-down menu.)


8. Submit: Click “Submit” button when you finished Default Gateway.
9. DNS Server: Click “DNS Server” drop-down menu to choose “Disable” or “Enable” from the “DNS Server” drop-down list to disable or enable DNS Server Setting for the switch.  
Click the text box and type a new address to change the DNS Server. (Need to choose “Enable” from the “DNS Server” drop-down menu.)
10. Submit: Click “Submit” button when you finished DNS Server.

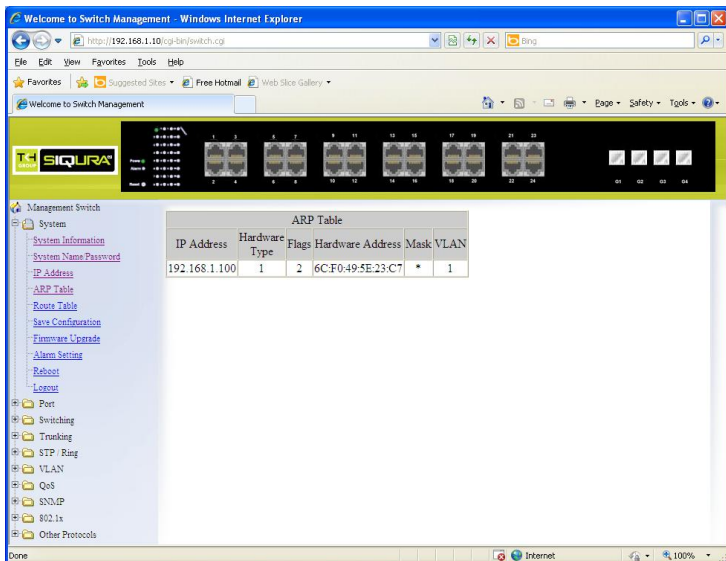

### **ARP Table**

Click **ARP Table** to view ARP Table.


The ARP Table is learned by Switch CPU, not learned by Switch MAC. The MAC Address of PC that have accessed Switch user interface will be recorded in the ARP Table.

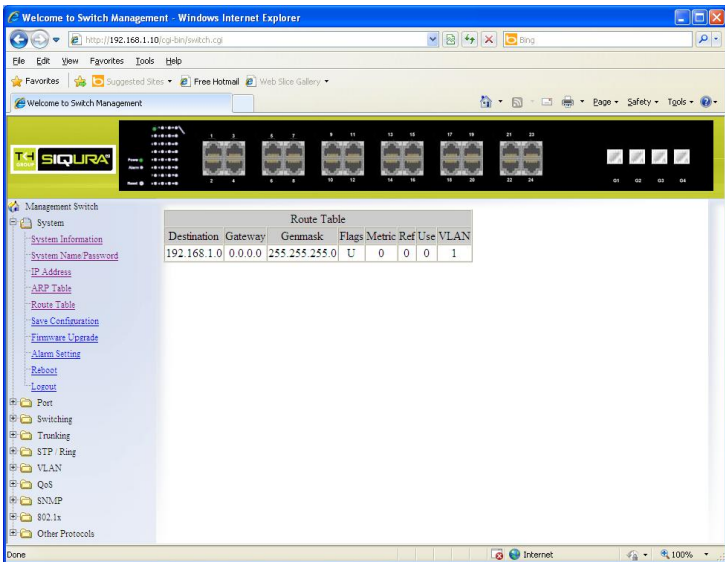

## Route Table


Click **Route Table** to view Route Table.

Route Table lists the routes to network destinations. And metrics (distances) are associated with those routes. The Route Table contains information about the topology of the network around it.

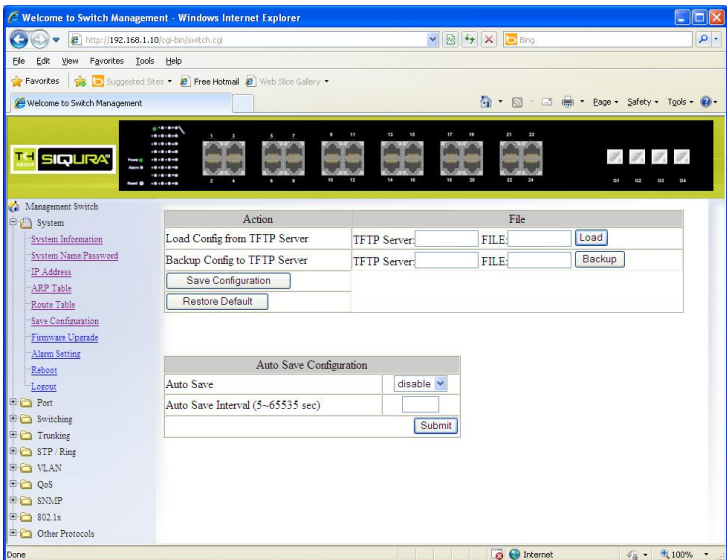


## Save Configuration

- Load Config from TFTP server:**
  - Click in "TFTP Server" text box and type the TFTP server IP address from where the file will be obtained.
  - Click in "FILE" text box and type the name of the file that will be obtained.
  - Click "Load" button to load the file from the TFTP server.
- Backup Config to TFTP server:**
  - Click in "TFTP Server" text box and type the TFTP server IP address to where the file will be backed up.
  - Click in "FILE" text box and type the name of the file that will be backed up.
  - Click "Backup" button to backup the file to the TFTP server.
- Save Configuration:** Click "Save Configuration" button to save your configuration settings.
- Restore Default:** Click "Restore Default" button to restore the default settings of the switch.
- Auto Save:** Click "Auto Save" drop-down menu to choose "Disable" or "Enable" from the "Auto Save" drop-down list to disable or enable Auto Save for the switch.
- Auto Save Interval (5~65536 sec):** Click in "Auto Save Interval" text box and type a decimal number between 5 and 65536.
- Submit:** Click "Submit" button when you finished Auto Save Configuration.


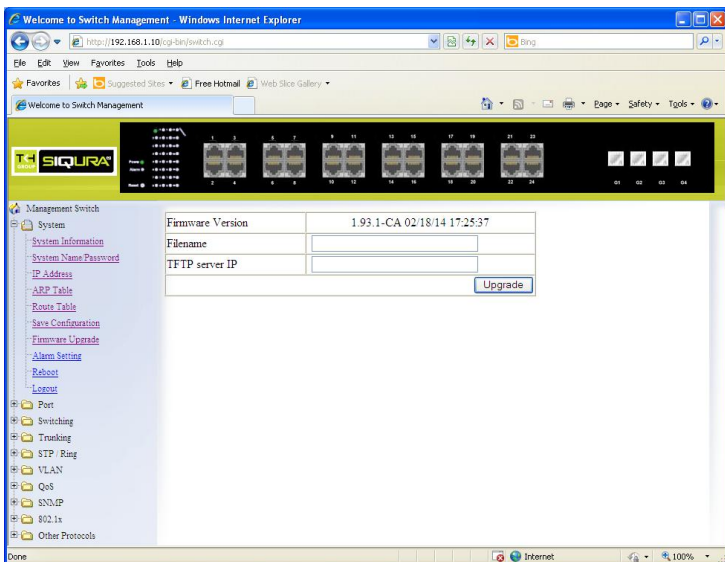


### **Firmware Upgrade**

1. **Filename:** Click in “Filename” text box and type the name of the file that you intend to upgrade it to the switch.
2. **TFTP server IP:** Click in “TFTP server IP” text box and type the TFTP server IP address from where the file will be obtained.
3. **Upgrade:** Click “upgrade” button to upgrade firmware to the switch. Please follow the message on the screen during the firmware upgrade process. Do not turn off the power or perform other functions during this period of time. Reboot the switch after completing the upgrade process.

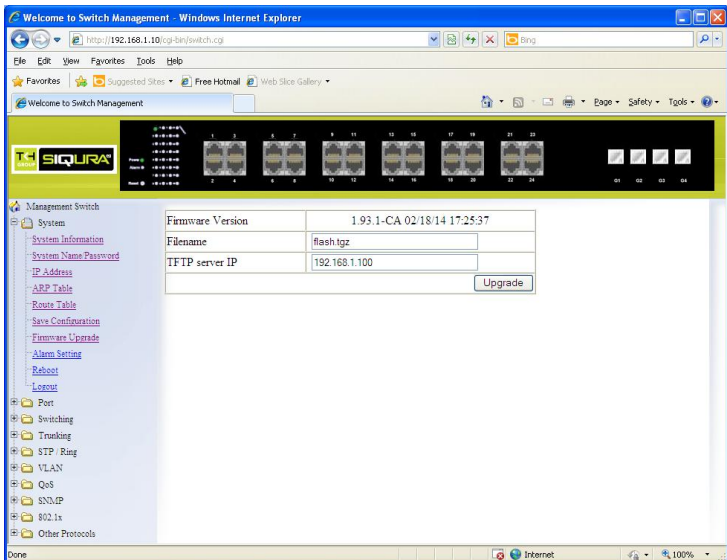


Please follow the message on the screen during the firmware upgrade process. Do not turn off the power or perform other functions during this period of time.

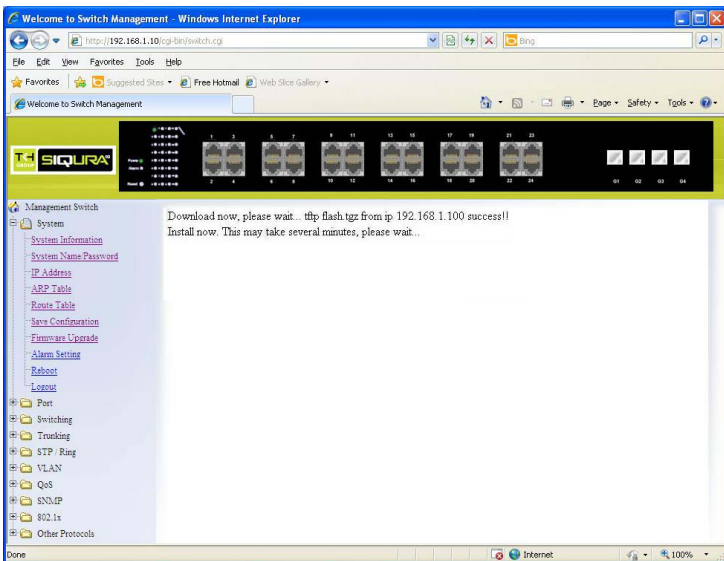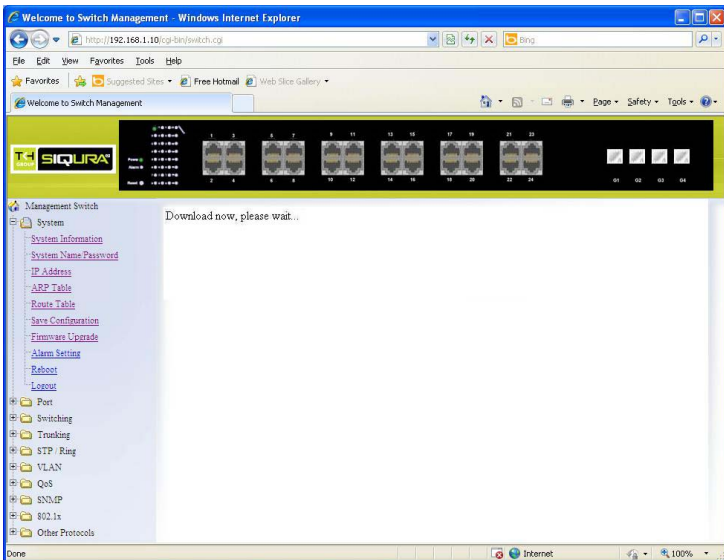


Firmware has been upgraded successfully to the switch. Reboot the switch

after completing the upgrade process.

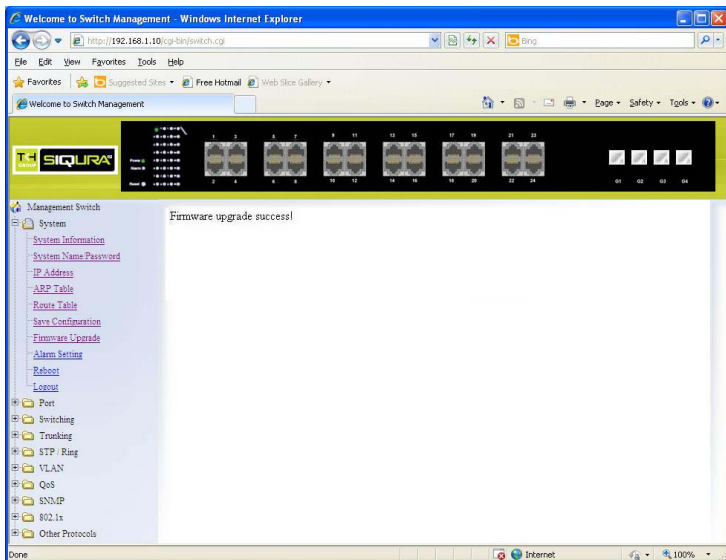



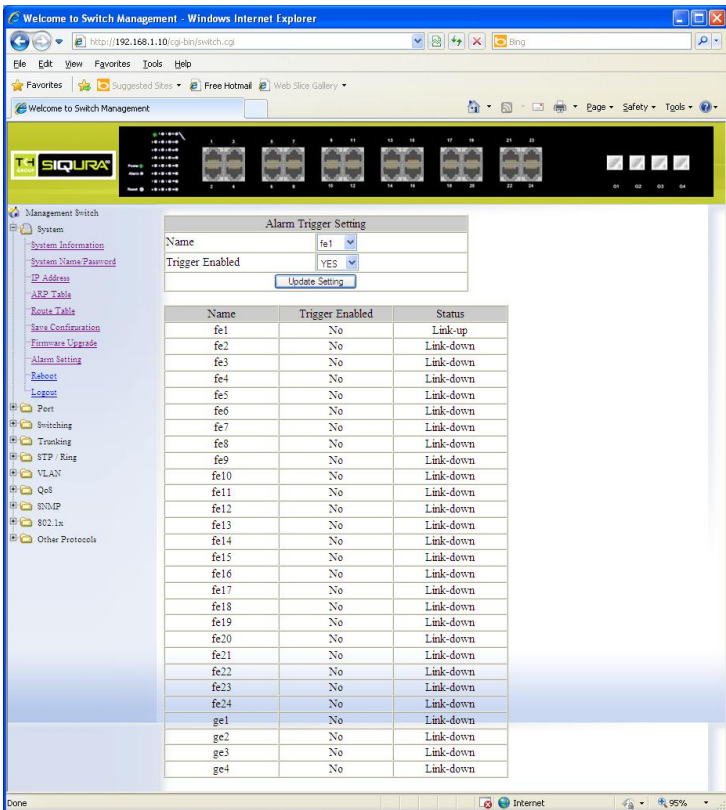

The screenshot shows the 'Alarm Trigger Setting' page in a web browser. The browser address bar shows the URL `http://192.168.1.10/cgi-bin/switch.cgi`. The page title is 'Welcome to Switch Management - Windows Internet Explorer'. The SIKURA logo is visible in the top left corner of the interface.

The 'Alarm Trigger Setting' form contains the following fields:


- Name: fe1
- Trigger Enabled: YES
- Update Setting button

Below the form is a table showing the status of all ports:

Name	Trigger Enabled	Status
fe1	No	Link-up
fe2	No	Link-down
fe3	No	Link-down
fe4	No	Link-down
fe5	No	Link-down
fe6	No	Link-down
fe7	No	Link-down
fe8	No	Link-down
fe9	No	Link-down
fe10	No	Link-down
fe11	No	Link-down
fe12	No	Link-down
fe13	No	Link-down
fe14	No	Link-down
fe15	No	Link-down
fe16	No	Link-down
fe17	No	Link-down
fe18	No	Link-down
fe19	No	Link-down
fe20	No	Link-down
fe21	No	Link-down
fe22	No	Link-down
fe23	No	Link-down
fe24	No	Link-down
ge1	No	Link-down
ge2	No	Link-down
ge3	No	Link-down
ge4	No	Link-down


### Alarm Setting

1. Name: Click "Name" drop-down menu to choose "fe1 ~ ge4" from the "Name" drop-down list.
2. Trigger Enabled: Click "Trigger Enabled" drop-down menu to choose "YES" or "NO" from the "Trigger Enabled" drop-down list to enable or disable Trigger.
3. Update Setting: Click "Update Setting" button to update settings to the switch.

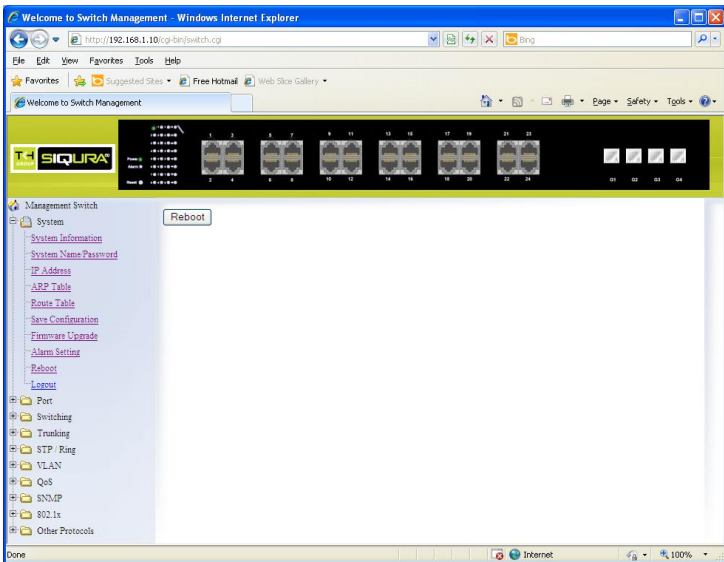

## Reboot


Reboot: Click “Reboot” button to restart the switch.

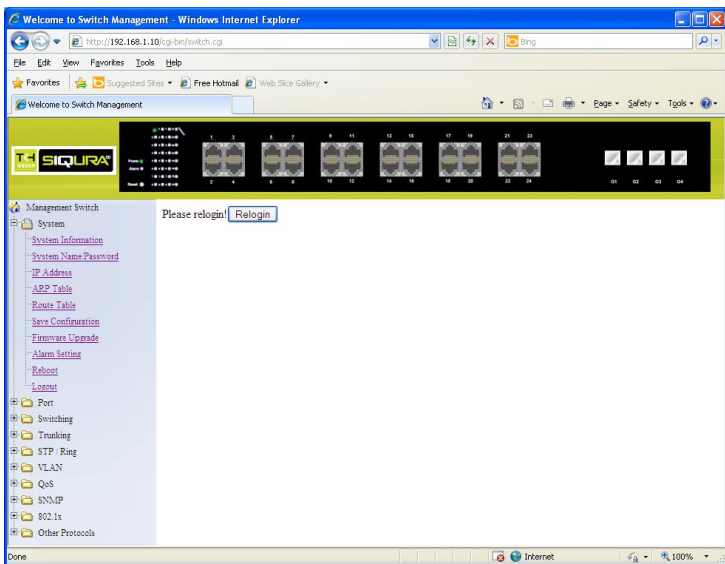

## Logout

Logout: Click “Logout” button to logout of the switch.

# Port

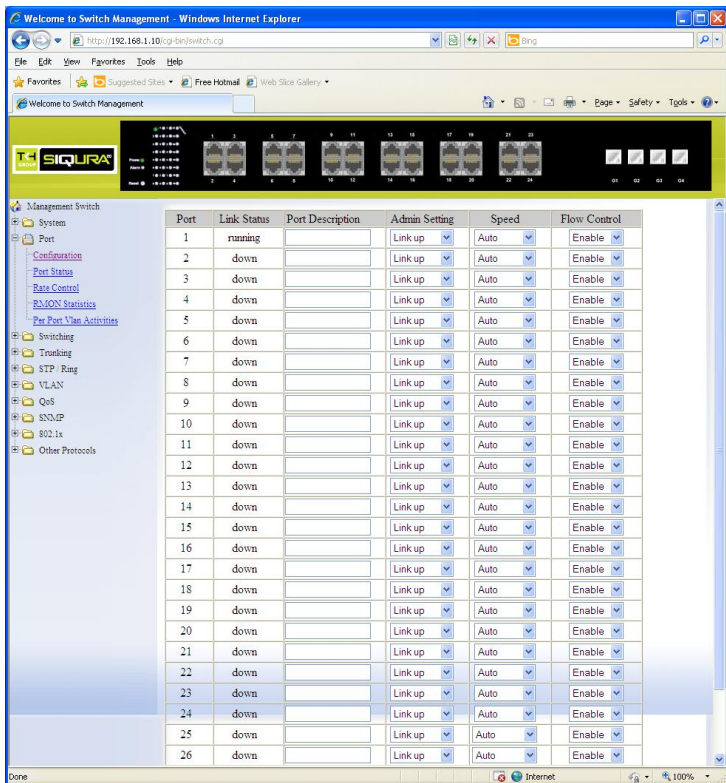

Port	Link Status	Port Description	Admin Setting	Speed	Flow Control
1	running		Link up	Auto	Enable
2	down		Link up	Auto	Enable
3	down		Link up	Auto	Enable
4	down		Link up	Auto	Enable
5	down		Link up	Auto	Enable
6	down		Link up	Auto	Enable
7	down		Link up	Auto	Enable
8	down		Link up	Auto	Enable
9	down		Link up	Auto	Enable
10	down		Link up	Auto	Enable
11	down		Link up	Auto	Enable
12	down		Link up	Auto	Enable
13	down		Link up	Auto	Enable
14	down		Link up	Auto	Enable
15	down		Link up	Auto	Enable
16	down		Link up	Auto	Enable
17	down		Link up	Auto	Enable
18	down		Link up	Auto	Enable
19	down		Link up	Auto	Enable
20	down		Link up	Auto	Enable
21	down		Link up	Auto	Enable
22	down		Link up	Auto	Enable
23	down		Link up	Auto	Enable
24	down		Link up	Auto	Enable
25	down		Link up	Auto	Enable
26	down		Link up	Auto	Enable

## Configuration

1. Port Description: Click in "Port Description" text box and type description for port.
2. Admin Setting: Click "Admin Setting" drop-down menu to choose "Link down" or "Link up" from the "Admin Setting" drop-down list to disable or enable Admin Setting for the port.
3. Speed: Click "Speed" drop-down menu to change the line speed and duplex settings from the "Speed" drop-down list for the port.
4. Flow Control: Click "Flow Control" drop-down menu to choose "Disable" or "Enable" from the "Flow Control" drop-down list to disable or enable

### Flow Control for the port.


- Submit: Click "Submit" button when you finished configurations.

Port	Link Status	Port Description	Speed	Duplex	Flow Control
1	running		100M	Full	Enable
2	down		100M	Full	Enable
3	down		100M	Full	Enable
4	down		100M	Full	Enable
5	down		100M	Full	Enable
6	down		100M	Full	Enable
7	down		100M	Full	Enable
8	down		100M	Full	Enable
9	down		100M	Full	Enable
10	down		100M	Full	Enable
11	down		100M	Full	Enable
12	down		100M	Full	Enable
13	down		100M	Full	Enable
14	down		100M	Full	Enable
15	down		100M	Full	Enable
16	down		100M	Full	Enable
17	down		100M	Full	Enable
18	down		100M	Full	Enable
19	down		100M	Full	Enable
20	down		100M	Full	Enable
21	down		100M	Full	Enable
22	down		100M	Full	Enable
23	down		100M	Full	Enable
24	down		100M	Full	Enable
25	down		1000M	Full	Enable
26	down		1000M	Full	Enable
27	down		1000M	Full	Enable
28	down		1000M	Full	Enable

Port	Detected	Connector	Transceiver	Mode	Wave Length(m)	Link Length(m)	Temperature(C)	Vec(V)	Tx Bias(mA)	Tx Pow(dbm)	Rx Pow(dbm)
25	No	None	None	None	None	None	None	None	None	None	None
26	No	None	None	None	None	None	None	None	None	None	None
27	No	None	None	None	None	None	None	None	None	None	None
28	Yes	LC	1000BASE-LX	SMF	1310	10000	40.313	3.240	5.038	-8.993	0.000

Alarm Situation (Alarm Setting)																	
Current Temperature Alarm	High Alarm	NO	Low Alarm	NO	High Warning	NO	Low Warning	NO	Current VCC Alarm	High Alarm	NO	Low Alarm	NO	High Warning	NO	Low Warning	NO
Current Tx Bias Alarm	High Alarm	NO	Low Alarm	NO	High Warning	NO	Low Warning	NO	Current Tx Power Alarm	High Alarm	NO	Low Alarm	NO	High Warning	NO	Low Warning	NO
Current Rx Power Alarm	High Alarm	YES	Low Alarm	NO	High Warning	YES	Low Warning	NO									

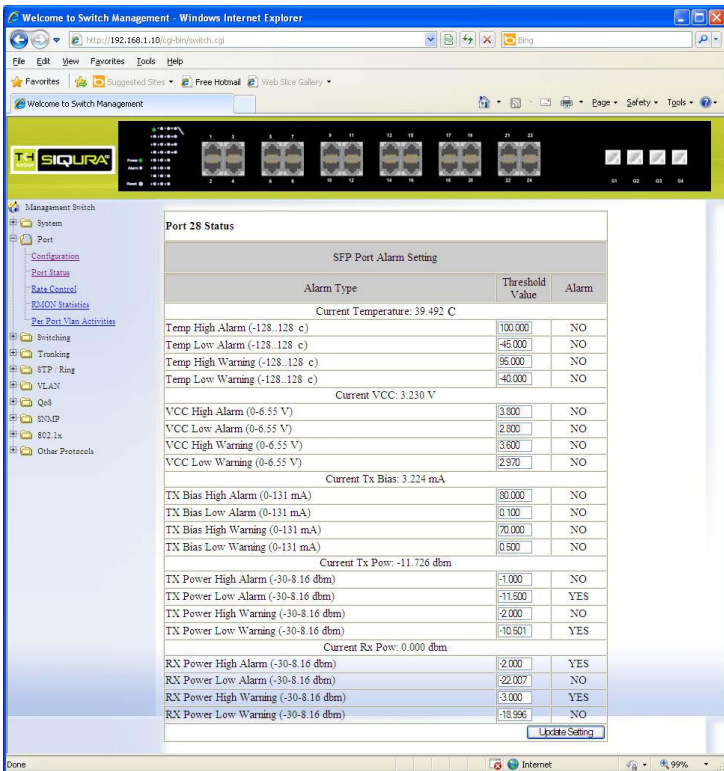

**Port 28 Status**

SFP Port Alarm Setting

Alarm Type	Threshold Value	Alarm
Current Temperature: 39.492 C		
Temp High Alarm (-128..128 c)	100.000	NO
Temp Low Alarm (-128..128 c)	-45.000	NO
Temp High Warning (-128..128 c)	95.000	NO
Temp Low Warning (-128..128 c)	-40.000	NO
Current VCC: 3.230 V		
VCC High Alarm (0-6.55 V)	3.800	NO
VCC Low Alarm (0-6.55 V)	2.800	NO
VCC High Warning (0-6.55 V)	3.600	NO
VCC Low Warning (0-6.55 V)	2.970	NO
Current Tx Bias: 3.224 mA		
TX Bias High Alarm (0-131 mA)	80.000	NO
TX Bias Low Alarm (0-131 mA)	0.100	NO
TX Bias High Warning (0-131 mA)	70.000	NO
TX Bias Low Warning (0-131 mA)	0.500	NO
Current Tx Pow: -11.726 dbm		
TX Power High Alarm (-30-8.16 dbm)	-1.000	NO
TX Power Low Alarm (-30-8.16 dbm)	-11.500	YES
TX Power High Warning (-30-8.16 dbm)	-2.000	NO
TX Power Low Warning (-30-8.16 dbm)	-10.501	YES
Current Rx Pow: 0.000 dbm		
RX Power High Alarm (-30-8.16 dbm)	-2.000	YES
RX Power Low Alarm (-30-8.16 dbm)	-22.007	NO
RX Power High Warning (-30-8.16 dbm)	-3.000	YES
RX Power Low Warning (-30-8.16 dbm)	-18.996	NO

Update Setting


## Port Status

View the Link Status, Port Description, Speed, Duplex, and Flow Control status for all ports.

### SFP Port:

- View the Detected, Connector, Transceiver, Mode, Wave Length (nm), Link Length (m), Temperature (C), Vcc (V), Tx Bias (mA), Tx Pow (dbm), and Rx Pow (dbm) information for SFP ports.
- Alarm Situation: View Current Temperature Alarm, Current VCC Alarm, Current Tx Bias Alarm, Current Tx Power Alarm, and Current Rx Power Alarm.
- Alarm Setting: Click in "Threshold Value" text boxes and type new Threshold Values for Temp High Alarm, Temp Low Alarm, Temp High Warning, Temp Low Warning, VCC High Alarm, VCC Low Alarm, VCC High Warning, VCC Low Warning, TX Bias High Alarm, TX Bias Low Alarm, TX Bias High Warning, TX Bias Low Warning, TX Power High

Alarm, TX Power Low Alarm, TX Power High Warning, TX Power Low Warning, RX Power High Alarm, RX Power Low Alarm, RX Power High Warning, RX Power Low Warning.

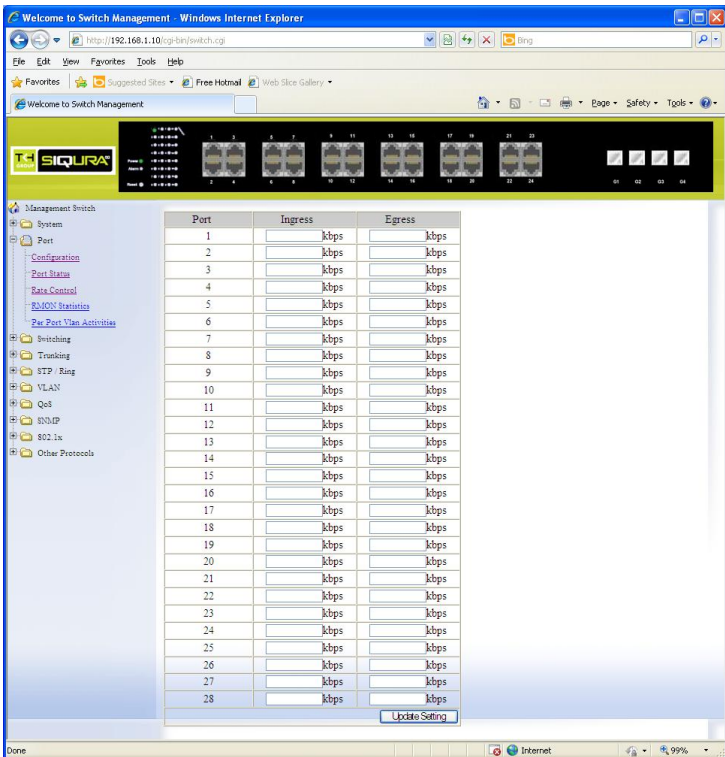

The screenshot shows the 'Management Switch' web interface. A table displays statistics for 28 ports. Each row contains a port number, an 'Ingress' field, and an 'Egress' field, all showing 'kpbs'. An 'Update Setting' button is located at the bottom right of the table.

Port	Ingress	Egress
1	kpbs	kpbs
2	kpbs	kpbs
3	kpbs	kpbs
4	kpbs	kpbs
5	kpbs	kpbs
6	kpbs	kpbs
7	kpbs	kpbs
8	kpbs	kpbs
9	kpbs	kpbs
10	kpbs	kpbs
11	kpbs	kpbs
12	kpbs	kpbs
13	kpbs	kpbs
14	kpbs	kpbs
15	kpbs	kpbs
16	kpbs	kpbs
17	kpbs	kpbs
18	kpbs	kpbs
19	kpbs	kpbs
20	kpbs	kpbs
21	kpbs	kpbs
22	kpbs	kpbs
23	kpbs	kpbs
24	kpbs	kpbs
25	kpbs	kpbs
26	kpbs	kpbs
27	kpbs	kpbs
28	kpbs	kpbs


### Rate Control

- Ingress:** Click in "Ingress" text box and type a new Rate to change the Ingress Rate Control for the port.  
 The rate value is a multiple of 62.5kpbs. Please round off decimal fraction of rate value and only key the integer of rate value in "Ingress" text box.  
 Rate Values: 62kpbs, 125kpbs, 187kpbs, 250kpbs, 312kpbs, 375kpbs, 437kpbs, 500kpbs, 562kpbs, 625kpbs, 687kpbs, 750kpbs, 812kpbs, 875kpbs, 937kpbs, 1000kpbs, ... , 1000000kpbs.
- Egress:** Click in "Egress" text box and type a new Rate to change the Egress Rate Control for the port.  
 The rate value is a multiple of 62.5kpbs. Please round off decimal fraction of rate value and only key the integer of rate value in "Egress"

text box.

Rate Values: 62kbps, 125kbps, 187kbps, 250kbps, 312kbps, 375kbps, 437kbps, 500kbps, 562kbps, 625kbps, 687kbps, 750kbps, 812kbps, 875kbps, 937kbps, 1000kbps, ... , 1000000kbps.

- Update Setting: Click “Update Setting” button when you finished these Rate Control settings.

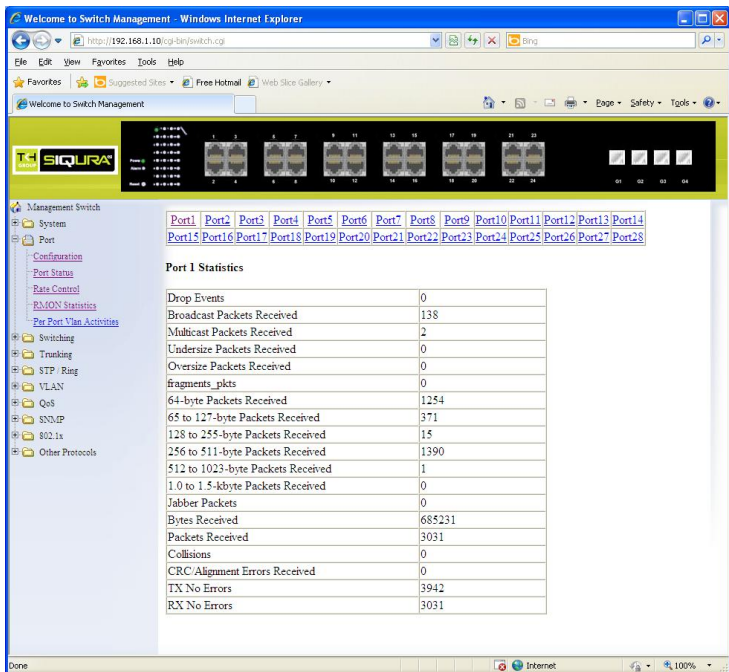


The screenshot shows the SIQURA switch management web interface in Internet Explorer. The browser address bar shows <http://192.168.1.10/cgi-bin/switch.cgi>. The page title is "Welcome to Switch Management". The interface includes a navigation menu on the left with categories like Management Switch, System, Port, Configuration, Port Status, Rate Control, and RMON Statistics. The main content area displays "Port 1 Statistics" for a selected port. A table lists various network statistics and their values.

Port 1 Statistics	
Drop Events	0
Broadcast Packets Received	138
Multicast Packets Received	2
Undersize Packets Received	0
Oversize Packets Received	0
fragments_pkts	0
64-byte Packets Received	1254
65 to 127-byte Packets Received	371
128 to 255-byte Packets Received	15
256 to 511-byte Packets Received	1390
512 to 1023-byte Packets Received	1
1.0 to 1.5-kbyte Packets Received	0
Jabber Packets	0
Bytes Received	685231
Packets Received	3031
Collisions	0
CRC/Alignment Errors Received	0
TX No Errors	3942
RX No Errors	3031

## RMON Statistics

Click ports to view corresponding RMON Statistics.



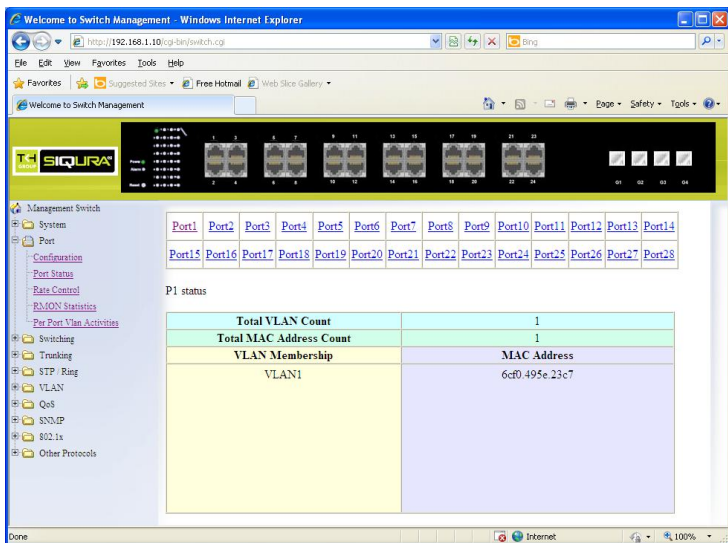

Management Switch

- System
- Port
  - Configuration
  - Port Status
  - Rate Control
  - RMON Statistics
  - Per Port Vlan Activities**
- Switching
- Trunking
- STP Ring
- VLAN
- QoS
- SNMP
- 802.1x
- Other Protocols

<a href="#">Port1</a>	<a href="#">Port2</a>	<a href="#">Port3</a>	<a href="#">Port4</a>	<a href="#">Port5</a>	<a href="#">Port6</a>	<a href="#">Port7</a>	<a href="#">Port8</a>	<a href="#">Port9</a>	<a href="#">Port10</a>	<a href="#">Port11</a>	<a href="#">Port12</a>	<a href="#">Port13</a>	<a href="#">Port14</a>
<a href="#">Port15</a>	<a href="#">Port16</a>	<a href="#">Port17</a>	<a href="#">Port18</a>	<a href="#">Port19</a>	<a href="#">Port20</a>	<a href="#">Port21</a>	<a href="#">Port22</a>	<a href="#">Port23</a>	<a href="#">Port24</a>	<a href="#">Port25</a>	<a href="#">Port26</a>	<a href="#">Port27</a>	<a href="#">Port28</a>


P1 status

Total VLAN Count	1
Total MAC Address Count	1
VLAN Membership	MAC Address
VLAN1	6cf0.495e.23c7

### **Per Port Vlan Activities**

Click ports to view corresponding vlan activities.

# Switching

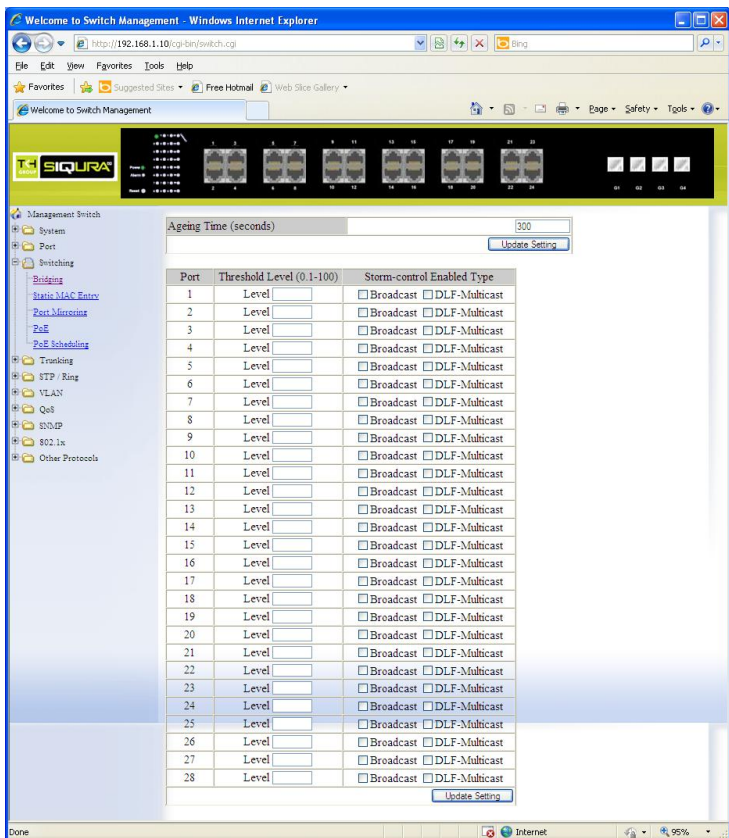

Ageing Time (seconds)


Port	Threshold Level (0.1-100)	Storm-control Enabled Type
1	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
2	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
3	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
4	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
5	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
6	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
7	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
8	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
9	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
10	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
11	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
12	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
13	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
14	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
15	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
16	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
17	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
18	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
19	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
20	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
21	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
22	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
23	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
24	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
25	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
26	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
27	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast
28	Level <input type="text"/>	<input type="checkbox"/> Broadcast <input type="checkbox"/> DLF-Multicast

## Bridging

1. Ageing Time (seconds): Click the text box and type a decimal number as Bridging Aging Time in seconds.
2. Update Setting: Click "Update Setting" button when you finished Aging Time settings.
3. Threshold Level (0.1-100): Click in "Level" text box and type a decimal number for the port. Need to choose "Broadcast" and/or "DLF-Multicast" from "Storm-control Enabled Type" for the port. DLF

(Destination Lookup Failure).

4. Storm-control Enabled Type: Choose “Broadcast” and/or “DLF-Multicast” from “Storm-control Enabled Type” for the port.
5. Update Setting: Click “Update Setting” button when you finished Threshold level and Storm-control Enabled Type settings.

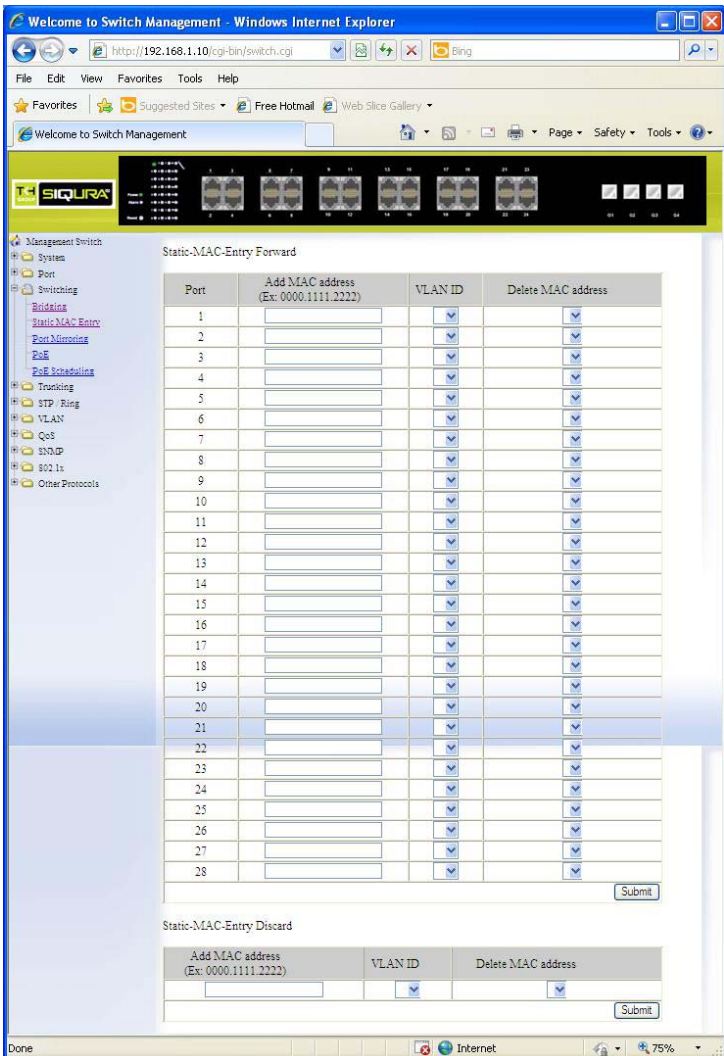

Static-MAC-Entry Forward

Port	Add MAC address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC address
1	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
2	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
3	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
4	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
5	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
6	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
7	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
8	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
9	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
10	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
11	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
12	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
13	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
14	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
15	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
16	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
17	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
18	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
19	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
20	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
21	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
22	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
23	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
24	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
25	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
26	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
27	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>
28	<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>

Static-MAC-Entry Discard

Add MAC address (Ex: 0000.1111.2222)	VLAN ID	Delete MAC address
<input type="text"/>	<input type="button" value="v"/>	<input type="button" value="x"/>

## Static MAC Entry


Static-MAC-Entry Forward:

1. Add MAC Address: Click in "Add MAC Address" text box and type a locked forwarding MAC Address for the port.

2. VLAN ID: Click “VLAN ID” drop-down menu and choose a VLAN ID from the “VLAN ID” drop-down list.
3. Delete MAC Address: Click “Delete MAC Address” drop-down menu and choose a locked forwarding MAC Address from the “Delete MAC Address” drop-down list to be deleted from the port.
4. Submit: Click “Submit” button when you finished Static-MAC-Entry Forward settings.

Static-MAC-Entry Discard:

1. Add MAC Address: Click in “Add MAC Address” text box and type a MAC Address to be discarded for the VLAN.
2. VLAN ID: Click “VLAN ID” drop-down menu and choose a VLAN ID from the “VLAN ID” drop-down list.
3. Delete MAC Address: Click “Delete MAC Address” drop-down menu and choose a MAC address from the “Delete MAC Address” drop-down list to be discarded from the VLAN.
4. Submit: Click “Submit” button when you finished Static-MAC-Entry Discard settings.

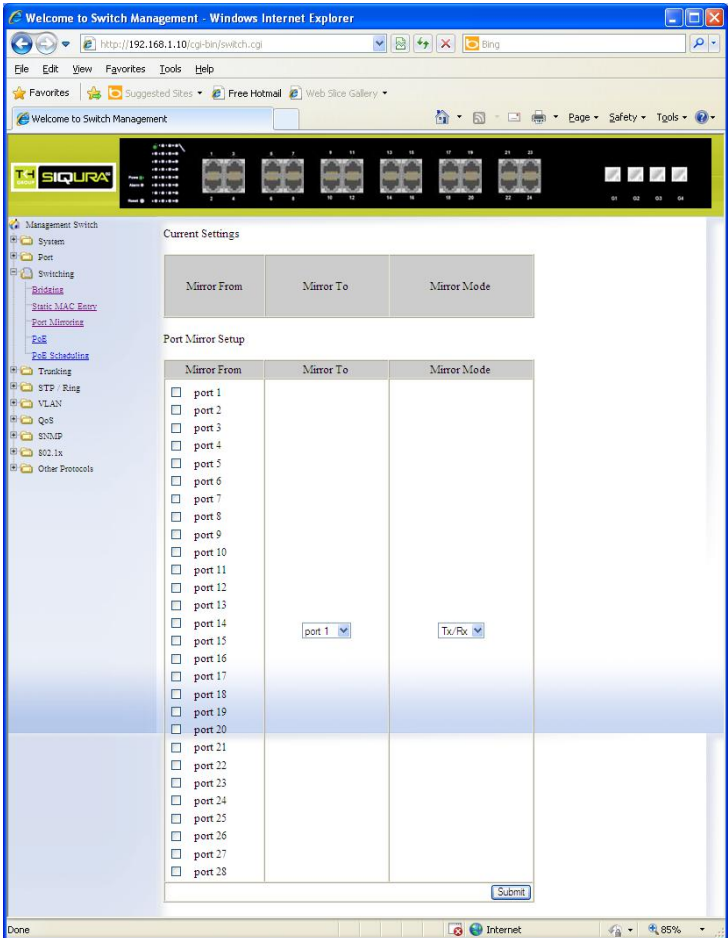

### Port Mirroring

1. Mirror From: Choose Mirror From port from Port 1 ~ Port 28.
2. Mirror To: Click "Mirror To" drop-down menu to choose Mirror To port (Port 1 ~ Port 28) from "Mirror To" drop-down list.
3. Mirror Mode: Click "Mirror Mode" drop-down menu to choose "Tx/Rx", "Tx", or "Rx" from "Mirror Mode" drop-down list.
4. Submit: Click "Submit" button when you finished Port Mirroring settings.

**PoE System Setting**  
 Main Supply Voltage: 52.00 (V)  
 System Temperature: 36.55 (C)  
 Power Allocation: 0.00 (W)  
 System Power Budget: 473.00 (W)  
 The value of 'System Power Budget' should greater than the sum of all port's 'Fixed Power Limit'

**PoE Port Setting**

Port	Enable Mode	Fixed Power Limit (W)	Power Priority	Power Down Alarm	Status	PD Class	Current (mA)	Consumption (W)
1	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
2	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
3	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
4	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
5	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
6	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
7	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
8	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0

Port 1-8 total power budget limit range should be 120 W

**PoE Port Setting**

Port	Enable Mode	Fixed Power Limit (W)	Power Priority	Power Down Alarm	Status	PD Class	Current (mA)	Consumption (W)
9	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
10	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
11	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
12	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
13	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
14	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
15	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
16	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0

Port 9-16 total power budget limit range should be 120 W

**PoE Port Setting**

Port	Enable Mode	Fixed Power Limit (W)	Power Priority	Power Down Alarm	Status	PD Class	Current (mA)	Consumption (W)
17	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
18	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
19	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
20	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
21	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
22	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
23	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0
24	Enable	15.30	High	<input type="checkbox"/>	Searching	N/A	0	0

Port 17-24 total power budget limit range should be 120 W

## PoE


### PoE System Setting:

1. System Power Budget: Click in "System Power Budget" text box and type a new system power budget for Switch.
2. Submit: Click "Submit" button when you finished PoE System Setting.

### PoE Port Setting:

#### User's Manual

1. Enable Mode: Click “Enable Mode” drop-down menu to choose “Disable” or “Enable” from “Enable Mode” drop-down list to disable or enable this port to discover Powered Device (PD) connected to this port.
2. Fixed Power Limit (W): First uncheck “Power Limit by Classification” to disable this port to provide power to PD according to classification of maximum power range used by PD. Then click in “Fixed Power Limit (W)” text box and type a new fixed power limit for this port to provide power to PD.
3. Power Priority: Click “Power Priority” drop-down menu to choose “High”, “Medium”, or “Low” from the “Power Priority” drop-down list to determine power priority of this port.
4. Power Down Alarm: Check or uncheck “Power Down Alarm” to enable or disable power down alarm on this port.
5. Submit: Click “Submit” button when you finished PoE Port Setting.

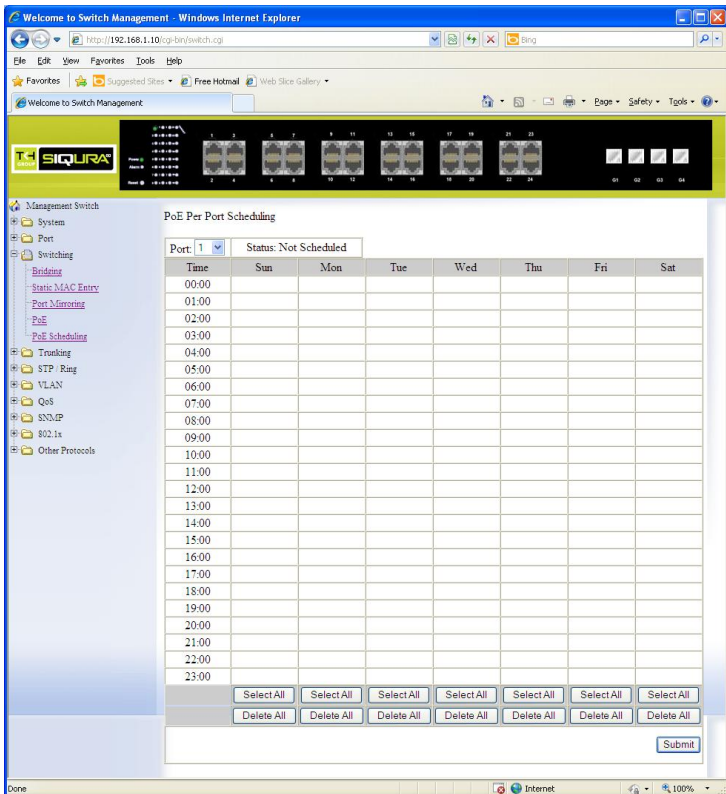

Management Switch

- System
- Port
- Switching
  - Bridging
  - Static MAC Entry
  - Port Mirroring
  - PoE
  - PoE Scheduling
- Trunking
- STP / Ring
- VLAN
- QoS
- SNMP
- 802.1x
- Other Protocols

PoE Per Port Scheduling

Port: 1 Status: Not Scheduled

Time	Sun	Mon	Tue	Wed	Thu	Fri	Sat
00:00							
01:00							
02:00							
03:00							
04:00							
05:00							
06:00							
07:00							
08:00							
09:00							
10:00							
11:00							
12:00							
13:00							
14:00							
15:00							
16:00							
17:00							
18:00							
19:00							
20:00							
21:00							
22:00							
23:00							




**PoE Scheduling**

First click on “Switching” from main menu. Then click on “PoE” from “Switching”. In PoE Port Setting, click “Enable Mode” drop-down menu to choose “Scheduling” from “Enable Mode” drop-down list to schedule this port to discover Powered Device (PD) connected to this port.

**PoE Per Port Setting:**

1. Port: Click “Port” drop-down menu to choose a port from “Port” drop-down list and configure PoE scheduling to this port.
2. Submit: Click “Submit” button when you finished PoE Scheduling for this port.

# Trunking

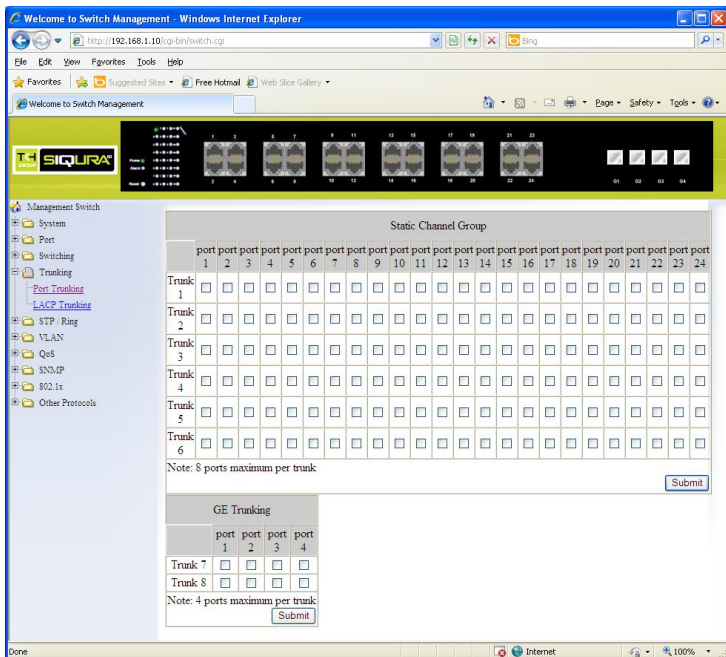

## Port Trunking

### Static Channel Group:

1. Trunk 1 ~ 6: Click Port 1 ~ Port 24 to assign ports to Trunk 1 ~ 6. (Maximum 8 ports per Trunk.)
2. Submit: Click "Submit" button when you finished Static Channel Group settings.

### GE Trunking:

1. Trunk 7 ~ 8: Click Port 1 ~ Port 4 to assign ports to Trunk 7 ~ 8. (Maximum 4 ports per Trunk.)
2. Submit: Click "Submit" button when you finished GE Trunking settings.

Welcome to Switch Management - Windows Internet Explorer

http://192.168.1.10/cgi-bin/switch.cgi

Management Branch

- System
- Port
- Switching
- Trunking
- Fast Ethernet
- LACP Trunking
- STP Ring
- VLAN
- QoS
- SNMP
- IGMP
- Other Protocols

Port Status :

Port	Trunk Type	Admin Key	LACP Mode	LACP Port Priority	LACP Timeout	LACP Sync	LACP Sync Port
1	None	None	None	None	None	None	None
2	None	None	None	None	None	None	None
3	None	None	None	None	None	None	None
4	None	None	None	None	None	None	None
5	None	None	None	None	None	None	None
6	None	None	None	None	None	None	None
7	None	None	None	None	None	None	None
8	None	None	None	None	None	None	None
9	None	None	None	None	None	None	None
10	None	None	None	None	None	None	None
11	None	None	None	None	None	None	None
12	None	None	None	None	None	None	None
13	None	None	None	None	None	None	None
14	None	None	None	None	None	None	None
15	None	None	None	None	None	None	None
16	None	None	None	None	None	None	None
17	None	None	None	None	None	None	None
18	None	None	None	None	None	None	None
19	None	None	None	None	None	None	None
20	None	None	None	None	None	None	None
21	None	None	None	None	None	None	None
22	None	None	None	None	None	None	None
23	None	None	None	None	None	None	None
24	None	None	None	None	None	None	None
25	None	None	None	None	None	None	None
26	None	None	None	None	None	None	None
27	None	None	None	None	None	None	None
28	None	None	None	None	None	None	None

Trunk Configuration :

Port	Trunk Type	Admin Key (FE ports:1-6) (GE ports:7-8)	LACP Mode	LACP Port Priority (Set 0 for None)	LACP Timeout
1	None		Active		Long

Notes: 4 ports maximum per trunk

LACP System Priority  
(1-65535, default:32768)

32768

Submit

Update Setting


## LACP Trunking

### Trunk Configuration:

1. Port: Click "Port" drop-down menu to choose port from "Port" drop-down list.
2. Trunk Type: Click "Trunk Type" drop-down menu to choose "None", "Static", or "LACP" from "Trunk Type" drop-down list to disable or enable Static or LACP Trunk.
3. Admin Key: Click in "Admin Key" text box and type a decimal number 1-6 for FE ports. Type a decimal number 7-8 for GE ports.
4. LACP Mode: Click "LACP Mode" drop-down menu to choose "Active" or "Passive" from "LACP Mode" drop-down list to enable Active or Passive LACP Mode.
5. LACP Port Priority (Set 0 for None): Click in "LACP Port Priority" text box and type 1-65535 for port. Default value is 32768.

6. LACP Timeout: Click “LACP Timeout” drop-down menu to choose “Long” or “Short” from “LACP Timeout” drop-down list to enable Long or Short LACP Timeout. Long timeout value is 90 seconds. Short timeout value is 3 seconds.
7. Update Setting: Click “Update Setting” button when you finished Trunk Configuration.
8. LACP System Priority (1-65535, default 32768): Click in “LACP System Priority” text box and type 1-65535. Default value is 32768.
9. Submit: Click “Submit” button when you finished LACP System Priority settings.

## STP / Ring

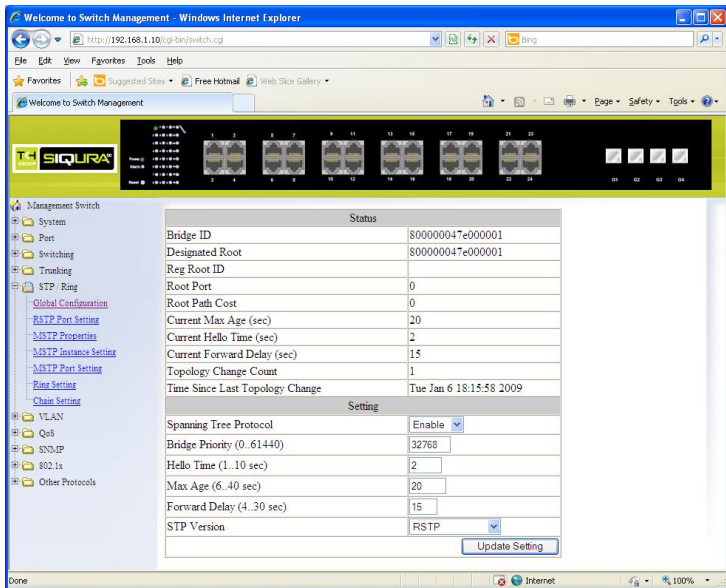

The screenshot shows the SIQURA web management interface. The browser address bar shows `http://192.168.1.10/cg-bin/switch.cgi`. The left navigation pane shows the following structure:

- Management Switch
  - System
  - Port
  - Switching
  - Trunking
  - STP Ring
    - Global Configuration
    - RSTP Port Setting
    - MSTP Properties
    - MSTP Instance Setting
    - MSTP Port Setting
    - Ring Setting
    - Chain Setting
  - VLAN
  - QoS
  - SNMP
  - 802.1x
  - Other Protocols

The main content area displays the following configuration details:

Status	
Bridge ID	800000047e000001
Designated Root	800000047e000001
Reg Root ID	
Root Port	0
Root Path Cost	0
Current Max Age (sec)	20
Current Hello Time (sec)	2
Current Forward Delay (sec)	15
Topology Change Count	1
Time Since Last Topology Change	Tue Jan 6 18:15:58 2009


  

Setting	
Spanning Tree Protocol	Enable
Bridge Priority (0..61440)	32768
Hello Time (1..10 sec)	2
Max Age (6..40 sec)	20
Forward Delay (4..30 sec)	15
STP Version	RSTP

An "Update Setting" button is located at the bottom right of the configuration table.

### Global Configuration

- Spanning Tree Protocol: Click "Spanning Tree Protocol" drop-down menu to choose "Enable" or "Disable" from "Spanning Tree Protocol" drop-down list to enable or disable Spanning Tree Protocol.
- Bridge Priority (0..61440): Click in "Bridge Priority" text box and type a decimal number between 0 and 61440.
- Hello Time (sec) (1..9): Click in "Hello Time" text box and type a decimal number between 1 and 9.
- Max Age (sec) (6..28): Click in "Max Age" text box and type a decimal number between 6 and 28.
- Forward Delay (sec) (4..30): Click in "Forward Delay" text box and type a decimal number between 4 and 30.
- STP Version: Click "STP Version" drop-down menu to choose "MSTP", "RSTP" or "STP compatible" from "STP Version" drop-down list.
- Update Setting: Click "Update Setting" button when you finished Global Configuration.

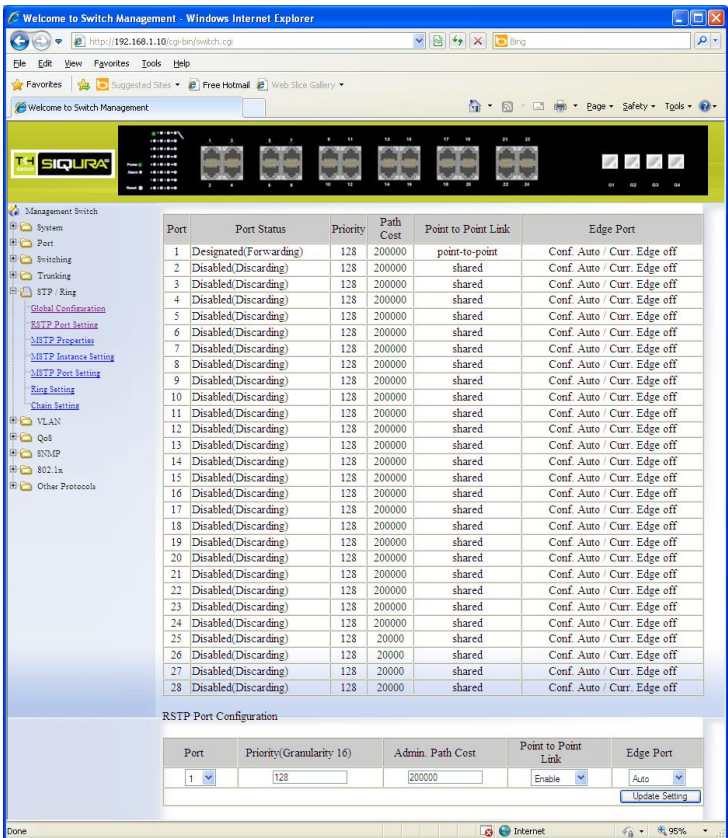

The screenshot shows the 'Welcome to Switch Management' web interface. The main content area displays a table of RSTP Port Configuration for ports 1 through 28. Below the table is a configuration form for a specific port.

Port	Port Status	Priority	Path Cost	Point to Point Link	Edge Port
1	Designated(Forwarding)	128	200000	point-to-point	Conf. Auto / Curr. Edge off
2	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
3	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
4	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
5	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
6	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
7	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
8	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
9	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
10	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
11	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
12	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
13	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
14	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
15	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
16	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
17	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
18	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
19	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
20	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
21	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
22	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
23	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
24	Disabled(Discarding)	128	200000	shared	Conf. Auto / Curr. Edge off
25	Disabled(Discarding)	128	20000	shared	Conf. Auto / Curr. Edge off
26	Disabled(Discarding)	128	20000	shared	Conf. Auto / Curr. Edge off
27	Disabled(Discarding)	128	20000	shared	Conf. Auto / Curr. Edge off
28	Disabled(Discarding)	128	20000	shared	Conf. Auto / Curr. Edge off


  


Port	Priority(Granularity 16)	Admin. Path Cost	Point to Point Link	Edge Port
1	128	200000	Enable	Auto

## RSTP Port Setting

1. STP Version: Click "STP Version" drop-down menu to choose "RSTP" from "STP Version" drop-down list.
2. Port: Click "Port" drop-down menu to choose ports from "Port" drop-down list.
3. Priority(Granularity 16): Click in "Priority" text box and enter a value between 0 and 240 to set the priority for the port. A higher priority will designate the port to forward packets first. A lower number denotes a higher priority. This entry must be divisible by 16. The default priority setting is 128.
4. Admin. Path Cost: Click in "Admin. Path Cost" text box and enter a value between 0 and 200000 to set the Admin. Path Cost for the port. 0 (auto)

- Setting 0 for the Admin. Path Cost will automatically set the speed for forwarding packets to the port for optimal efficiency. Default port cost: 100Mbps port = 200000. Gigabit port = 20000.
- 5. Point to Point Link: Click “Point to Point Link” drop-down menu to choose “Enable” or “Disable” from “Point to Point Link” drop-down list to enable or disable Point to Point Link for the port.
- 6. Edge Port: Click “Edge Port” drop-down menu to choose “Enable”, “Disable”, or “Auto” from “Edge Port” drop-down list to set Enable, Disable, or Auto Edge Port for the port.
- 7. Update Setting: Click “Update Setting” button when you finished RSTP Port Setting.


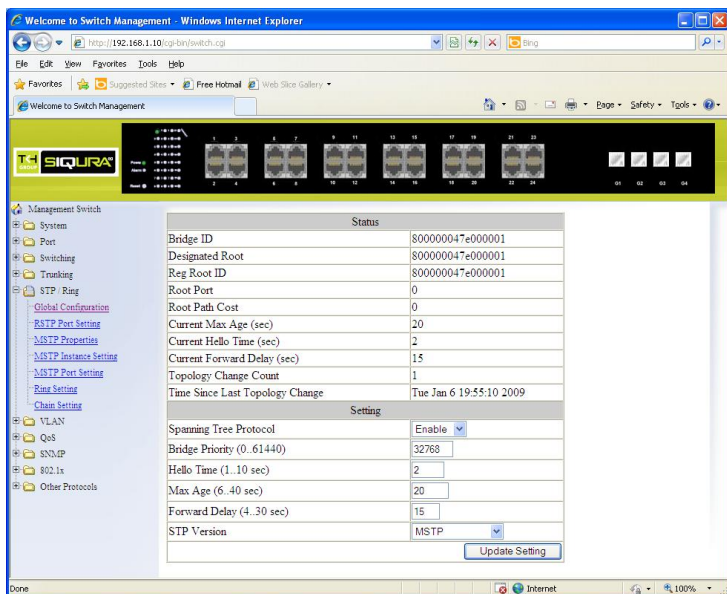


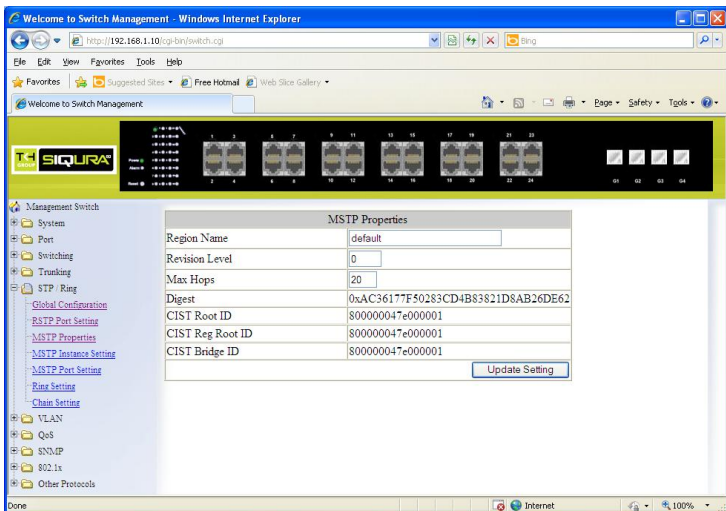

## MSTP Properties

1. STP Version: Click "STP Version" drop-down menu to choose "MSTP" from "STP Version" drop-down list.
2. Region Name: Click in "Region Name" text box to create an MST region and specify a name to it. MST bridges of a region form different spanning trees for different VLANs. By default, each MST bridge starts with the region name as its bridge address. This means each MST bridge is a region by itself, unless specifically added to one.
3. Revision Level: Click in "Revision Level" text box to specify the number for configuration information. The default value of revision number is 0.
4. Max Hops: Click in "Max Hops" text box to specify the maximum allowed hops for BPDU in an MST region. This parameter is used by all the instances of the MST. Specifying the max hops for a BPDU prevents the messages from looping indefinitely in the network. When a bridge receives a MST BPDU that has exceeded the allowed max-hops, it discards the BPDU.
5. Update Setting: Click "Update Setting" button when you finished MSTP Properties setting.



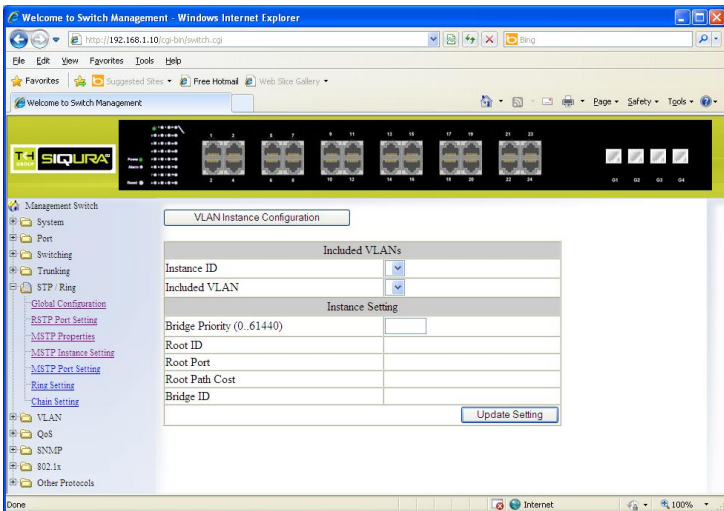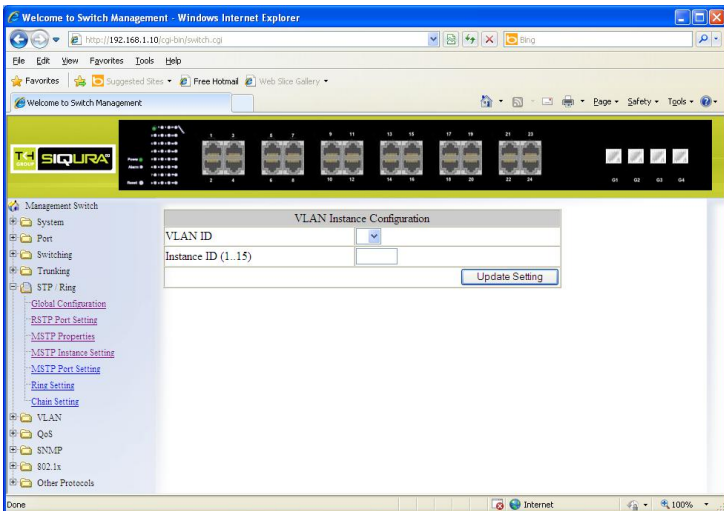

## **MSTP Instance Setting**

### VLAN Instance Configuration

1. VLAN Instance Configuration: Click “VLAN Instance Configuration” button. The “VLAN Instance Configuration” window appears.
2. VLAN ID: Click “VLAN ID” drop-down menu to choose VLAN from

“VLAN ID” drop-down list to simultaneously add multiple VLANs for the corresponding instance of a bridge.


3. Instance ID (1..15): Click in “Instance ID” text box to specify the instance ID.
4. Update Setting: Click “Update Setting” button when you finished VLAN Instance Configuration.


#### Included VLANs

1. Instance ID: Click “Instance ID” drop-down menu to choose instance ID from “Instance ID” drop-down list.
2. Included VLAN: Click “Included VLAN” drop-down menu to choose VLAN from “Included VLAN” drop-down list.

#### Instance Setting

1. Bridge Priority (0..61440): Click in “Bridge Priority” text box to set the bridge priority for an MST instance to the value specified. The lower the priority of the bridge, the better the chances are the bridge becoming a root bridge or a designated bridge for the LAN.
2. Update Setting: Click “Update Setting” button when you finished VLAN Instance Configuration.

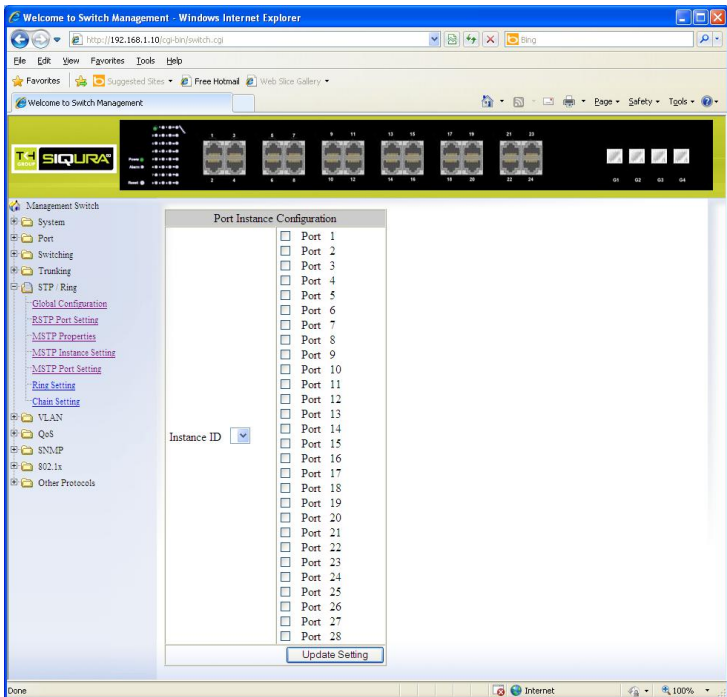

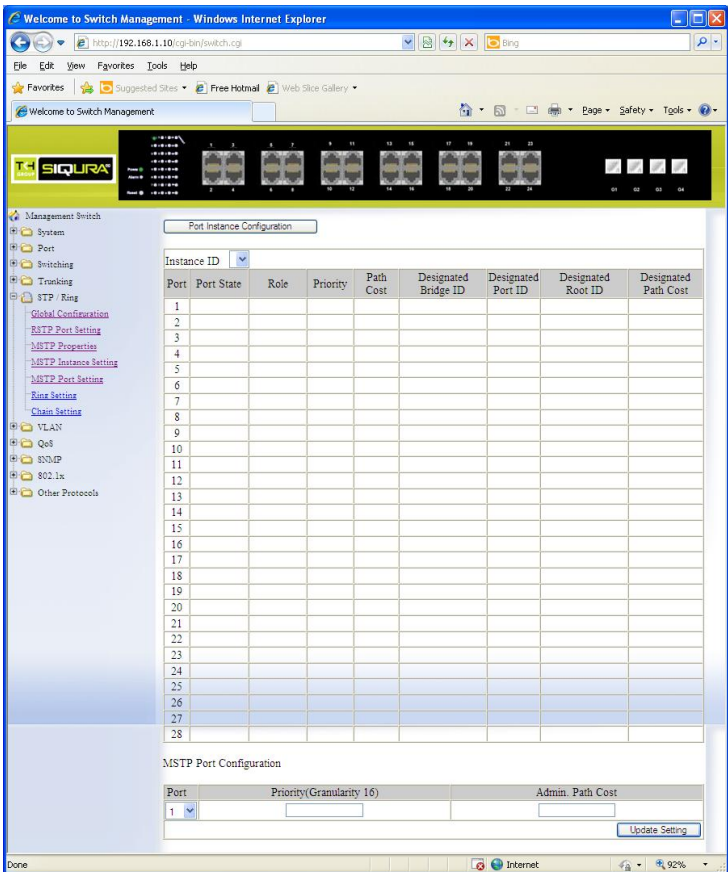

Port Instance Configuration

Instance ID	Port	Port State	Role	Priority	Path Cost	Designated Bridge ID	Designated Port ID	Designated Root ID	Designated Path Cost
1									
2									
3									
4									
5									
6									
7									
8									
9									
10									
11									
12									
13									
14									
15									
16									
17									
18									
19									
20									
21									
22									
23									
24									
25									
26									
27									
28									

MSTP Port Configuration

Port	Priority(Granularity 16)	Admin. Path Cost
1	<input type="text"/>	<input type="text"/>

## MSTP Port Setting

### Port Instance Configuration


1. Instance ID: Click "Instance ID" drop-down menu to choose instance ID from "Instance ID" drop-down list.
2. Click ports to assign ports to the corresponding instance ID.
3. Update Setting: Click "Update Setting" button when you finished Port Instance Configuration.

### Instance ID

1. Instance ID: Click "Instance ID" drop-down menu to choose instance ID from "Instance ID" drop-down list.

## MSTP Port Configuration

1. Port: Click “Port” drop-down menu to choose port from “Port” drop-down list.
2. Priority(Granularity 16): Click in “Priority” text box to set the port priority for a bridge group. The Multiple Spanning Tree Protocol uses port priority as a tiebreaker to determine which port should forward frames for a particular instance on a LAN, or which port should be the root port for an instance. A lower value implies a better priority. In the case of the same priority, the interface index will serve as the tiebreaker, with the lower-numbered interface being preferred over others. The permitted range is 0-240. The priority values can only be set in increments of 16.
3. Admin. Path Cost: Click in “Admin. Path Cost” text box to set the cost of a path associated with an interface.
4. Update Setting: Click “Update Setting” button when you finished MSTP Port Setting.

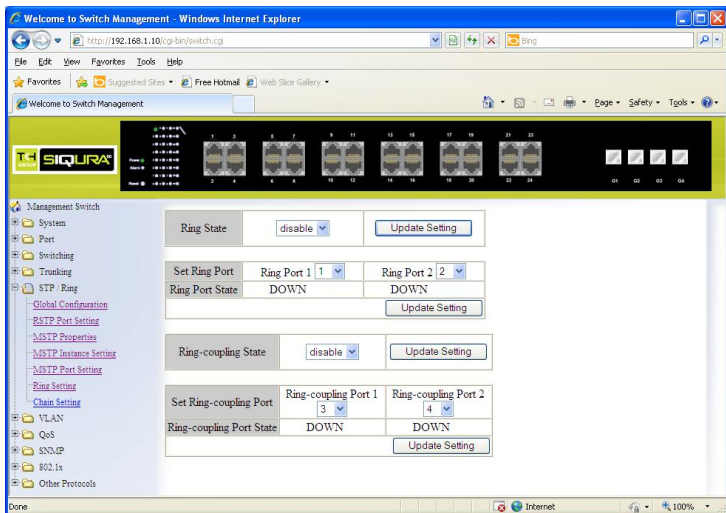

## Ring Setting

### Ring State

1. Click “Ring State” drop-down menu from “Ring State” drop-down list to choose “Enable” or “Disable” to enable or disable Ring State.
2. Update Setting: Click “Update Setting” button when you finished Ring State setting.

### Set Ring Port

1. Ring Port 1: Click “Ring Port 1” drop-down menu to choose Ring Port 1 from “Ring Port 1” drop-down list.
2. Ring Port 2: Click “Ring Port 2” drop-down menu to choose Ring Port 2

from “Ring Port 2” drop-down list.


3. Update Setting: Click “Update Setting” button when you finished Set Ring Port.

#### Ring-coupling State

1. Click “Ring-coupling State” drop-down menu from “Ring-coupling State” drop-down list to choose “Enable” or “Disable” to enable or disable Ring-coupling State.
2. Update Setting: Click “Update Setting” button when you finished Ring-coupling State setting.

#### Set Ring-coupling Port

1. Ring-coupling Port 1: Click “Ring-coupling Port 1” drop-down menu to choose Ring-coupling Port 1 from “Ring-coupling Port 1” drop-down list.
2. Ring-coupling Port 2: Click “Ring-coupling Port 2” drop-down menu to choose Ring-coupling Port 2 from “Ring-coupling Port 2” drop-down list.
3. Update Setting: Click “Update Setting” button when you finished Set Ring-coupling Port.

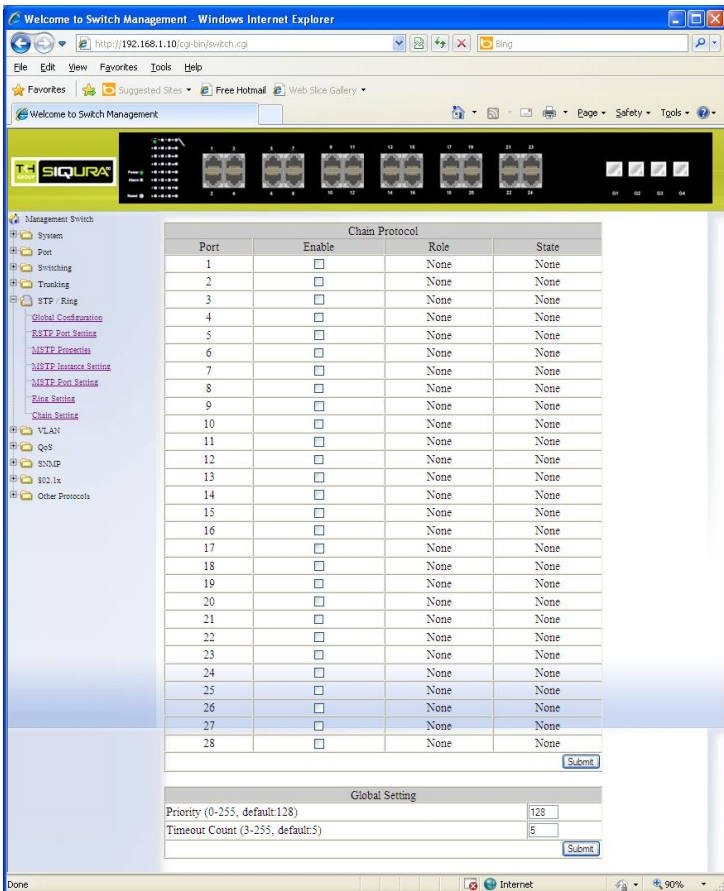

Management Switch

- System
- Port
- Switching
- Trunking
- STP / Ring
  - Global Configuration
    - RSTP Port Settings
    - MSTP Properties
    - MSTP Instance Settings
    - MSTP Port Settings
    - Rune Settings
    - Chain Settings
- VLAN
- QoS
- SNMP
- 802.1x
- Other Protocols

Chain Protocol			
Port	Enable	Role	State
1	<input type="checkbox"/>	None	None
2	<input type="checkbox"/>	None	None
3	<input type="checkbox"/>	None	None
4	<input type="checkbox"/>	None	None
5	<input type="checkbox"/>	None	None
6	<input type="checkbox"/>	None	None
7	<input type="checkbox"/>	None	None
8	<input type="checkbox"/>	None	None
9	<input type="checkbox"/>	None	None
10	<input type="checkbox"/>	None	None
11	<input type="checkbox"/>	None	None
12	<input type="checkbox"/>	None	None
13	<input type="checkbox"/>	None	None
14	<input type="checkbox"/>	None	None
15	<input type="checkbox"/>	None	None
16	<input type="checkbox"/>	None	None
17	<input type="checkbox"/>	None	None
18	<input type="checkbox"/>	None	None
19	<input type="checkbox"/>	None	None
20	<input type="checkbox"/>	None	None
21	<input type="checkbox"/>	None	None
22	<input type="checkbox"/>	None	None
23	<input type="checkbox"/>	None	None
24	<input type="checkbox"/>	None	None
25	<input type="checkbox"/>	None	None
26	<input type="checkbox"/>	None	None
27	<input type="checkbox"/>	None	None
28	<input type="checkbox"/>	None	None

Global Setting

Priority (0-255, default:128)

Timeout Count (3-255, default:5)

## Chain Setting

Chain Protocol:

1. Click "Enable" to enable Chain Protocol for Port 1 ~ Port 28.
2. Submit: Click "Submit" button when you finished Chain Protocol setting.


Global Setting:

1. Priority (1-255, default:128): Set the Switch priority for running chain protocol. Switch with lower priority will run as Master (forwarding) port.
2. Timeout Count (3-255, default:5): Set the Switch timeout count for running chain protocol. That this timeout count multiplies 200ms is the chain recovery time.

3. Submit: Click “Submit” button when you finished Chain Protocol setting.





# VLAN

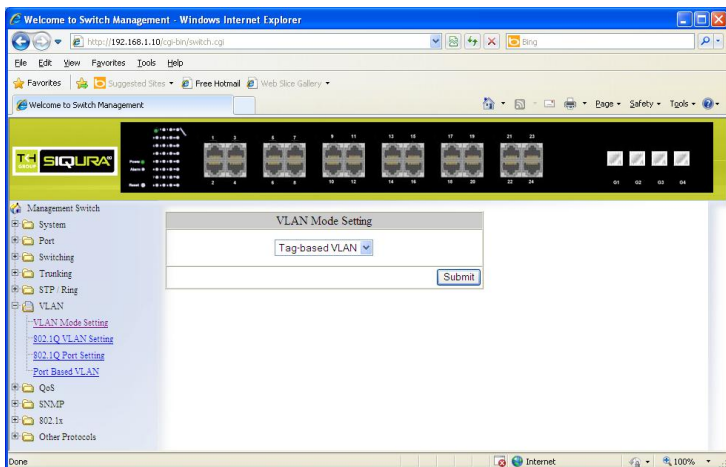

## VLAN Mode Setting

1. VLAN Mode Setting: Click "VLAN Mode Setting" drop-down menu to choose "Tag-based VLAN" or "Port-based VLAN" from "VLAN Mode Setting" drop-down list.
2. Update Setting: Click "Update Setting" button when you finished VLAN Mode Setting.

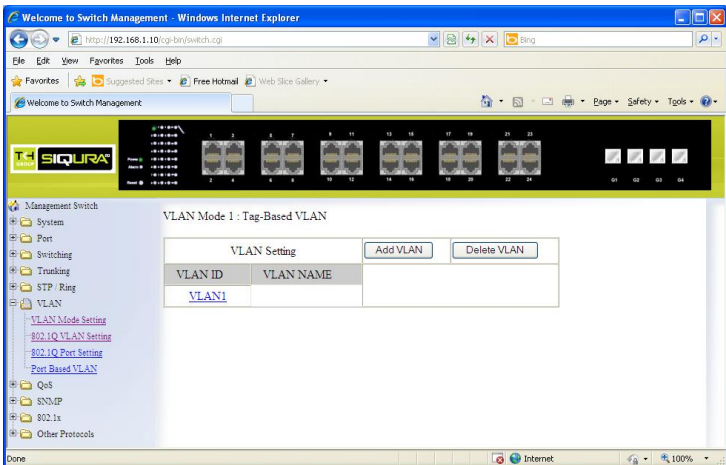

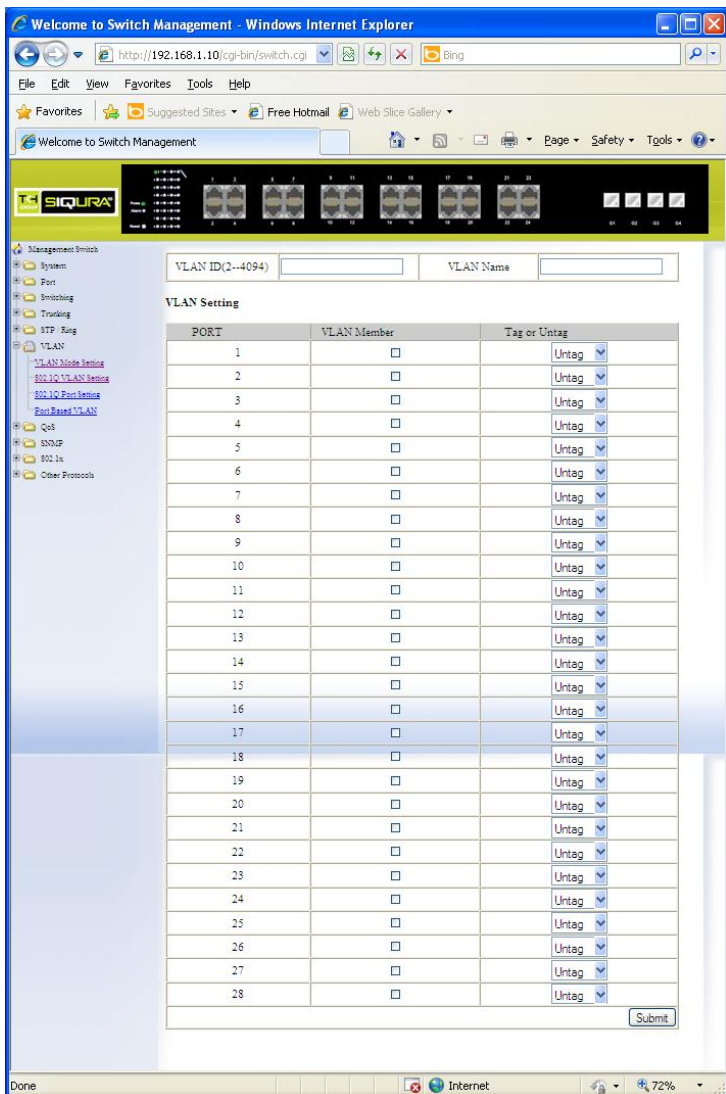

VLAN ID(2--4094)  VLAN Name

**VLAN Setting**

PORT	VLAN Member	Tag or Untag
1	<input type="checkbox"/>	Untag
2	<input type="checkbox"/>	Untag
3	<input type="checkbox"/>	Untag
4	<input type="checkbox"/>	Untag
5	<input type="checkbox"/>	Untag
6	<input type="checkbox"/>	Untag
7	<input type="checkbox"/>	Untag
8	<input type="checkbox"/>	Untag
9	<input type="checkbox"/>	Untag
10	<input type="checkbox"/>	Untag
11	<input type="checkbox"/>	Untag
12	<input type="checkbox"/>	Untag
13	<input type="checkbox"/>	Untag
14	<input type="checkbox"/>	Untag
15	<input type="checkbox"/>	Untag
16	<input type="checkbox"/>	Untag
17	<input type="checkbox"/>	Untag
18	<input type="checkbox"/>	Untag
19	<input type="checkbox"/>	Untag
20	<input type="checkbox"/>	Untag
21	<input type="checkbox"/>	Untag
22	<input type="checkbox"/>	Untag
23	<input type="checkbox"/>	Untag
24	<input type="checkbox"/>	Untag
25	<input type="checkbox"/>	Untag
26	<input type="checkbox"/>	Untag
27	<input type="checkbox"/>	Untag
28	<input type="checkbox"/>	Untag

### 802.1Q VLAN Setting

Add VLAN:


1. 802.1Q VLAN Setting: Click "802.1Q VLAN Setting". The "VLAN Setting"

window appears.

2. Add VLAN: Click “Add VLAN” button to create a new VLAN from “VLAN Setting” window.
3. VLAN ID(2-4094): Click in the “VLAN ID” textbox and specify a new VLAN ID number from 2 ~ 4094.
4. VLAN Name: Click in the “VLAN Name” textbox and type a name for this newly created VLAN.


Add port to or delete port from VLAN:

1. VLAN Member: Choose the port to be added to or deleted from the VLAN.
2. Tag or Untag: Click “Tag or Untag” drop-down menu to choose “Tag” or “Untag” from “Tag or Untag” drop-down list for a “Hybrid” port.
3. Submit: Click “Submit” button when you finished VLAN Setting.

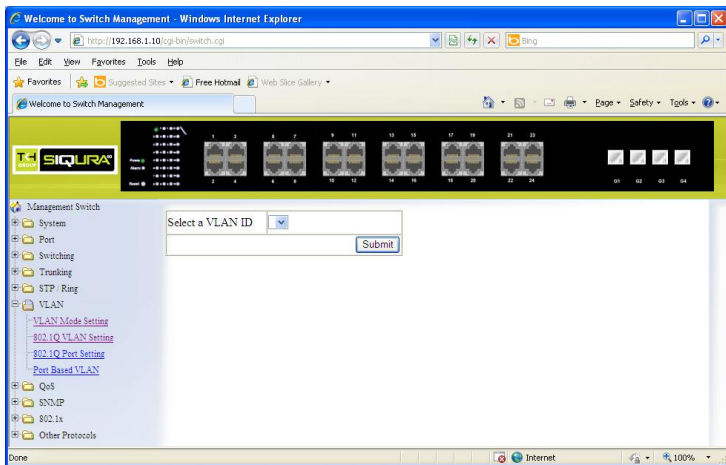

Delete VLAN:

1. 802.1Q VLAN Setting: Click “802.1Q VLAN Setting”. The “VLAN Setting” window appears.
2. Delete VLAN: Click “Delete VLAN” button.
3. Select a VLAN ID: Click “Select a VLAN ID” drop-down menu from “Select a VLAN ID” drop-down list to choose the VLAN to be deleted.
4. Submit: Click “Submit” button when you finished VLAN Setting.

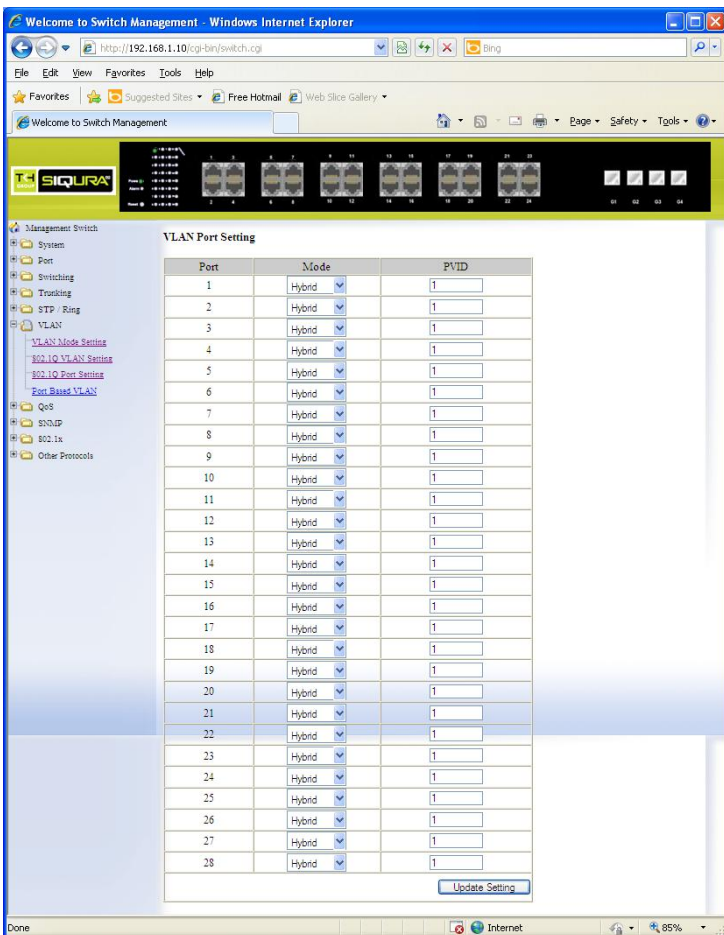

**VLAN Port Setting**


Port	Mode	PVID
1	Hybrid	1
2	Hybrid	1
3	Hybrid	1
4	Hybrid	1
5	Hybrid	1
6	Hybrid	1
7	Hybrid	1
8	Hybrid	1
9	Hybrid	1
10	Hybrid	1
11	Hybrid	1
12	Hybrid	1
13	Hybrid	1
14	Hybrid	1
15	Hybrid	1
16	Hybrid	1
17	Hybrid	1
18	Hybrid	1
19	Hybrid	1
20	Hybrid	1
21	Hybrid	1
22	Hybrid	1
23	Hybrid	1
24	Hybrid	1
25	Hybrid	1
26	Hybrid	1
27	Hybrid	1
28	Hybrid	1


Update Setting

### 802.1Q Port Setting

1. 802.1Q Port Setting: Click “802.1Q Port Setting”. The “VLAN Port Setting” window appears.
2. Mode: Click “Mode” drop-down menu to choose “Access”, “Trunk”, or “Hybrid” from “Mode” drop-down list for the port. The port will be Tag port if you choose “Trunk” Mode for the port. And the port will be Tag or Untag port if you choose “Hybrid” Mode for the port.
3. PVID: Click in the “PVID” textbox and specify a new PVID number for the port.

4. Update Setting: Click “Update Setting” button when you finished VLAN Port Setting.

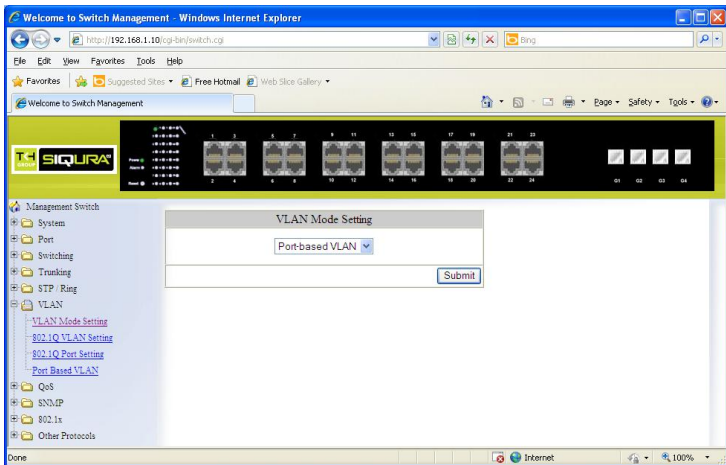


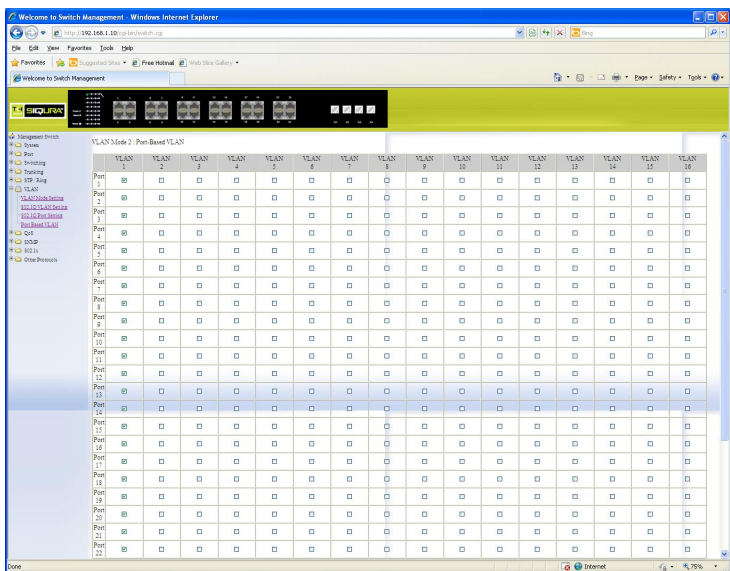

### Port Based VLAN

1. VLAN: Choose the port to be added to or deleted from the VLAN.
2. Select all: Click “select all” button to choose all ports to be added to the VLAN.
3. Delete all: Click “delete all” button to choose all ports to be deleted from the VLAN.
4. Submit: Click “Submit” button when you finished Port Based VLAN setting.


# QoS

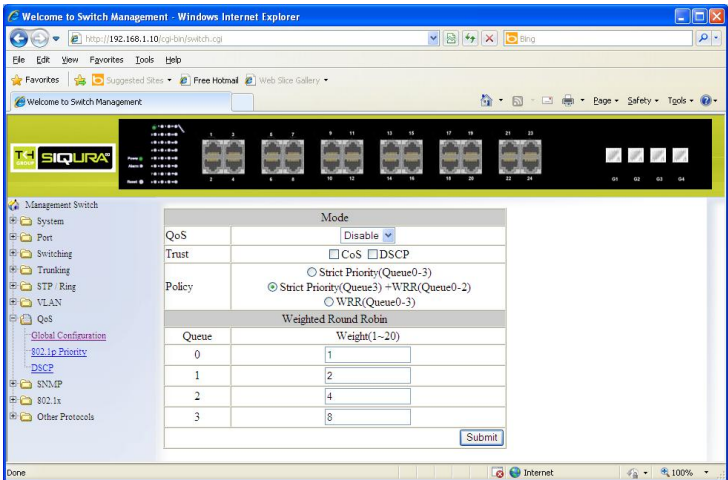

## Global Configuration


1. QoS: Click “QoS” drop-down menu from “QoS” drop-down list to choose “Enable” or “Disable” to enable or disable QoS.
2. Trust: Enable or disable the switch port to trust the CoS (Class of Service) labels of all traffic received on that port. Enable or disable a routed port to trust the DSCP (Differentiated Service Code Point) labels of all traffic received on that port.
3. Policy: Choose “Strict Priority(Queue0-3)”, “Strict Priority(Queue3) + WRR(Queue0-2)”, or “WRR(Queue0-3)”. A strict priority queue is always emptied first. The queues that are used in the WRR (Weighted Round Robin) are emptied in a round-robin fashion, and you can configure the weight for each queue.
4. Weighted Round Robin: Click in the “Weight(1~20)” textbox and specify a new number from 1 ~ 20 for Queue 0 ~ 3.
5. Submit: Click “Submit” button when you finished Global Configuration.



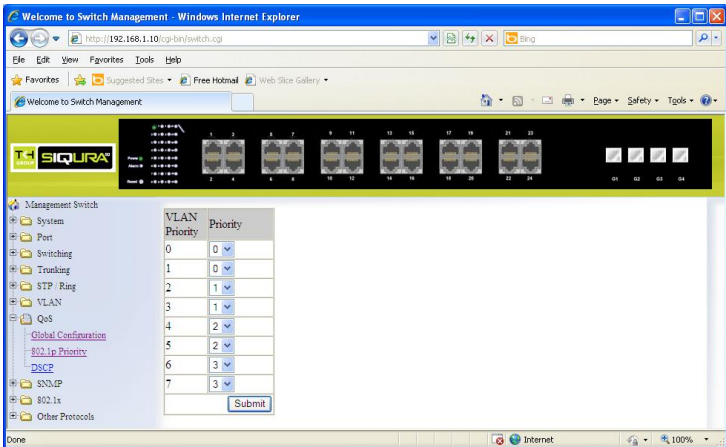

### 802.1p Priority

1. Priority: Click "Priority" drop-down menu from "Priority" drop-down list to choose 0 ~ 3 for VLAN Priority 0 ~ 7.
2. Submit: Click "Submit" button when you finished 802.1p Priority.

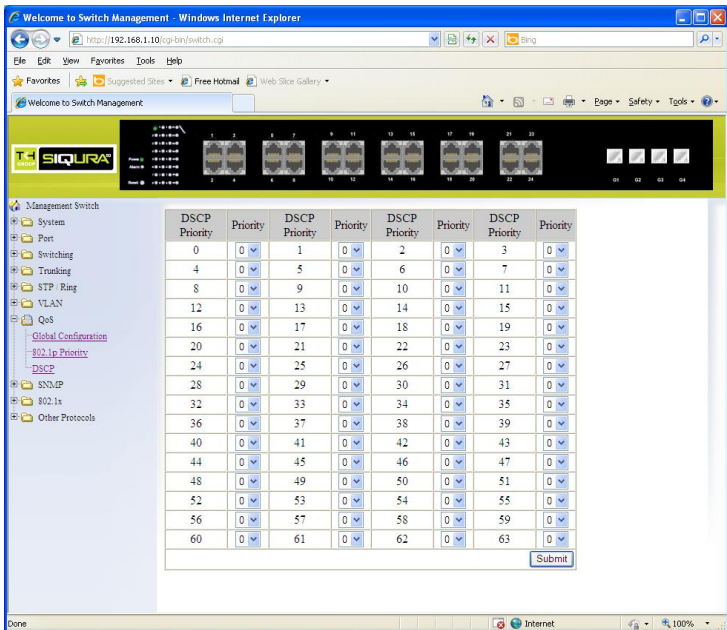

Management Switch

- System
- Port
- Switching
- Trunking
- STP / Ring
- VLAN
- QoS
  - Global Configuration
  - DSCP**
- SNMP
- 802.1x
- Other Protocols


DSCP Priority	Priority	DSCP Priority	Priority	DSCP Priority	Priority	DSCP Priority	Priority
0	0	1	0	2	0	3	0
4	0	5	0	6	0	7	0
8	0	9	0	10	0	11	0
12	0	13	0	14	0	15	0
16	0	17	0	18	0	19	0
20	0	21	0	22	0	23	0
24	0	25	0	26	0	27	0
28	0	29	0	30	0	31	0
32	0	33	0	34	0	35	0
36	0	37	0	38	0	39	0
40	0	41	0	42	0	43	0
44	0	45	0	46	0	47	0
48	0	49	0	50	0	51	0
52	0	53	0	54	0	55	0
56	0	57	0	58	0	59	0
60	0	61	0	62	0	63	0

Submit

## DSCP

1. Priority: Click "Priority" drop-down menu from "Priority" drop-down list to choose 0 ~ 3 for DSCP Priority 0 ~ 3.
2. Submit: Click "Submit" button when you finished DSCP.

# SNMP

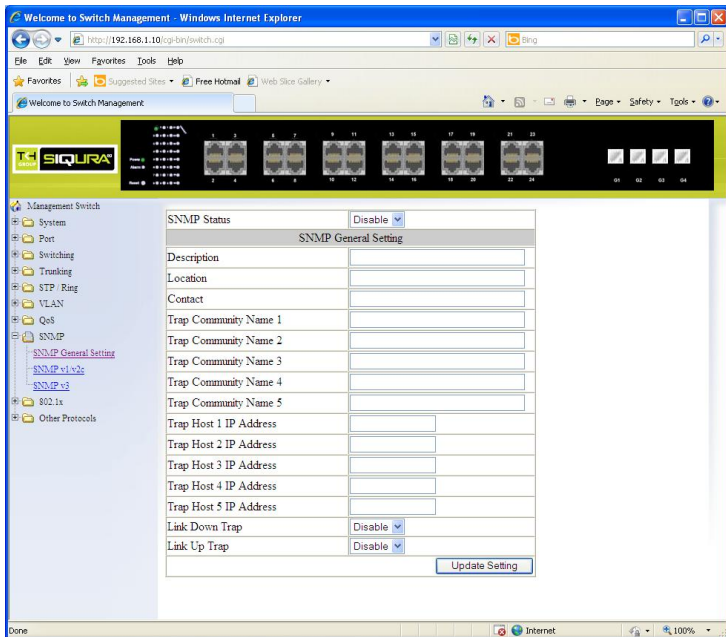


## SNMP General Setting

1. **SNMP Status:** Click "SNMP Status" drop-down menu from "SNMP Status" drop-down list to choose "Enable" or "Disable" to enable or disable SNMP.
2. **Description:** Click in the "Description" textbox and specify a new description for SNMP.
3. **Location:** Click in the "Location" textbox and specify a new location for SNMP.
4. **Contact:** Click in the "Contact" textbox and specify a new contact for SNMP.
5. **Trap Community Name:** For each "Trap Community Name", Click in the "Trap Community Name" textbox and specify a trap community name.
6. **Trap Host IP Address:** For each "Trap Host IP Address", Click in the "Trap Host IP Address" textbox and specify a trap host IP address.
7. **Link Down Trap:** Click "Link Down Trap" drop-down menu from "Link Down Trap" drop-down list to choose "Enable" or "Disable" to enable or



disable link down trap.

8. Link Up Trap: Click “Link Up Trap” drop-down menu from “Link Up Trap” drop-down list to choose “Enable” or “Disable” to enable or disable link up trap.
9. Update Setting: Click “Update Setting” button when you finished SNMP General Setting.

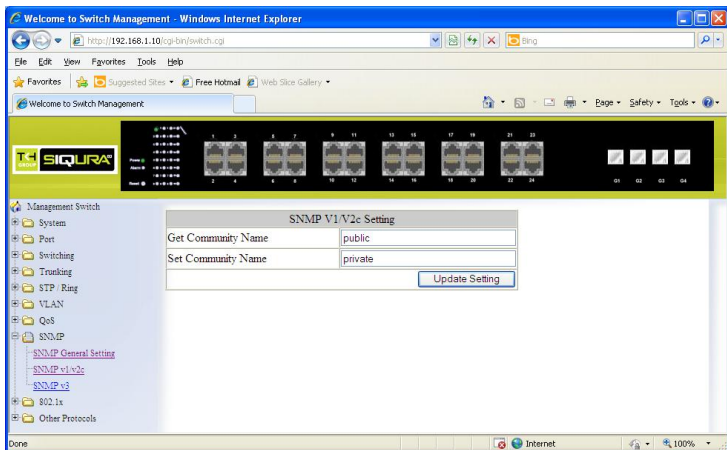

### **SNMP v1/v2c**

1. Get Community Name: Click in the “Get Community Name” textbox and specify a get community name.
2. Set Community Name: Click in the “Set Community Name” textbox and specify a set community name.
3. Update Setting: Click “Update Setting” button when you finished SNMP V1/V2c Setting.

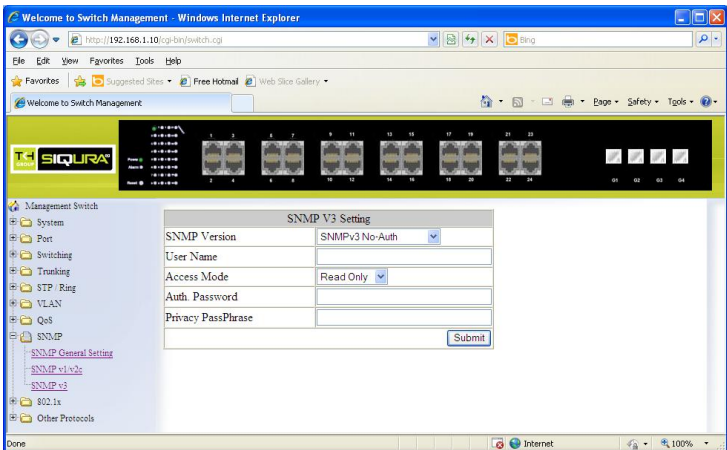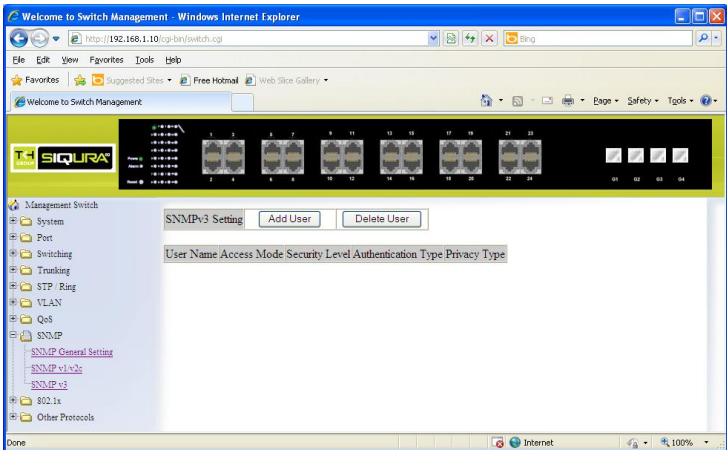


## SNMP v3

### Add User:

1. Add User: Click “Add User” button. The “SNMP V3 Setting” window appears.
2. SNMP Version: Click “SNMP Version” drop-down menu from “SNMP Version” drop-down list to choose “SNMPv3 No-Auth”, “SNMPv3 Auth-MD5”, “SNMPv3 Auth-SHA”, “SNMPv3 Priv Auth-MD5”, or “SNMPv3 Priv Auth-SHA”.
  - SNMPv3 No-Auth: Add a user using SNMP v3 without authentication.
  - SNMPv3 Auth-MD5: Add a user using SNMP v3 with authentication.

- Click in the “Auth. Password” textbox and specify an authentication password.
- **SNMPv3 Auth-SHA:** Add a user using SNMP v3 with authentication. Click in the “Auth. Password” textbox and specify an authentication password.
  - **SNMPv3 Priv Auth-MD5:** Add a user using SNMP v3 with authentication and privacy. Click in the “Auth. Password” textbox and specify an authentication password. Click in the “Privacy PassPhrase” textbox and specify a privacy pass phrase.
  - **SNMPv3 Priv Auth-SHA:** Add a user using SNMP v3 with authentication and privacy. Click in the “Auth. Password” textbox and specify an authentication password. Click in the “Privacy PassPhrase” textbox and specify a privacy pass phrase.
3. **User Name:** Click in the “User Name” textbox and specify a user name for user using SNMP v3.
  4. **Access Mode:** Click “Access Mode” drop-down menu from “Access Mode” drop-down list to choose “Read Only” or “Read/Write”.
    - **Read Only:** Add a user using SNMP v3 with read-only access mode.
    - **Read/Write:** Add an user using SNMP v3 with read-write access mode
  5. **Sumit:** Click “Sumit” button when you finished SNMP V3 Setting.

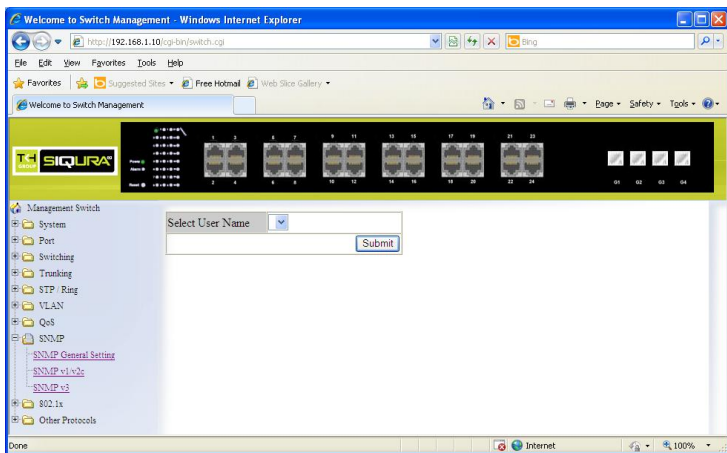


#### Delete User:

1. **Delete User:** Click “Delete User” button. The “Select User Name” window appears.
2. **Select User Name:** Click “Select User Name” drop-down menu from “Select User Name” drop-down list to choose the user to be deleted from using SNMP v3.
3. **Sumit:** Click “Sumit” button when you finished user deletion.




# 802.1x

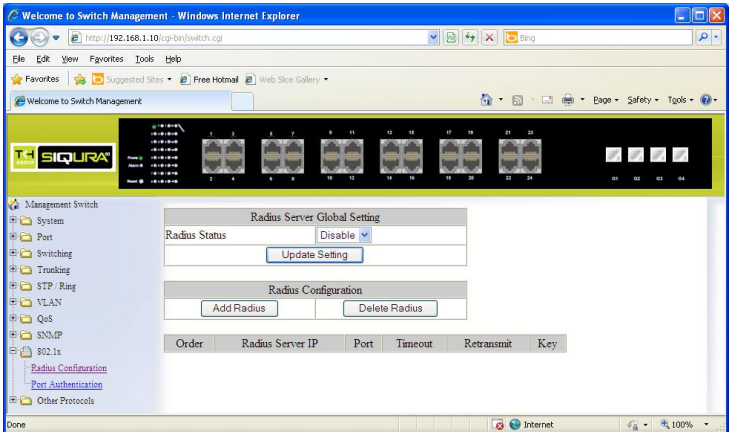

## Radius Configuration


1. Radius Status: Click "Radius Status" drop-down menu from "Radius Status" drop-down list to choose "Enable" or "Disable" to globally enable or disable authentication.
2. Update Setting: Click "Update Setting" button when you finished Radius Status Setting.

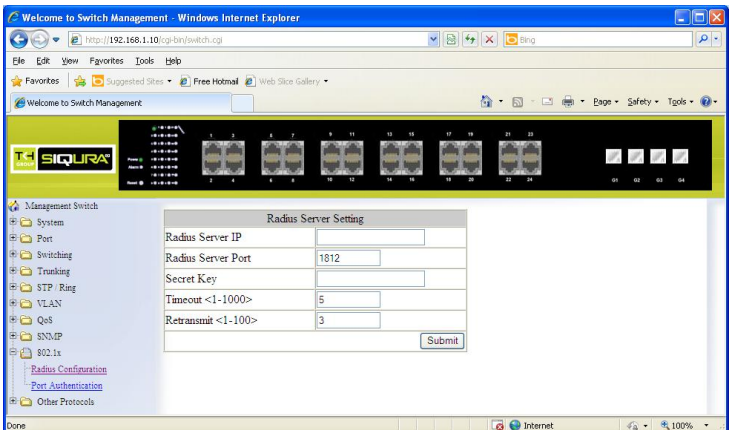



### Add Radius:


1. Add Radius: Click “Add Radius” button. The “Radius Server Setting” window appears.
2. Radius Server IP: Click in the “Radius Server IP” textbox and specify the IP address of the remote radius server host.
3. Radius Server Port: Click in the “Radius Server Port” textbox and specify the UDP destination port for authentication requests. The host is not used for authentication if set to 0.
4. Secret Key: Click in the “Secret Key” textbox and specify the authentication and encryption key for all radius communications between the Switch and radius server. This key must match the encryption used on the radius daemon. All leading spaces are ignored, but spaces within and at the end of the key are used. If spaces are used in the key, do not enclose the key in quotation marks unless the quotation marks themselves are part of the key.
5. Timeout <1-1000>: Click in the “Timeout” textbox and specify the time interval (in seconds) that the Switch waits for the radius server to reply before retransmitting. Enter a value in the range 1 to 1000.
6. Retransmit <1-100>: Click in the “Retransmit” textbox and specify the number of times a radius request is resent to a server if that server is not responding or responding slowly. Enter a value in the range 1 to 100.
7. Sumit: Click “Sumit” button when you finished Radius Server Setting.

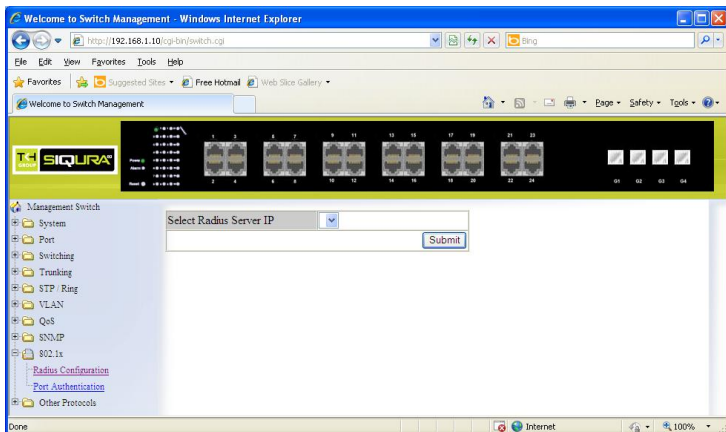

### Delete Radius:

1. Delete Radius: Click “Delete Radius” button. The “Select Radius Server IP” window appears.
2. Select Radius Server IP: Click “Select Radius Server IP” drop-down menu from “Select Radius Server IP” drop-down list to choose the IP address of the remote radius server host to be deleted.

3. Sumit: Click “Sumit” button when you finished radius server deletion.

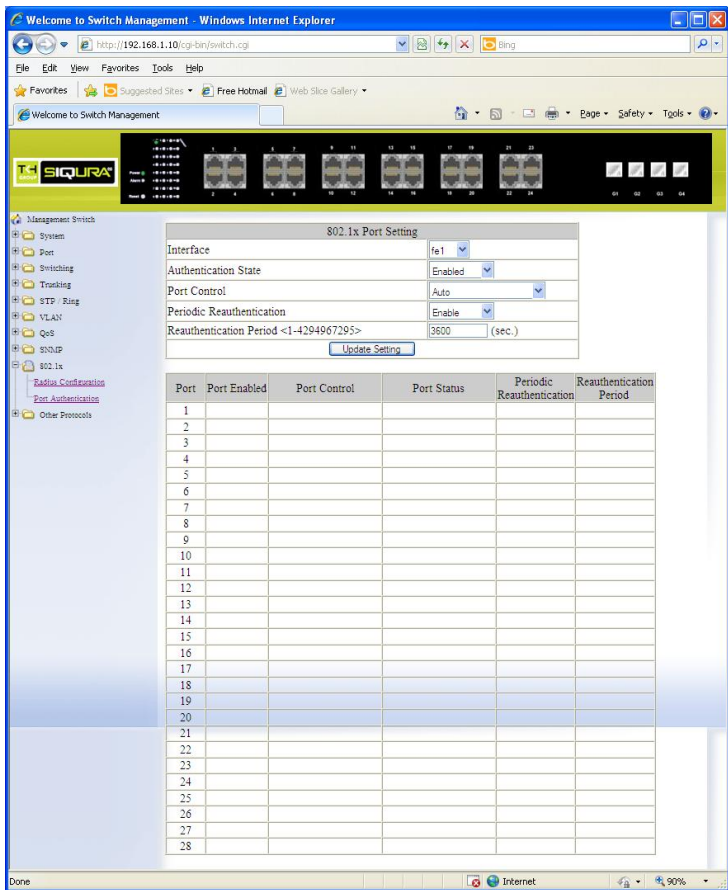

The screenshot shows the SIQURA web management interface in a Windows Internet Explorer browser window. The address bar shows the URL `http://192.168.1.10/cgi-bin/switch.cgi`. The main content area displays the "802.1x Port Setting" configuration page for interface "fa1".

**Configuration Form:**

Interface	fa1
Authentication State	Enabled
Port Control	Auto
Periodic Reauthentication	Enable
Reauthentication Period <1-4294967295>	3600 (sec.)

Below the form is a table for port settings:

Port	Port Enabled	Port Control	Port Status	Periodic Reauthentication	Reauthentication Period
1					
2					
3					
4					
5					
6					
7					
8					
9					
10					
11					
12					
13					
14					
15					
16					
17					
18					
19					
20					
21					
22					
23					
24					
25					
26					
27					
28					


### Port Authentication

1. Interface: Click “Interface” drop-down menu from “Interface” drop-down list to choose the port to be set port authentication.
2. Authentication State: Click “Authentication State” drop-down menu from “Authentication State” drop-down list to choose “Enable” or “Disable” to enable or disable authentication state.
3. Port Control: Click “Port Control” drop-down menu from “Port Control” drop-down list to choose “Auto”, “Force Authorized”, or “Force Unauthorized” to force a port state. “Auto” specifies to enable

authentication on port. “Force Authorized” specifies to force a port to always be in an authorized state. “Force Unauthorized” specifies to force a port to always be in an unauthorized state.

4. Periodic Reauthentication: Click “Periodic Reauthentication” drop-down menu from “Periodic Reauthentication” drop-down list to choose “Enable” or “Disable” to enable or disable periodic reauthentication.
5. Reauthentication Period <1-4294967295>: Click in the “Reauthentication Period” textbox and specify the seconds between reauthorization attempts. The default time is 3600 seconds.
6. Update Setting: Click “Update Setting” button when you finished port authentication setting.

## Other Protocols

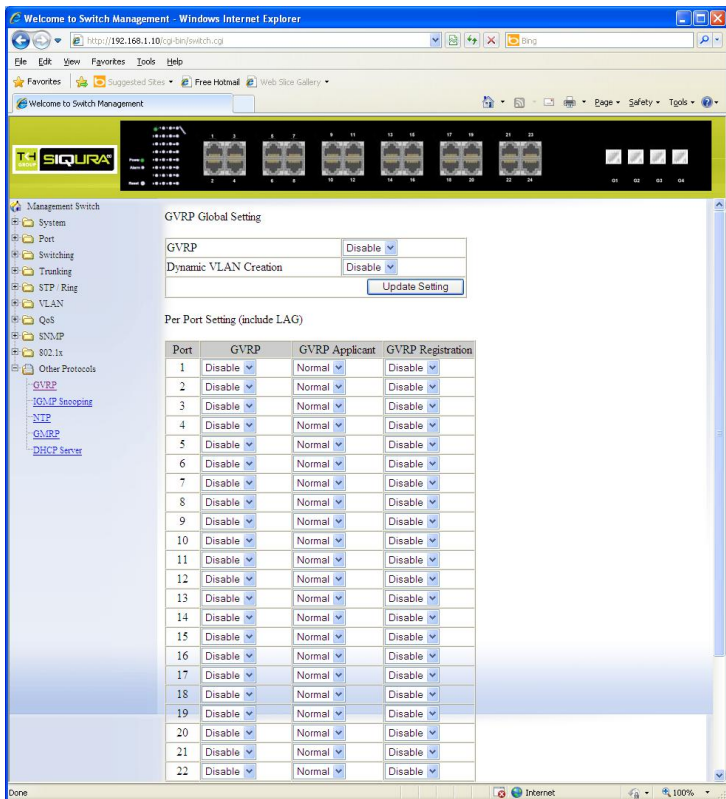

The screenshot shows the 'GVRP Global Setting' page in a web browser. The page has a navigation tree on the left with 'Other Protocols' expanded to show 'GVRP'. The main content area is divided into two sections: 'GVRP Global Setting' and 'Per Port Setting (include LAG)'.

**GVRP Global Setting**

GVRP	Disable
Dynamic VLAN Creation	Disable

**Per Port Setting (include LAG)**

Port	GVRP	GVRP Applicant	GVRP Registration
1	Disable	Normal	Disable
2	Disable	Normal	Disable
3	Disable	Normal	Disable
4	Disable	Normal	Disable
5	Disable	Normal	Disable
6	Disable	Normal	Disable
7	Disable	Normal	Disable
8	Disable	Normal	Disable
9	Disable	Normal	Disable
10	Disable	Normal	Disable
11	Disable	Normal	Disable
12	Disable	Normal	Disable
13	Disable	Normal	Disable
14	Disable	Normal	Disable
15	Disable	Normal	Disable
16	Disable	Normal	Disable
17	Disable	Normal	Disable
18	Disable	Normal	Disable
19	Disable	Normal	Disable
20	Disable	Normal	Disable
21	Disable	Normal	Disable
22	Disable	Normal	Disable

### GVRP

#### GVRP Global Setting:


1. GVRP: Click "GVRP" drop-down menu from "GVRP" drop-down list to choose "Enable" or "Disable" to enable or disable GVRP (GARP VLAN Registration Protocol).
2. Dynamic VLAN Creation: Click "Dynamic VLAN Creation" drop-down menu from "Dynamic VLAN Creation" drop-down list to choose "Enable" or "Disable" to enable or disable Dynamic VLAN Creation. GARP (Generic Attribute Registration Protocol) provides IEEE802.1Q compliant VLAN pruning and dynamic VLAN Creation on IEEE802.1Q

trunk ports.

3. Update Setting: Click "Update Setting" button when you finished GVRP Global Setting.

Per Port Setting (include LAG):

1. GVRP: Click "GVRP" drop-down menu from "GVRP" drop-down list to choose "Enable" or "Disable" to enable or disable GVRP for the port.
2. GVRP Applicant: Click "GVRP Applicant" drop-down menu from "GVRP Applicant" drop-down list to choose "Active" or "Normal" to the port. Ports in the GVRP active applicant state send GVRP VLAN declarations when they are in the STP (Spanning Tree Protocol) blocking state, which prevents the STP bridge protocol data units (BPDUs) from being pruned from the other port. Ports in the GVRP normal applicant state do not declare GVRP VLANs when in the STP blocking state.
3. GVRP Registration: Click "GVRP Registration" drop-down menu from "GVRP Registration" drop-down list to choose "Enable" or "Disable" to enable or disable GVRP Registration to the port. Configuring an IEEE802.1Q trunk port in registration mode allows dynamic creation (if dynamic VLAN creation is enabled), registration, and deregistration of VLANs on the trunk port.
4. Update Setting: Click "Update Setting" button when you finished Per Port Setting.

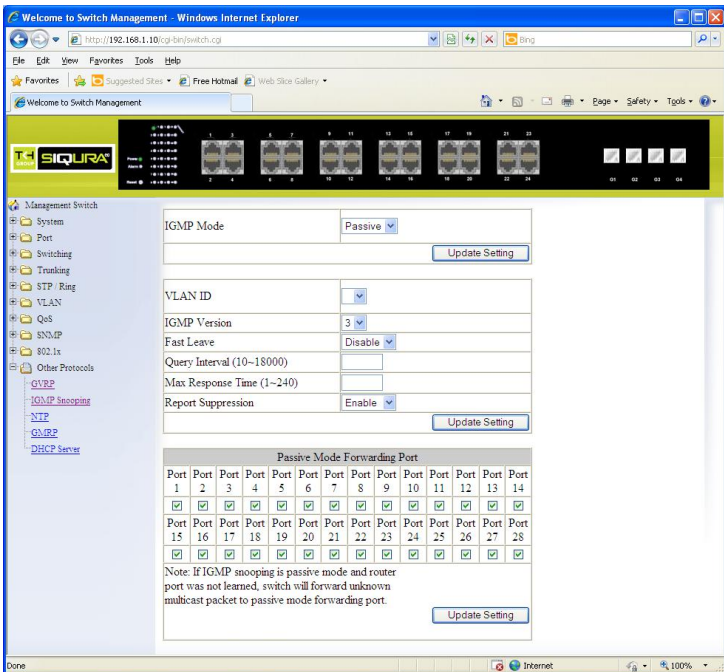

## IGMP Snooping


1. **IGMP Mode:** Click "IGMP Mode" drop-down menu from "IGMP Mode" drop-down list to choose "Disable", "Passive", or "querier" for the switch. Disable: Disable IGMP on the switch. Passive: The switch with only multicast-data-forwarding capability. Querier: The switch acts as the querier for the network. There is only one querier on a network at any time.
2. **Update Setting:** Click "Update Setting" button when you finished IGMP Mode settings.
3. **VLAN ID:** Click "VLAN ID" drop-down menu from "VLAN ID" drop-down list to choose the VLAN under configuration for the switch.
4. **IGMP Version:** Click "IGMP Version" drop-down menu from "IGMP Version" drop-down list to choose "1", "2", or "3" for the switch.
5. **Fast Leave:** Click "Fast Leave" drop-down menu from "Fast Leave" drop-down list to choose "Enable" or "Disable" for the switch. Enable this function will allow members of a multicast group to leave the group immediately when an IGMP Leave Report Packet is received by the Switch.

IGMP Querier:

1. Query Interval: Click in the “Query Interval” textbox and specify a new number from 1 ~ 18000. The Query Interval field is used to set the time (in seconds) between transmitting IGMP queries. Entries between 1 and 18000 seconds are allowed. Default = 125.
2. Max Response Time: Click in the “Max Response Time” textbox and specify a new number from 1 ~ 124. This determines the maximum amount of time in seconds allowed before sending an IGMP response report. The Max Response Time field allows an entry between 1 and 124 (seconds). Default = 10.

#### IGMP Passive Snooping:

1. Report Suppression: Click “Report Suppression” drop-down menu from “Report Suppression” drop-down list to choose “Enable” or “Disable” for the switch. Use this command to enable report suppression for IGMP version 1 and version 2. Report suppression does not apply to IGMP version 3, and is turned off by default for IGMP version 1 and IGMP version 2 reports. The switch uses IGMP report suppression to forward only one IGMP report per multicast router query to multicast devices. When IGMP router suppression is enabled, the switch sends the first IGMP report from all hosts for a group to all the multicast routers. The switch does not send the remaining IGMP reports for the group to the multicast routers. This feature prevents duplicate reports from being sent to the multicast devices.
2. Update Setting: Click “Update Setting” button when you finished IGMP Snooping.

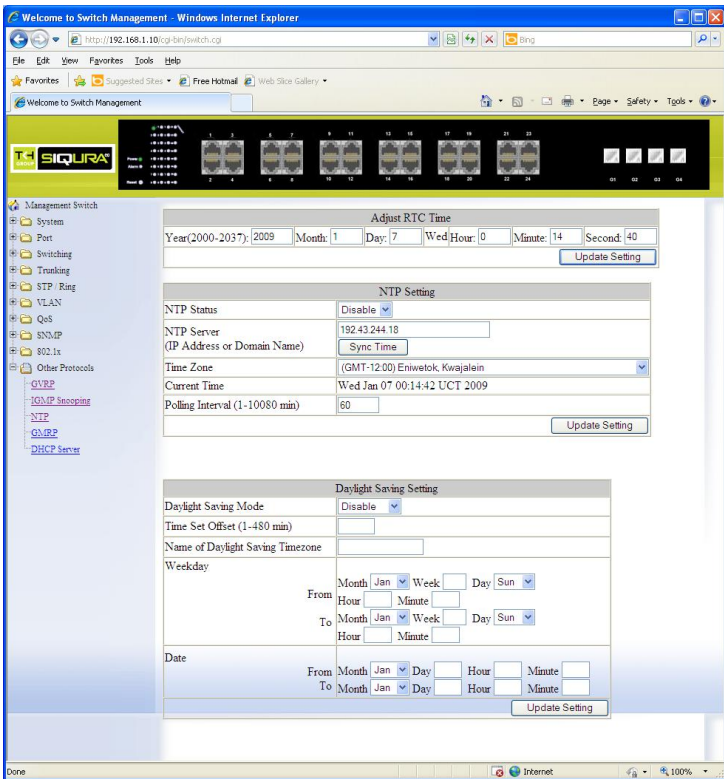

## NTP

Adjust RTC Time: Adjust system time for this Switch.

1. Year(2000-2099): Click in "Year" text box and specify year 2000 to 2099.
2. Month: Click in "Month" text box and specify 1 to 12.
3. Day: Click in "Month" text box and specify 1 to 31.
4. Hour: Click in "Month" text box and specify 0 to 23.
5. Minute: Click in "Month" text box and specify 0 to 59.
6. Second: Click in "Month" text box and specify 0 to 59.
7. Submit: Click "Submit" button when you finished Adjust RTC Time.

NTP Setting:

1. NTP Status: Click "NTP Status" drop-down menu from "NTP Status" drop-down list to choose "Enable" or "Disable" to enable or disable NTP for the Switch.
2. NTP Server (IP Address or Domain name): Click in the "NTP Server" textbox and specify the IP address or Domain name of NTP server.




3. Sync Time: Click "Sync Time" button to synchronize time with NTP server.
4. Time Zone: Click "Time Zone" drop-down menu from "Time Zone" drop-down list to set time zone.
5. Polling Interval (1-10080 min): Click in the "Polling Interval" textbox and specify the polling interval.
6. Update Setting: Click "Update Setting" button when you finished NTP Setting.

#### Daylight Saving Setting:

1. Daylight Saving Mode: Click "Daylight Saving Mode" drop-down menu from "Daylight Saving Mode" drop-down list to choose "Disable", "Weekday", or "Date" to choose disable, weekday, or date daylight saving for the Switch.
2. Time Set Offset (1-1440 min): Click in the "Time Set Offset" textbox and specify the offset time of daylight saving. For example enter 60 for one hour offset.
3. Name of Daylight Saving Tmiezone: Click in the "Name of Daylight Saving Tmiezone" textbox and specify the daylight saving timezone. This can be any given name in 14-character alpha-numericals. Enter the Name of Daylight Saving Timezone using the following example:  
 EDT - East Daylight Saving Time Zone.  
 CDT - Central Daylight-Saving Time Zone.  
 MDT - Mountain Daylight-Saving Time Zone.  
 PDT - Pacific Daylight-Saving Time Zone.  
 ADT - Alaska Daylight-Saving Time Zone.
4. Weekday: Specify the daylight saving period.
  - Month: Click "Month" drop-down menu from "Month" drop-down list to choose from January to December.
  - Week: <1-5> Specifies starting/ending week of daylight savings time.
  - Day: Click "Day" drop-down menu from "Day" drop-down list to choose from Sunday to Saturday.
  - Hour: <0-23> Specifies from 0 to 23.
  - Minute: <0-59> Specifies from 0 to 59.
5. Date: Specify the daylight saving period.
  - Month: Click "Month" drop-down menu from "Month" drop-down list to choose from January to December.
  - Day: <1-31> Specifies from 1 to 31.
  - Hour: <0-23> Specifies from 0 to 23.
  - Minute: <0-59> Specifies from 0 to 59.
6. Update Setting: Click "Update Setting" button when you finished Daylight Saving Setting.

**<Note> The "Week", "Hour", "Minute", and "Day" fields would not accept the alphabetic characters (Like Jan, Feb, sun, mon). They only accept the two digit numbers (0 through 9).**

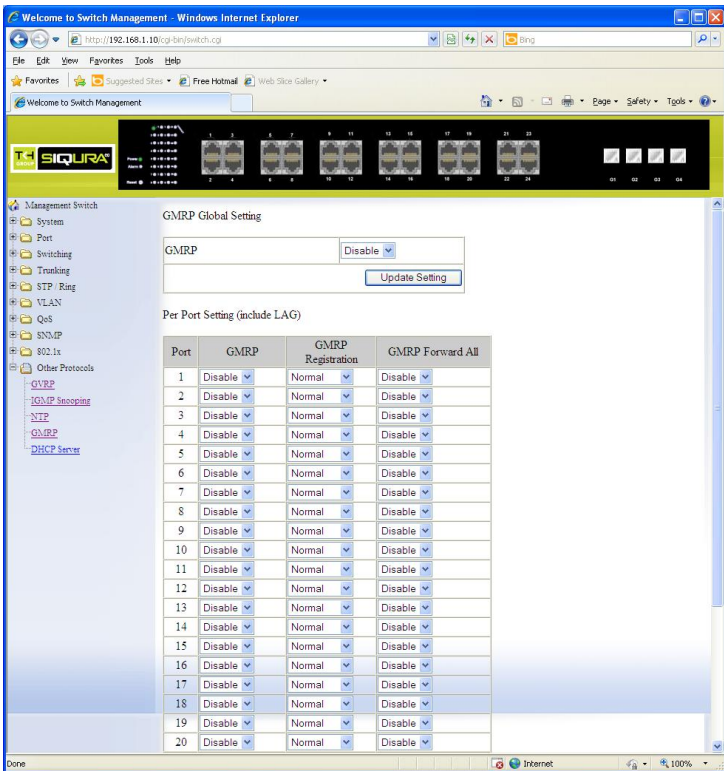

## GMRP

### GMRP Global Setting:

1. GMRP: Click "GMRP" drop-down menu from "GMRP" drop-down list to choose "Enable" or "Disable" to enable or disable GMRP.
2. Update Setting: Click "Update Setting" button when you finished GMRP Global Setting.


### Per Port Setting (include LAG):

1. GMRP: Click "GMRP" drop-down menu from "GMRP" drop-down list to choose "Enable" or "Disable" to enable or disable GMRP for the port.
2. GMRP Registration: Click "GMRP Registration" drop-down menu from "GMRP Registration" drop-down list to choose "Normal", "Fixed" or "Forbidden" to specifies GMRP Registration to the port.  
Normal specify dynamic GMRP multicast registration and deregistration on the port.  
Fixed specifies the multicast groups currently registered on the switch

are applied to the port, but any subsequent registrations or deregistrations do not affect the port. Any registered multicast groups on the port are not deregistered based on the GARP timers.

Forbidden specifies that all GMRP multicasts are deregistered, and prevent any further GMRP multicast registration on the port.

3. GMRP Forward All: Click “GMRP Forward All” drop-down menu from “GMRP Forward All” drop-down list to choose “Enable” or “Disable” to enable or disable GMRP forwarding to the port.
4. Update Setting: Click “Update Setting” button when you finished Per port setting.

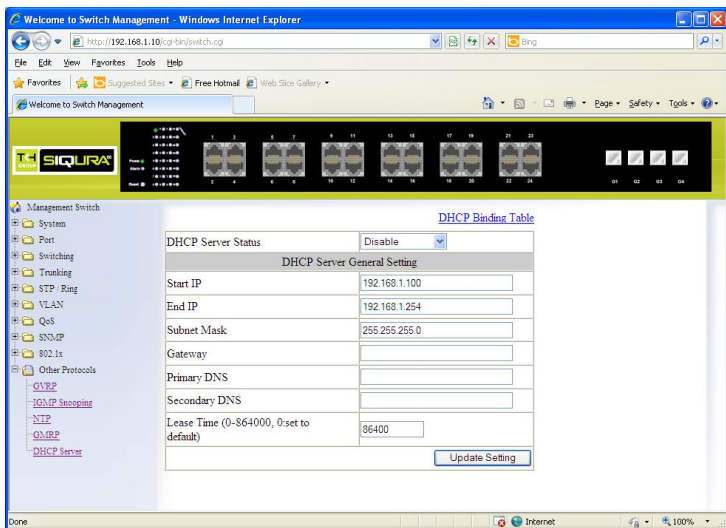


The screenshot shows the 'DHCP Server General Setting' configuration page in the SIKURA web management interface. The page is accessed via a browser at the URL `http://192.168.1.10/cgi-bin/switch.cgi`. The interface includes a navigation tree on the left with categories like Management Switch, System, Port, Switching, Trunking, STP/Ring, VLAN, QoS, SNMP, 802.1x, and Other Protocols. Under 'Other Protocols', 'DHCP Server' is selected.

The main configuration area is titled 'DHCP Binding Table' and contains the following settings:

DHCP Server Status	Disable
<b>DHCP Server General Setting</b>	
Start IP	192.168.1.100
End IP	192.168.1.254
Subnet Mask	255.255.255.0
Gateway	
Primary DNS	
Secondary DNS	
Lease Time (0-864000, 0:set to default)	86400

An 'Update Setting' button is located at the bottom right of the configuration table.

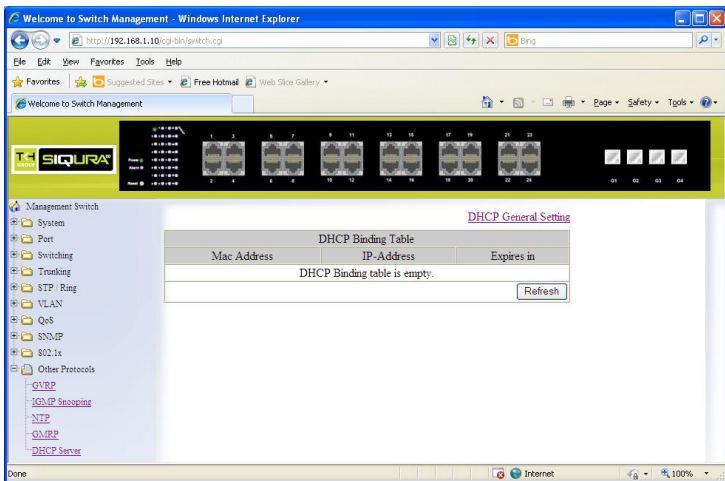

## DHCP Server

1. DHCP Binding Table: Click on "DHCP Binding Table" to show DHCP Binding Table. Click "Refresh" button to refresh DHCP Binding Table. Click on "DHCP General Setting" to back to DHCP General Setting.
2. DHCP Server Status: Click "DHCP Server Status" drop-down menu from "DHCP Server Status" drop-down list to choose "Disable" or "Default VLAN 1" to disable or enable Default VLAN 1.
3. Start IP: Click in the "Start IP" textbox and specify the default Start IP for the DHCP Server.
4. End IP: Click in the "End IP" textbox and specify the default End IP for the DHCP Server.
5. Subnet Mask: Click in the "Subnet Mask" textbox and specify the default subnet mask for the DHCP Server.
6. Gateway: Click in the "Gateway" textbox and specify the default gateway for the DHCP Server.
7. Primary DNS: Click in the "Primary DNS" textbox and specify the default primary DNS for the DHCP Server.
8. Secondary DNS: Click in the "Secondary DNS" textbox and specify the default secondary DNS for the DHCP Server.
9. Lease Time: Click in the "Lease Time" textbox and specify the default lease time for the DHCP Server.
10. Update Setting: Click "Update Setting" button when you finished DHCP Server General Setting.

## Command Line Console Management

The switch provides a command line console interface for configuration purposes. The switch can be configured either locally through its RS-232 port or remotely via a Telnet session. For the later, you must specify an IP address for the switch first.

This chapter describes how to configure the switch using its console by Command Line.

### Administration Console

Connect the DB9 straight cable to the RS-232 serial port of the device to the RS-232 serial port of the terminal or computer running the terminal emulation application.

Direct access to the administration console is achieved by directly connecting a terminal or a PC equipped with a terminal-emulation program (such as HyperTerminal) to the switch console port.

When using the management method, configure the terminal-emulation program to use the following parameters (you can change these settings after login):

[Default parameters]


115,200bps

8 data bits

No parity

1 stop bit


## Exec Mode (View Mode)

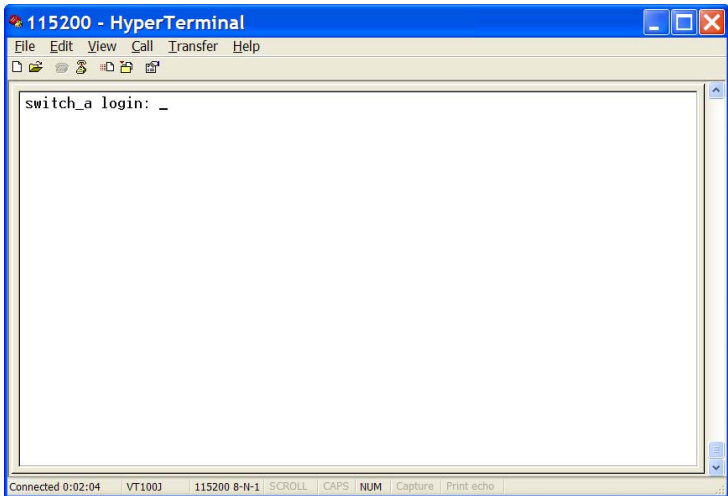

### Logon to Exec Mode (View Mode)

At the **switch\_a login:** prompt just type in "root" and press <Enter> to logon to Exec Mode (or View Mode).

switch\_a login: root

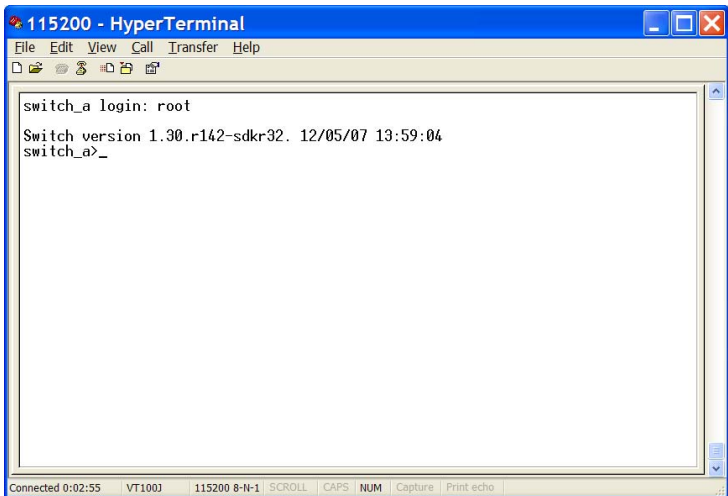

## Basic commands


Exec Mode (or View Mode) is the base mode from where users can perform basic commands like:

clear, debug, disable, enable, exit, help, logout, no, quit, show, terminal

The CLI contains a text-based help facility. Access this help by typing in the full or partial command string then typing a question mark "?". The CLI displays the command keywords or parameters along with a short description.

At the **switch\_a>** prompt just press <?> to list the above basic commands.

```
switch_a>?
```

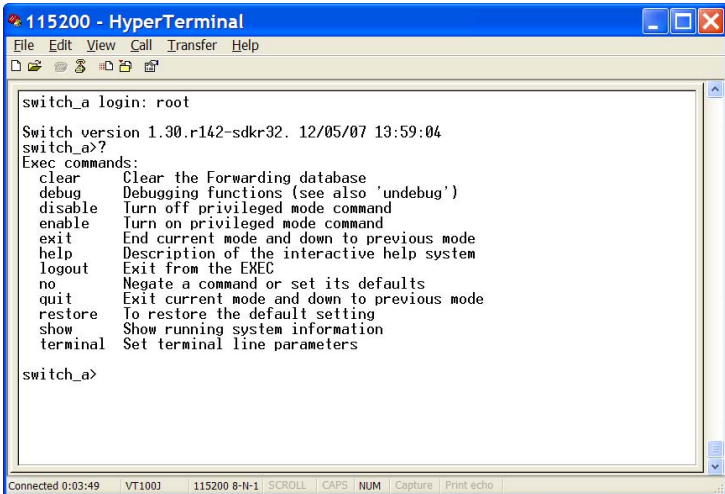

The screenshot shows a HyperTerminal window titled "115200 - HyperTerminal". The terminal text is as follows:


```
switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>?
Exec commands:
clear      Clear the Forwarding database
debug     Debugging functions (see also 'undebug')
disable   Turn off privileged mode command
enable    Turn on privileged mode command
exit      End current mode and down to previous mode
help      Description of the interactive help system
logout    Exit from the EXEC
no        Negate a command or set its defaults
quit      Exit current mode and down to previous mode
restore   To restore the default setting
show      Show running system information
terminal  Set terminal line parameters

switch_a>
```

The status bar at the bottom of the window shows: "Connected 0:03:49 VT100J 115200 8-N-1 | SCROLL | CAPS | NUM | Capture | Print echo |".

At the **switch\_a>** prompt just type in the full or partial command string then typing a question mark "?" to display the command keywords or parameters along with a short description.

```
switch_a>show ?
```

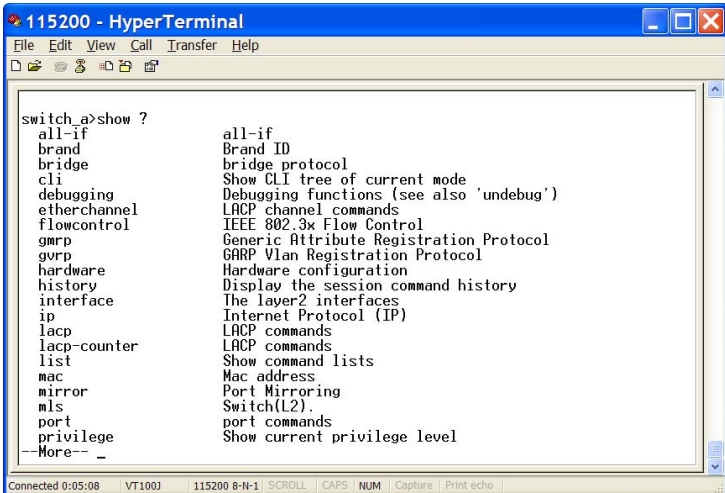


```

switch_a>show ?
all-if          all-if
brand           Brand ID
bridge         bridge protocol
cli            Show CLI tree of current mode
debugging      Debugging functions (see also 'undebug')
etherchannel   LACP channel commands
flowcontrol    IEEE 802.3x Flow Control
gmrp           Generic Attribute Registration Protocol
gvrp           GARP Vlan Registration Protocol
hardware       Hardware configuration
history        Display the session command history
interface      The layer2 interfaces
ip             Internet Protocol (IP)
lACP           LACP commands
lACP-counter   LACP commands
list           Show command lists
mac            Mac address
mirror         Port Mirroring
mls            Switch(L2).
port           port commands
privilege      Show current privilege level
--More--

```

Connected 0:05:08 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

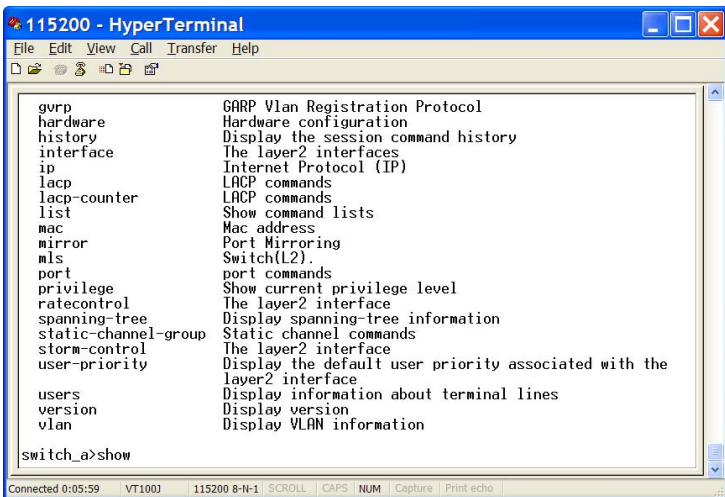

```

gvrp           GARP Vlan Registration Protocol
hardware       Hardware configuration
history        Display the session command history
interface      The layer2 interfaces
ip             Internet Protocol (IP)
lACP           LACP commands
lACP-counter   LACP commands
list           Show command lists
mac            Mac address
mirror         Port Mirroring
mls            Switch(L2).
port           port commands
privilege      Show current privilege level
ratecontrol    The layer2 interface
spanning-tree  Display spanning-tree information
static-channel-group Static channel commands
storm-control  The layer2 interface
user-priority  Display the default user priority associated with the
               layer2 interface
users          Display information about terminal lines
version        Display version
vlan           Display VLAN information

switch_a>show

```

Connected 0:05:59 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

### Login timed out


The login session to Exec Mode (or View Mode) has timed out due to an extended period of inactivity (60 seconds) to indicate authentication attempt timed out. And the **switch\_a login:** prompt will show on the screen.

### Logon back to Exec Mode (View Mode)



At the **switch\_a login:** prompt just type in “root” and press <Enter> to logon back to Exec Mode (or View Mode).


```
switch_a login: root
```

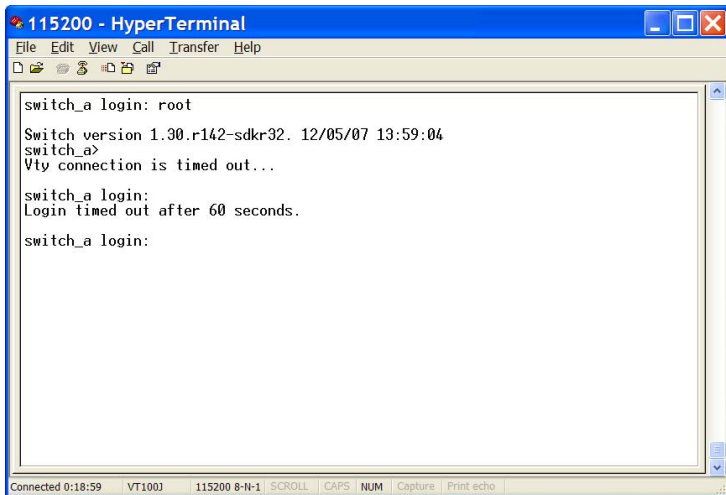

### Exit from Exec Mode (View Mode)

At the **switch\_a>** prompt just type in “exit” and press <Enter> to exit from Exec Mode (or View Mode).

```
switch_a>exit
```

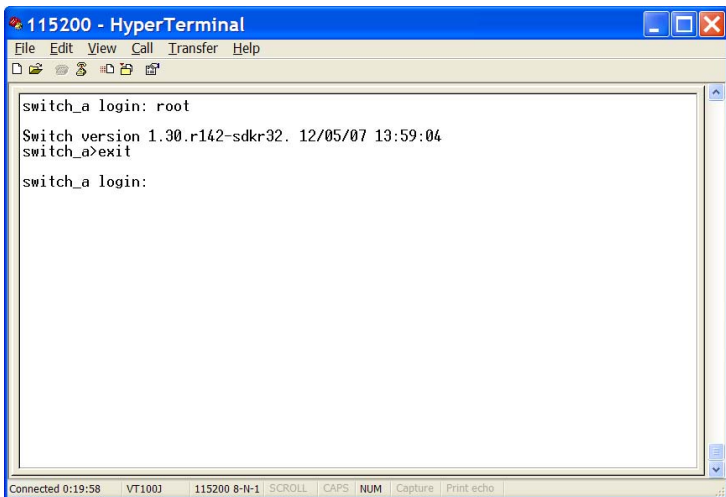


```
115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>exit
switch_a login:
Connected 0:19:58 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo
```

## Privileged Exec Mode (Enable Mode)

### Logon to Privileged Exec Mode (Enable Mode)

At the **switch\_a>** prompt just type in “enable” and press <Enter> to logon to Privileged Exec Mode (or Enable Mode). And the **switch\_a#** prompt will show on the screen.

```
switch_a>enable
```

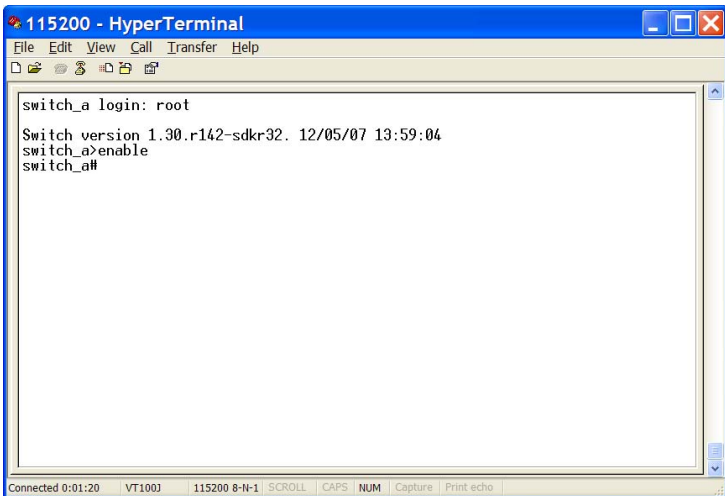

```

115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>enable
switch_a#

```


Connected 0:01:20 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

## Commands

Privileged Exec Mode (or Enable Mode) allows users to run commands as following.

At the **switch\_a#** prompt just press <?> to list the commands.

```
switch_a#?
```

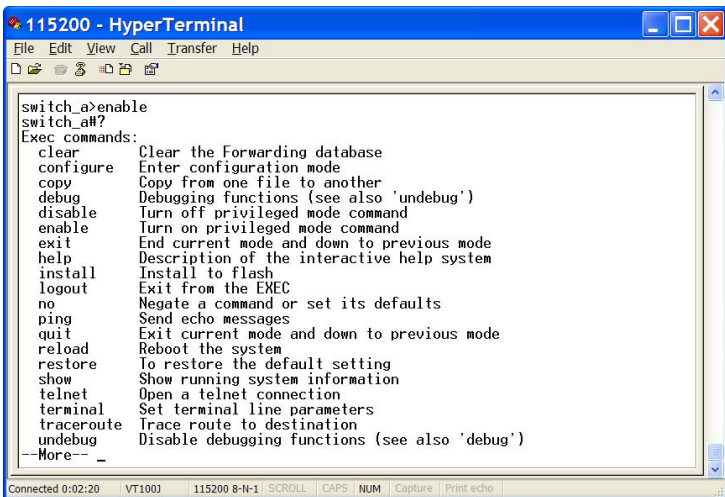


```

115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a>enable
switch_a#?
Exec commands:
clear          Clear the Forwarding database
configure     Enter configuration mode
copy          Copy from one file to another
debug         Debugging functions (see also 'undebug')
disable       Turn off privileged mode command
enable        Turn on privileged mode command
exit          End current mode and down to previous mode
help          Description of the interactive help system
install       Install to flash
logout        Exit from the EXEC
no            Negate a command or set its defaults
ping          Send echo messages
quit          Exit current mode and down to previous mode
reload        Reboot the system
restore        To restore the default setting
show          Show running system information
telnet        Open a telnet connection
terminal      Set terminal line parameters
traceroute    Trace route to destination
undebug       Disable debugging functions (see also 'debug')
--More--

```

Connected 0:02:20 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

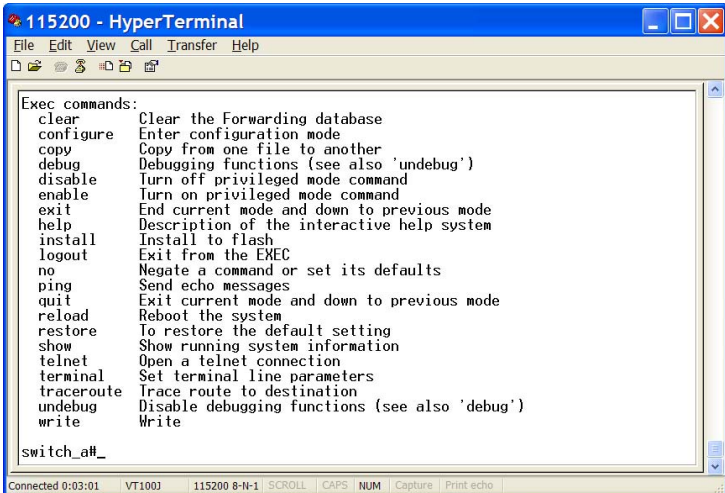

```

115200 - HyperTerminal
File Edit View Call Transfer Help
Exec commands:
clear      Clear the Forwarding database
configure  Enter configuration mode
copy       Copy from one file to another
debug      Debugging functions (see also 'undebug')
disable    Turn off privileged mode command
enable     Turn on privileged mode command
exit       End current mode and down to previous mode
help       Description of the interactive help system
install    Install to flash
logout     Exit from the EXEC
no         Negate a command or set its defaults
ping       Send echo messages
quit       Exit current mode and down to previous mode
reload     Reboot the system
restore    To restore the default setting
show       Show running system information
telnet     Open a telnet connection
terminal   Set terminal line parameters
traceroute Trace route to destination
undebug    Disable debugging functions (see also 'debug')
write     Write


switch_a#_

```

Connected 0:03:01 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

At the **switch\_a#** prompt just type in the full or partial command string then typing a question mark “?” to display the command keywords or parameters along with a short description.

```
switch_a#show ?
```

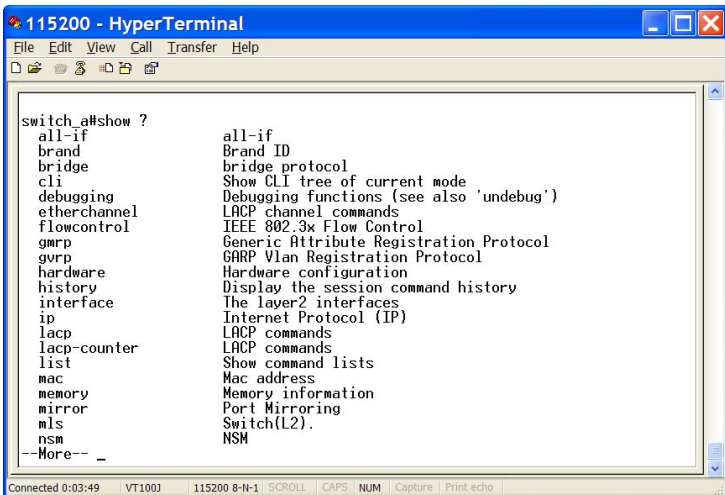

```

115200 - HyperTerminal
File Edit View Call Transfer Help
switch_a#show ?
all-if      all-if
brand       Brand ID
bridge      bridge protocol
cli         Show CLI tree of current mode
debugging   Debugging functions (see also 'undebug')
etherchannel LACP channel commands
flowcontrol IEEE 802.3x Flow Control
gmrp        Generic Attribute Registration Protocol
gvrp        GARP Vlan Registration Protocol
hardware    Hardware configuration
history     Display the session command history
interface   The layer2 interfaces
ip          Internet Protocol (IP)
lACP        LACP commands
lACP-counter LACP commands
list        Show command lists
mac         Mac address
memory      Memory information
mirror      Port Mirroring
mls         Switch(L2).
nsm         NSM
--More-- _

```

Connected 0:03:49 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

```
ip                Internet Protocol (IP)
lacp              LACP commands
lacp-counter      LACP commands
list             Show command lists
mac              Mac address
memory           Memory information
mirror           Port Mirroring
mls              Switch(L2).
nsm              NSM
port             port commands
privilege        Show current privilege level
ratecontrol      The layer2 interface
running-config   Current Operating configuration
spanning-tree    Display spanning-tree information
startup-config   Contents of startup configuration
static-channel-group Static channel commands
storm-control    The layer2 interface
user-priority    Display the default user priority associated with the
                 layer2 interface
users            Display information about terminal lines
version          Display version
vlan            Display VLAN information

switch_a#show _
```


### Login timed out

The login session to Privileged Exec Mode (or Enable Mode) has timed out due to an extended period of inactivity (60 seconds) to indicate authentication attempt timed out. And the **switch\_a login:** prompt will show on the screen.

### Logon back to Exec Mode (View Mode)

At the **switch\_a login:** prompt just type in "root" and press <Enter> to logon back to Exec Mode (or View Mode).

```
switch_a login: root
```

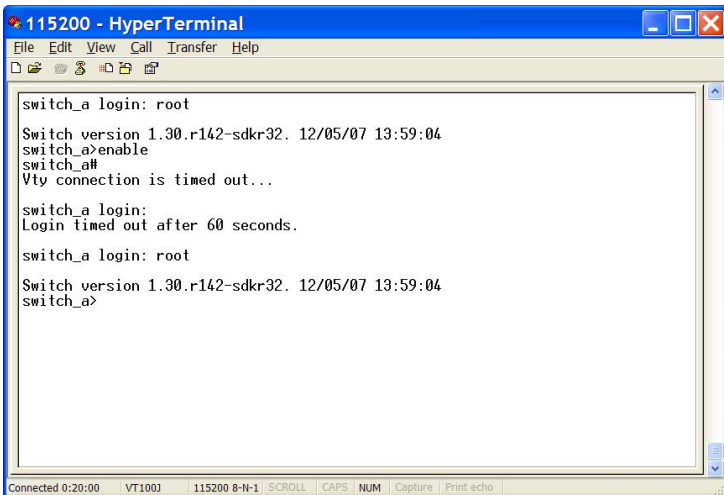

```

switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>enable
switch_a#
Vty connection is timed out...

switch_a login:
Login timed out after 60 seconds.

switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>


```

Connected 0:20:00 | VT100J | 115200 8-N-1 | SCROLL | CAPS | NUM | Capture | Print echo

### Exit from Privileged Exec Mode (or Enable Mode)

At the **switch\_a#** prompt just type in “exit” and press <Enter> to exit from Privileged Exec Mode (or Enable Mode).

```
switch_a#exit
```

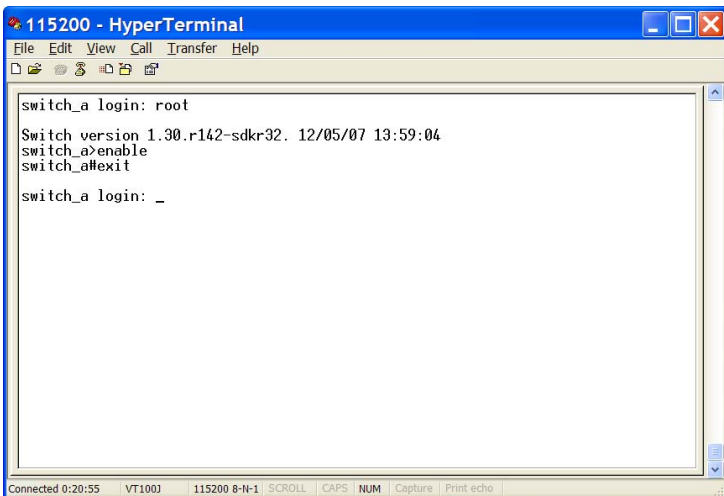

```

switch_a login: root
Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>enable
switch_a#exit
switch_a login: _

```


Connected 0:20:55 | VT100J | 115200 8-N-1 | SCROLL | CAPS | NUM | Capture | Print echo

## Configure Mode (Configure Terminal Mode)

### Logon to Configure Mode (Configure Terminal Mode)

At the **switch\_a#** prompt just type in “configure terminal” and press <Enter> to logon to Configure Mode (or Configure Terminal Mode). And the **switch\_a(config)#** prompt will show on the screen.

```
switch_a#configure terminal
```

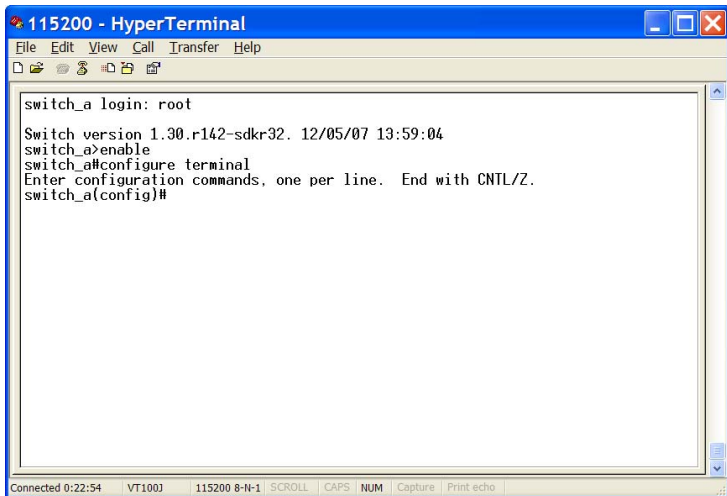


### Commands

Configure Mode (or Configure Terminal Mode) serves as a gateway into the modes as following.

At the **switch\_a(config)#** prompt just press <?> to list the commands.


```
switch_a(config)#?
```

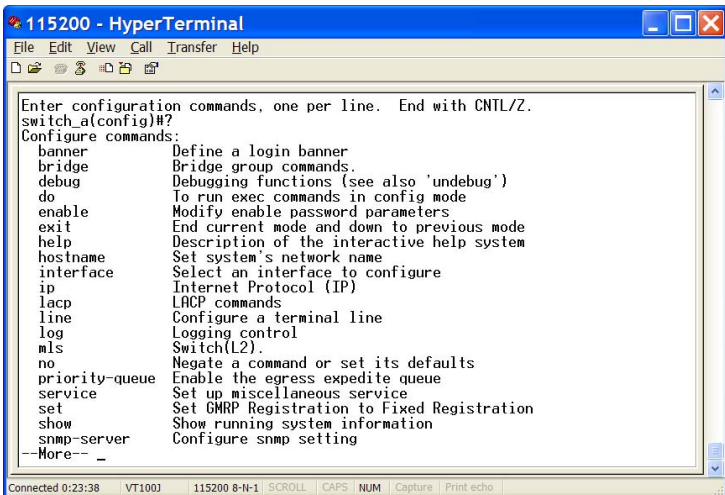

```

115200 - HyperTerminal
File Edit View Call Transfer Help
Enter configuration commands, one per line. End with CNTL/Z.
switch_a(config)#?
Configure commands:
  banner      Define a login banner
  bridge      Bridge group commands.
  debug       Debugging functions (see also 'undebug')
  do          To run exec commands in config mode
  enable      Modify enable password parameters
  exit        End current mode and down to previous mode
  help        Description of the interactive help system
  hostname    Set system's network name
  interface   Select an interface to configure
  ip          Internet Protocol (IP)
  lacp        LACP commands
  line        Configure a terminal line
  log         Logging control
  mls         Switch(L2).
  no          Negate a command or set its defaults
  priority-queue Enable the egress expedite queue
  service     Set up miscellaneous service
  set         Set GMRP Registration to Fixed Registration
  show        Show running system information
  snmp-server Configure snmp setting
--More--
Connected 0:23:38  VT100J  115200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

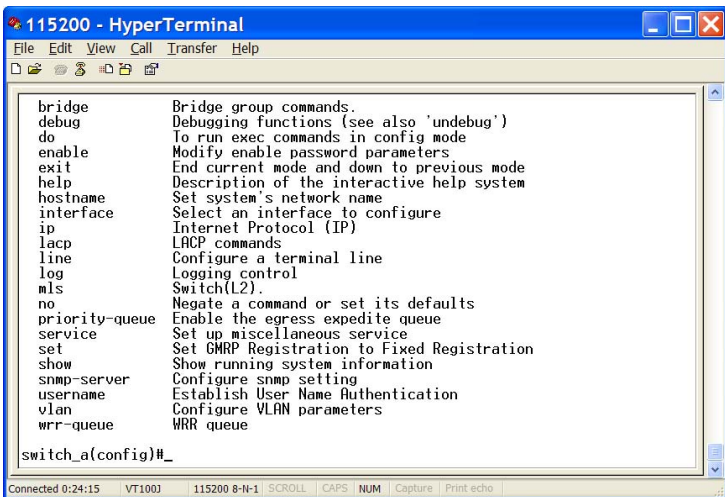

```

115200 - HyperTerminal
File Edit View Call Transfer Help
bridge      Bridge group commands.
debug       Debugging functions (see also 'undebug')
do          To run exec commands in config mode
enable      Modify enable password parameters.
exit        End current mode and down to previous mode
help        Description of the interactive help system
hostname    Set system's network name
interface   Select an interface to configure
ip          Internet Protocol (IP)
lacp        LACP commands
line        Configure a terminal line
log         Logging control
mls         Switch(L2).
no          Negate a command or set its defaults
priority-queue Enable the egress expedite queue
service     Set up miscellaneous service
set         Set GMRP Registration to Fixed Registration
show        Show running system information
snmp-server Configure snmp setting
username    Establish User Name Authentication
vlan        Configure VLAN parameters
wrr-queue   WRR queue


switch_a(config)#_
Connected 0:24:15  VT100J  115200 8-N-1  SCROLL  CAPS  NUM  Capture  Print echo

```

At the **switch\_a(config)#** prompt just type in the full or partial command string then typing a question mark “?” to display the command keywords or parameters along with a short description.

```
switch_a(config)#show ?
```



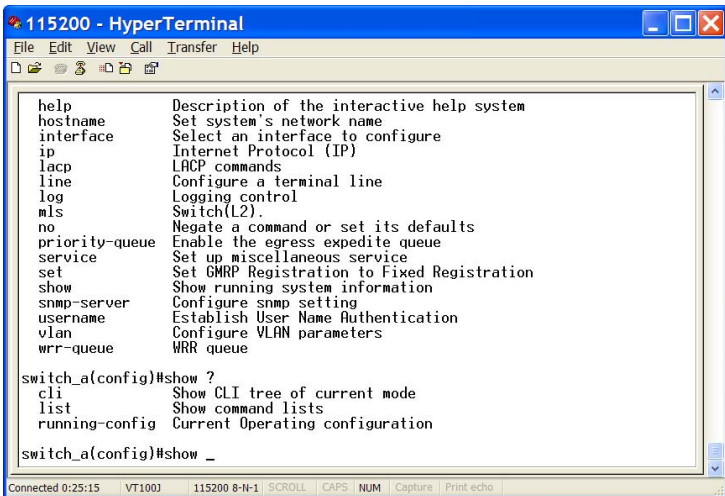

```
115200 - HyperTerminal
File Edit View Call Transfer Help
help      Description of the interactive help system
hostname  Set system's network name
interface Select an interface to configure
ip        Internet Protocol (IP)
lACP     LACP commands
line      Configure a terminal line
log       Logging control
mls       Switch(L2).
no        Negate a command or set its defaults
priority-queue Enable the egress expedite queue
service  Set up miscellaneous service
set       Set GMRP Registration to Fixed Registration
show     Show running system information
snmp-server Configure snmp setting
username Establish User Name Authentication
vlan     Configure VLAN parameters
wrr-queue WRR queue

switch_a(config)#show ?
cli      Show CLI tree of current mode
list     Show command lists
running-config Current Operating configuration

switch_a(config)#show _

Connected 0:25:15 | VT100J | 115200 8-N-1 | SCROLL | CAPS | NUM | Capture | Print echo
```


### Login timed out

The login session to Configure Mode (or Configure Terminal Mode) has timed out due to an extended period of inactivity (60 seconds) to indicate authentication attempt timed out. And the **switch\_a login:** prompt will show on the screen.

### Logon back to Exec Mode (View Mode)

At the **switch\_a login:** prompt just type in "root" and press <Enter> to logon back to Exec Mode (or View Mode).

```
switch_a login: root
```

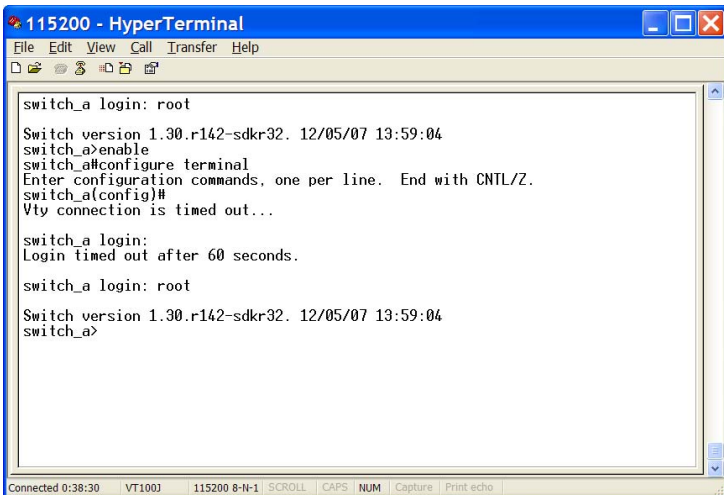

```

switch_a login: root

Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>enable
switch_a#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch_a(config)#
Vty connection is timed out...

switch_a login:
Login timed out after 60 seconds.

switch_a login: root

Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>


```

Connected 0:38:30 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

### Exit from Configure Mode (or Configure Terminal Mode)

At the **switch\_a(config)#** prompt just type in “exit” and press <Enter> to exit from Configure Mode (or Configure Terminal Mode).

```
switch_a(config)#exit
```

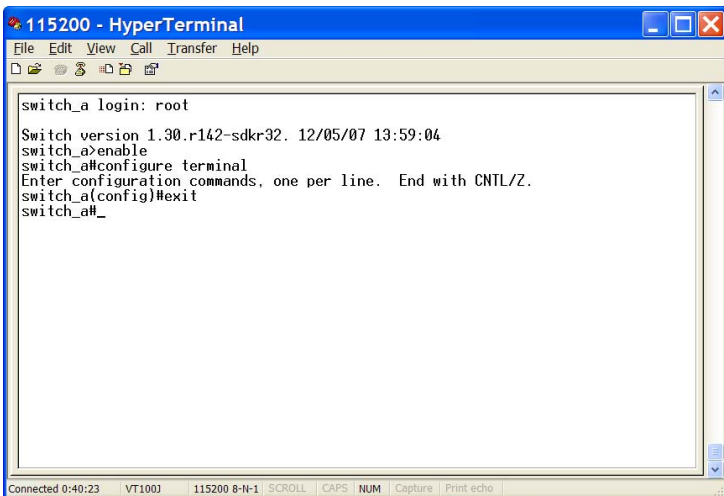

```

switch_a login: root

Switch version 1.30.r142-sdkr32. 12/05/07 13:59:04
switch_a>enable
switch_a#configure terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch_a(config)#exit
switch_a#_

```

Connected 0:40:23 VT100J 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

## User Interface Configuration

Http Server, Http Secure-Server, Telnet, SSH

### *Http Server*

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip http server** command to enable the web server software of the Switch. User can remotely manage the Switch with a web browser from any management station on the network.

Use the **no ip http server** command to disable the web server software of the Switch.

3. Command Syntax:

(no) ip http server

4. Example:

The following example enables the web server software of the Switch:

```
switch_a(config)#ip http server
switch(config)#
```

---

### *Http Secure-Server*

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip http secure-server** command to enable secure HTTP access. The Switch supports HTTPS to encrypt all HTTP traffic and access the web browser interface of the Switch via HTTPS.

Use the **no ip http secure-server** command to disable secure HTTP access.

3. Command Syntax:

(no) ip http secure-server

4. Example:

The following example enables secure HTTP access:

```
switch_a(config)#ip http secure-server
switch(config)#
```

---

### Telnet

1. Command Mode: Configure mode  
Login to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip enable telnet** command to enable the Telnet server on the Switch. User can use Telnet to access the console utility of the Switch over a network.

Use the **no ip enable telnet** command to disable the Telnet server on the Switch.

3. Command Syntax:  
(no) ip enable telnet

4. Example:

The following example enables the Telnet server on the Switch:

```
switch_a(config)#ip enable telnet
switch(config)#
```

---

### SSH

1. Command Mode: Configure mode  
Login to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip enable ssh** command to enable SSH (Secure Shell) login to the Switch. User can use the SSH protocol for secure communication between a remote PC (the SSH Client) and the Switch (the SSH Server).

Use the **no ip enable ssh** command to disable SSH (Secure Shell) login to the Switch.

3. Command Syntax:  
(no) ip enable ssh

4. Example:

The following example enables SSH (Secure Shell) login to the Switch:

```
switch_a(config)#ip enable ssh
switch(config)#
```

---



## System

System Information, System Name/Password, IP Address, ARP Table, Route Table, Save Configuration, Firmware Upgrade, Alarm Setting, Reboot, Logout

### System Name/Password

System Name:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **hostname** command to set or change the network server name.

Use the **no hostname** command to disable this function.

3. Command Syntax:

(no) hostname HOSTNAME

HOSTNAME specifies the network name of the system.

4. Example:

The following example sets the hostname to **switch**, and shows the change in the prompt:

```
switch_a(config)#hostname switch
switch(config)#
```

---

Password:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **enable password** command to modify or create a password to be used when entering the Enable mode.

3. Command Syntax:

enable password PASSWORD

PASSWORD specifies the new password of the system.

4. Example:

The following example sets the new password **mypasswd** to switch:

```
switch_a(config)#enable password mypasswd
switch_a(config)#
```

### IP Address

IP Address/IP Subnet Mask:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **ip address** command to set the IP address of an interface.

Use the **no ip address** command to remove the IP address from an interface.

3. Command Syntax:

```
ip address IP-ADDRESS
```

```
no ip address IP-ADDRESS
```

```
no ip address
```

IP-ADDRESS A.B.C.D/M specifies the IP address and prefix length of an interface.

M specifies IP subnet mask, 8: 255.0.0.0, 16:255.255.0.0, 24: 255.255.255.0.

4. Example:

The following example sets the new IP address **192.168.1.10** and new IP subnet mask **255.255.255.0** to switch:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip address 192.168.1.10/24
switch_a(config-if)#
```

DHCP Client:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **get ip dhcp enable** command to get IP address through DHCP server.  
Use the **no get ip dhcp enable** command to cancel the IP address which got through DHCP server.

3. Command Syntax:  
(no) get ip dhcp enable

4. Example:

The following example gets IP address through DHCP server:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#get ip dhcp enable
switch_a(config-if)#
```

---

Default Gateway:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip default-gateway** command to set the IP address of the default gateway.

Use the **no ip default-gateway** command to remove the IP address of the default gateway.

3. Command Syntax:

ip default-gateway IP-ADDRESS

no ip default-gateway

IP-ADDRESS A.B.C.D specifies the IP address of the default gateway.

4. Example:

The following example sets the default gateway **192.168.1.254** to switch:

```
switch_a(config)#ip default-gateway 192.168.1.254
switch_a(config)#
```

---

DNS Server:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ip dns** command to set the IP address of the DNS server.

Use the **no ip dns** command to remove the IP address of the DNS server.



3. Command Syntax:

```
ip dns IP-ADDRESS
```

```
no ip dns
```

IP-ADDRESS A.B.C.D specifies the IP address of the DNS server.

4. Example:

The following example sets the DNS server **192.168.1.100** to switch:

```
switch_a(config)#ip dns 192.168.1.100
switch_a(config)#
```

---

### ARP Table

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

---

2. Usage:

Use **show arp-table** command to view ARP Table.

3. Command Syntax:

```
show arp-table
```

4. Example:

The following example shows the ARP Table of switch:

```
switch_a#show arp-table
```

---

### Route Table

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

---

2. Usage:

Use **show route-table** command to view Route Table.

3. Command Syntax:

```
show route-table
```

4. Example:

The following example shows the Route Table of switch:

```
switch_a#show route-table
```

---

### Save Configuration

Load config from TFTP server:

1. Command Mode: Privileged Exec mode  
Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use **install image** command to load configuration file from tftp server to switch.

3. Command Syntax:

install image IP-ADDRESS WORD

IP-ADDRESS specifies the IP address of tftp server.

WORD specifies the file name to be loaded to switch.

4. Example:

The following example specifies upgrading firmware (file name: **flash.tgz**) from tftp server (IP address: **192.168.1.100**) to switch:

```
switch_a#install image 192.168.1.100 flash.tgz  
switch_a#
```

---

Load config to TFTP server:

1. Command Mode: Privileged Exec mode  
Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use **write config-file** command to backup configuration file to tftp server.

3. Command Syntax:

write config-file IP-ADDRESS

IP-ADDRESS specifies the IP address of tftp server.

4. Example:

The following example backups configuration file to tftp server (IP address: **192.168.1.20**):

```
switch_a#write config-file 192.168.1.20  
switch_a#
```

---

Save Configuration:

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use **copy running-config startup-config** command to write configurations to the file to be used at startup. This is the same as the **write memory** command.

3. Command Syntax:

```
copy running-config startup-config
```

4. Example:

The following example specifies writing configurations to the file to be used at startup to switch:

```
switch_a#copy running-config startup-config
switch_a#
```

Restore Default:

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use **restore default** command to restore default setting of the switch.

3. Command Syntax:

```
restore default
```

4. Example:

The following example restores default setting of the switch:

```
switch_a#restore default
switch_a#
```

Auto Save:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable auto save configuration function. The configuration will be automatically saved at every configured interval while

this command is enabled. Use the no form of this command to disable this feature.

3. Command Syntax:  
 service auto-config enable  
 no service auto-config enable

4. Example:

The following example enables or disables auto save configuration to switch:

```
switch_a(config)#service auto-config enable
switch_a(config)#no service auto-config enable
switch_a(config)#
```

Auto Save Interval (5~65536 sec):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the interval when the configuration would be automatically saved. The range of interval value is from 5 to 65535. And the default value is 30 seconds.

3. Command Syntax:  
 service auto-config interval WORD  
 WORD specifies the interval value.

4. Example:

The following example sets the interval WORD (**10**) when the configuration would be automatically saved to switch:

```
switch_a(config)#service auto-config interval 10
switch_a(config)#
```

### ***Firmware Upgrade***

1. Command Mode: Privileged Exec mode  
 Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use **install image** command to upgrade firmware from tftp server to switch.

3. Command Syntax:

install image IP-ADDRESS WORD

IP-ADDRESS specifies the IP address of tftp server.


WORD specifies the file name to be upgraded to switch.

#### 4. Example:

The following example specifies upgrading firmware (file name: **flash.tgz**) from tftp server (IP address: **192.168.1.100**) to switch:

```
switch_a#install image 192.168.1.100 flash.tgz
switch_a#
```

Please follow the message on the screen during the firmware upgrade process. Do not turn off the power or perform other functions during this period of time.

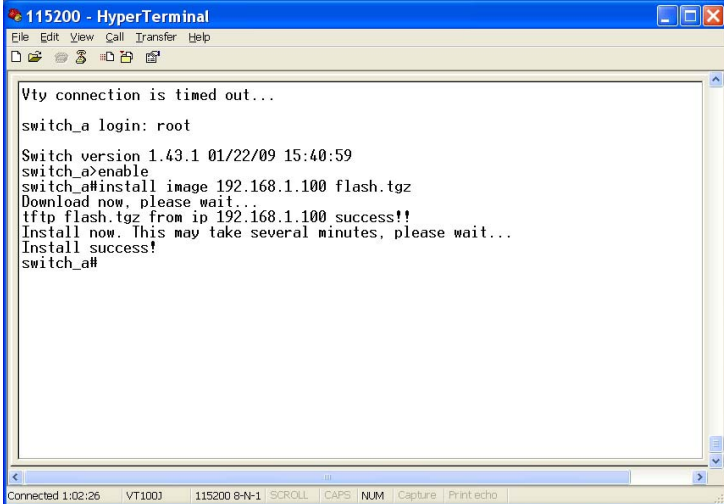


The screenshot shows a HyperTerminal window titled "115200 - HyperTerminal". The terminal output is as follows:

```
Vty connection is timed out...
switch_a login: root
Switch version 1.43.1 01/22/09 15:40:59
switch_a>enable
switch_a#install image 192.168.1.100 flash.tgz
Download now, please wait...
tftp flash.tgz from ip 192.168.1.100 success!!
Install now. This may take several minutes, please wait...
Install success!
switch_a#
```

The status bar at the bottom of the window shows: Connected 1:02:26 VT1003 115200 8-N-1 SCROLL CAPS NUM Capture Print echo

At the "switch\_a#" prompt just type in "reload" and press <Enter> to reboot the switch after completing the upgrade process.

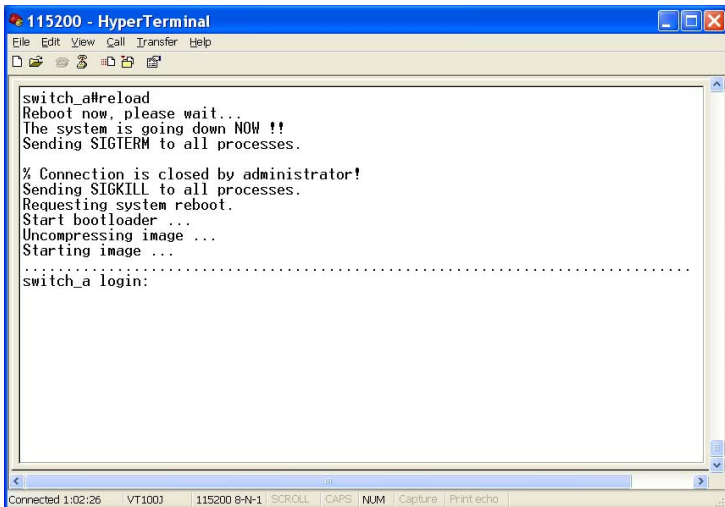

```

switch_a#reload
Reboot now, please wait...
The system is going down NOW !!
Sending SIGTERM to all processes.

% Connection is closed by administrator!
Sending SIGKILL to all processes.
Requesting system reboot.
Start bootloader ...
Uncompressing image ...
Starting image ...
.....
switch_a login:

```

### Alarm Setting

Alarm-trigger if:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable or disable alarm trigger on interface.

3. Command Syntax:

(no) alarm-trigger if INTERFACE

INTERFACE specifies the interface.

4. Example:

The following example enables alarm trigger on interface "fe1" to switch:

```
switch_a(config)#alarm-trigger if fe1
switch_a(config)#
```

### Reboot

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:  
Use **reload** command to restart switch.

3. Command Syntax:  
reload

4. Example:  
The following example specifies restarting switch:

```
switch_a#reload  
switch_a login:
```

---

### **Logout**

1. Command Mode: Exec mode or Privileged Exec mode  
Logon to Exec Mode (View Mode) or Privileged Exec Mode (Enable Mode).  
The **switch\_a>** or **switch\_a#** prompt will show on the screen.

```
switch_a>
```

```
switch_a#
```

2. Usage:  
Use **logout** command to exit from the Exec mode or Privileged Exec mode.

3. Command Syntax:  
logout

4. Example:  
The following example specifies to exit from the Exec mode or Privileged Exec mode.

```
switch_a>logout  
switch_a login:
```

## Port

Configuration, Port Status, Rate Control, RMON Statistics, Per Port Vlan Activities

### Configuration

Port Name:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use the **portname** command to specify the ascii name of port.  
Use the **no portname** to cancel the ascii name of port.

3. Command Syntax:

portname LINE

(no) portname

LINE specifies the ascii name of port.

4. Example:

The following example shows the use of the **portname** command to specify the ascii name **fe1** for the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#portname fe1
switch_a(config-if)#
```

Admin Setting:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use the **shutdown** command to shut down the selected interface.  
Use the **no shutdown** to disable this function.



3. Command Syntax:  
(no) shutdown

4. Example:

The following example shows the use of the **shutdown** command to shut down the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#shutdown
switch_a(config-if)#
```

Bandwidth:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to specify the bandwidth for each interface. The bandwidth value is in bits.

Use the no parameter with this command to remove the bandwidth for each interface.

3. Command Syntax:  
Bandwidth BANDWIDTH

no bandwidth

BANDWIDTH

<1-100000000000 bits> (usable units: k, m, g)

<1-999>k|m for 1 to 999 kilo bits or mega bits.

1g for 1 giga bits.

4. Example:

The following example shows the use of bandwidth BANDWIDTH (**10 mega bits**) to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#bandwidth 10m
switch_a(config-if)#
```

Duplex:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use **duplex** command to specify the duplex mode to be used for each interface.

Use the **no duplex** to disable this function.

## 3. Command Syntax:

(no) duplex MODE

MODE specifies the duplex mode: auto, full, half.

## 4. Example:

The following example shows the use of **duplex** MODE (**full**) to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#duplex full
switch_a(config-if)#
```

---

Flow control:

## 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use **flowcontrol on** command to enable flow control, and configure the flow control mode for the port.

Use the **no flowcontrol** to disable this function.

## 3. Command Syntax:

flowcontrol on

no flowcontrol

## 4. Example:

The following example shows the use of **flowcontrol on** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#flowcontrol on
switch_a(config-if)#
```

### Port Status

1. Command Mode: Exec mode or Privileged Exec mode  
Logon to Exec Mode (View Mode) or Privileged Exec Mode (Enable Mode).  
The **switch\_a>** or **switch\_a#** prompt will show on the screen.

```
switch_a>
```

```
switch_a#
```

2. Usage:

Use the **show interface** command to display interface configuration and status.

3. Command Syntax:

show interface IFNAME

IFNAME specifies the name of the interface for which status and configuration information is desired.

4. Example:

The following example shows the use of **show interface** to display interface configuration and status of the interface fe1 (port 1):

```
switch_a>show interface fe1
```

### Rate Control

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.  
The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
```

```
switch_a(config-if)#
```

2. Usage:

Use this command to specify the ingress/egress rate to be used for each interface. The bandwidth value is in bits.

Use the no parameter with this command to remove the ingress/egress rate to be used for each interface.

3. Command Syntax:

(no) rate-control ingress/egress VALUE

VALUE

<1-10000000000 bits> (usable units: k, m, g)

<1-999>k|m for 1 to 999 kilo bits or mega bits.

1g for 1 giga bits.

4. Example:

The following example shows the use of rate-control ingress VALUE (**10 mega bits**) to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#rate-control ingress 10m
switch_a(config-if)#
```

### ***RMON Statistics***

1. Command Mode: Exec mode or Privileged Exec mode  
 Logon to Exec Mode (View Mode) or Privileged Exec Mode (Enable Mode).  
 The **switch\_a>** or **switch\_a#** prompt will show on the screen.

```
switch_a>
```

```
switch_a#
```

2. Usage:

Use the **show interface statistics** command to display RMON statistics of interface.

3. Command Syntax:

show interface statistics IFNAME

IFNAME specifies the name of the interface for which RMON statistics is desired.

4. Example:

The following example shows the use of **show interface statistics** to display RMON statistics of the interface fe1 (port 1):

```
switch_a>show interface statistics fe1
```

### ***Per Port Vlan Activities***

1. Command Mode: Exec mode or Privileged Exec mode  
 Logon to Exec Mode (View Mode) or Privileged Exec Mode (Enable Mode).  
 The **switch\_a>** or **switch\_a#** prompt will show on the screen.

```
switch_a>
```

```
switch_a#
```

2. Usage:

Use **show vlan** command to display information about a particular VLAN by specifying the VLAN ID.

3. Command Syntax:

show vlan <2-4094>

<2-4094> VLAN ID.

4. Example:

The following is an output of **show vlan** command displaying information about VLAN 2:

```
switch_a>show vlan 2
```

## Switching

Bridging, Static MAC Entry, Port Mirroring, PoE, PoE Scheduling

### **Bridging**

Aging Time (seconds):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify an ageing-out time for a learned MAC address. The learned MAC address will persist till this specified time.

3. Command Syntax:

Bridge GROUP ageing-time AGEINGTIME

no bridge GROUP ageing-time

Group = <1-1> The ID of the bridge-group that this ageing time is for.

AGEINGTIME = <10-1000000> The number of seconds of persistence.

4. Example:

The following example sets the new AGEINGTIME (**1000**) to bridge GROUP (1):

```
switch_a(config)#bridge 1 ageing-time 1000
switch_a(config)#
```

Threshold level (0-100):

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **storm-control level** command to specify the rising threshold level for broadcasting, multicast, or destination lookup failure traffic. The storm control action occurs when traffic utilization reaches this level.

3. Command Syntax:

storm-control level LEVEL

LEVEL <0-100> specifies the percentage of the threshold; percentage of the maximum speed (pps) of the interface.

4. Example:

The following example shows setting **storm-control level LEVEL (30)** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#storm-control level 30
switch_a(config-if)#
```

Broadcast:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **storm-control broadcast enable** command to enable broadcast traffic.  
Use **no storm-control broadcast** command to disable broadcast traffic.

3. Command Syntax:

```
storm-control broadcast enable
no storm-control broadcast
```

4. Example:

The following example shows setting **storm-control broadcast enable** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#storm-control broadcast enable
switch_a(config-if)#
```

Multicast:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **storm-control multicast enable** command to enable multicast traffic.  
Use **no storm-control multicast** command to disable multicast traffic.

3. Command Syntax:  
storm-control multicast enable  
no storm-control multicast

4. Example:  
The following example shows setting **storm-control multicast enable** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#storm-control multicast enable
switch_a(config-if)#
```

---

DLF:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:  
Use **storm-control dlf enable** command to enable destination lookup failure traffic.  
Use **no storm-control dlf** command to disable destination lookup failure traffic.

3. Command Syntax:  
storm-control dlf enable  
no storm-control dlf  
dlf destination lookup failure

4. Example:  
The following example shows setting **storm-control dlf enable** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#storm-control dlf enable
switch_a(config-if)#
```

---

### Static MAC Entry

Static-MAC-Entry Forward:

1. Command Mode: Configure mode



Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to statically configure a bridge entry to forward matching frames.

3. Command Syntax:

bridge GROUP address MAC forward IFNAME VLANID

no bridge GROUP address MAC forward IFNAME VLANID

GROUP <1-1> Bridge-group ID used for bridging.

MAC the Media Access Control (MAC) address in the HHHH.HHHH.HHHH format.

IFNAME the interface on which the frame comes in.

VLANID The VID of the VLAN that will be enabled or disabled on the bridge <2-4094>.

4. Example:

The following example configures a bridge GROUP (1) to forward matching frames (MAC address **2222.2222.2222**) to the interface fe1 (port 1) in vlan VLANID (2):

```
switch_a(config)#bridge 1 address 2222.2222.2222 forward fe1 vlan 2
switch_a(config)#
```

Static-MAC-Entry Discard:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to statically configure a bridge entry to discard matching frames in a particular VLAN.

3. Command Syntax:

bridge GROUP address MAC discard vlan VLANID

no bridge GROUP address MAC discard vlan VLANID

GROUP <1-1> Bridge-group ID used for bridging.

MAC the Media Access Control (MAC) address in the HHHH.HHHH.HHHH format.

VLANID The VID of the VLAN on the bridge <1-4094>.

4. Example:

The following example configures a bridge GROUP (1) to discard matching frames (MAC address **2222.2222.2222**) in vlan VLANID (1):

```
switch_a(config)#bridge 1 address 2222.2222.2222 discard vlan 1
switch_a(config)#
```

### Port Mirroring

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to define a mirror source port and its direction.  
Use the no parameter with this command to disable port mirroring by the destination port on the specified source port.

3. Command Syntax:

```
mirror interface SOURCEPORT direction SNOOPDIRECTION
no mirror interface SOURCEPORT
```

SOURCEPORT Name of the Source interface to be used.  
SNOOPDIRECTION [both|receive|transmit]  
both Specifies mirroring of traffic in both directions.  
receive Specifies mirroring of received traffic.  
transmit Specifies mirroring of transmitted traffic.

4. Example:

The following example enables port mirroring by the destination port fe1 (port 1) on the specified source port fe2 (port 2):

```
switch_a(config)#interface fe1
switch_a(config-if)#mirror interface fe2 direction both
switch_a(config-if)#
```

### PoE

System Power Budget:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).  
The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify the power budget (Watts) to be set to Switch.

3. Command Syntax:

poE system-power-budget LEVEL

LEVEL <1-800> specifies the power budget (Watts) to be set to Switch.

4. Example:

The following example sets new power budget 246 Watts to Switch:

```
switch_a(config)#poE system-power-budget 246
switch_a(config)#
```

Enable Mode:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **poE enable** command to enable this port to discover Powered Device (PD) connected to this port.

Use the **no poE enable** to disable this function.

3. Command Syntax:

(no) poE enable

4. Example:

The following example shows the use of **poE enable** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#poE enable
switch_a(config-if)#
```

Fixed Power Limit (W):

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to specify the fixed power limit for this port to provide power to PD.

### 3. Command Syntax:

`poe fixed-power-limit LEVEL`

LEVEL <1-15.4> specifies the fixed power limit (Watts) for this port to provide power to PD.

### 4. Example:

The following example sets new fixed power limit 15 Watts to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#poe fixed-power-limit 15
switch_a(config-if)#
```

---

### Power Priority:

#### 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

#### 2. Usage:

Use this command to specify the power priority to this port.

### 3. Command Syntax:

`poe power-priority PRIORITY`

PRIORITY specifies high, medium, low power priority for this port.

### 4. Example:

The following example sets **high** power priority to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#poe power-priority high
switch_a(config-if)#
```

---

### Power Down Alarm:

#### 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **poe power-down-alarm enable** command to enable power down alarm to this port.

Use the **no poe power-classification enable** to disable this function.

3. Command Syntax:

(no) poe power-down-alarm enable

4. Example:

The following example shows the use of **poe power-down-alarm enable** to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#poe power-down-alarm enable
switch_a(config-if)#
```

---

### **PoE Scheduling**

PoE Schedule:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to enable PoE scheduling to this port.

3. Command Syntax:

poe scheduling enable

4. Example:

The following example enables PoE scheduling to the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#poe scheduling enable
switch_a(config-if)#
```

---

PoE Schedule:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
```

```
switch_a(config-if)#
```

2. Usage:

Use this command to set PoE scheduling to this port.

3. Command Syntax:

```
poe schedule-time DAY HOUR
```

DAY <0-6> specifies Sunday ~ Saturday to Switch.

HOUR <0-23> specifies hours to Switch.

```
no poe schedule-time DAY
```

4. Example:

The following example sets PoE scheduling to the interface fe1 (port 1):

```
switch_a(config)#interface fe1  
switch_a(config-if)#poe schedule-time 3 0-10,12,14-20, 22-23  
switch_a(config-if)#
```

## Trunking

Port Trunking, LACP Trunking

### Port Trunking

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **static-channel-group** command to create a static aggregator, or add a member port to an already-existing static aggregator.

Use the **no static-channel-group** command to detach the port from the static aggregator.

3. Command Syntax:

static-channel-group <1-8>

no static-channel-group

<1-8> Channel group number.

Maximum 8 ports in static-channel-group 1 to 6.

Maximum 4 ports in static-channel-group 7 and 8.

4. Example:

The following example adding the interface fe1 (port 1) to **static-channel-group 1**:

```
switch_a(config)#interface fe1
switch_a(config-if)#static-channel-group 1
switch_a(config-if)#
```

---

### LACP Trunking

Static Channel Group:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use **static-channel-group** command to create a static aggregator, or add a member port to an already-existing static aggregator.

Use the **no static-channel-group** command to detach the port from the static aggregator.

## 3. Command Syntax:

```
static-channel-group <1-8>
```

```
no static-channel-group
```

<1-8> Channel group number.

Maximum 8 ports in static-channel-group 1 to 6.

Maximum 4 ports in static-channel-group 7 and 8.

## 4. Example:

The following example adding the interface fe1 (port 1) to **static-channel-group 1**:

```
switch_a(config)#interface fe1
switch_a(config-if)#static-channel-group 1
switch_a(config-if)#
```

## Channel Group:

### 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use **channel-group** command to add a port to a channel group specified by the channel group number (<1-8>). This command enables link aggregation on a port, so that it may be selected for aggregation by the local system.

Use the **no channel-group** command to turn off link aggregation on a port.

## 3. Command Syntax:

```
channel-group <1-8> mode MODE
```

```
no channel-group
```

<1-8> Channel group number.

Maximum 4 ports in channel-group 1 to 6.

Maximum 4 ports in channel-group 7 and 8.

MODE

active Enable initiation of LACP negotiation on a port.

passive Disable initiation of LACP negotiation on a port.

## 4. Example:



The following example enables initiation of LACP negotiation on the interface fe1 (port 1) to **channel-group 1**:

```
switch_a(config)#interface fe1
switch_a(config-if)#channel-group 1 mode active
switch_a(config-if)#
```

Clear LACP Counters:

1. Command Mode: Privileged Exec mode  
Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use this command to clear all counters of all present LACP aggregators or a given LACP aggregator.

3. Command Syntax:

```
clear lacp (<1-65535>) counters
<1-65535> Channel-group number.
```

4. Example:

The following example clears all counters of LACP channel group 1:

```
switch_a#clear lacp 1 counters
switch_a#
```

LACP Port Priority:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **lacp port-priority** command to set the priority of a channel. Channels are selected for aggregation based on their priority with the higher priority (numerically lower) channels selected first.

Use the **no lacp port-priority** command to reset the priority of port to the default value (32768).

3. Command Syntax:

```
lacp port-priority <1-65535>
no lacp port-priority
```

<1-65535> Specify the LACP port priority.

#### 4. Example:

The following example sets the LACP port priority **34** of interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#lacp port-priority 34
switch_a(config-if)#
```

#### LACP Timeout:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

#### 2. Usage:

Use **lacp timeout** command to set the short or long timeout on a port. The default is long timeout

#### 3. Command Syntax:

```
lacp timeout shor | long
timeout Number of seconds before invalidating a received LACP data unit (DU).
short LACP short timeout. Short timeout value is 3 seconds.
long LACP long timeout. Long timeout value is 90 seconds.
```

#### 4. Example:

The following example sets the LACP short timeout on interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#lacp timeout short
switch_a(config-if)#
```

#### LACP System Priority:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).  
The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

#### 2. Usage:

Use **lacp system-priority** command to set the system priority of a local system. This is used in determining the system responsible for resolving conflicts in the choice of aggregation groups. Note: Lower numerical values

have higher priorities.

Use **no lacp system-priority** command to reset the system priority of the local system to the default value (32768).

3. Command Syntax:

```
lacp system-priority <1-65535>
```

```
no lacp system-priority
```

<1-65535> LACP system priority. The default system priority is 32768.

4. Example:

The following example sets the LACP system priority **6700**:

```
switch_a(config)#lacp system-priority 6700
switch_a(config)#
```

## STP / Ring

Global Configuration, RSTP Port Setting, MSTP Properties, MSTP Instance Setting, MSTP Port Setting, Ring Setting, Chain Setting

### **Global Configuration**

STP Version:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to choose the Spanning Tree protocol, Rapid Spanning Tree protocol, or Multiple Spanning Tree protocol on a bridge.

3. Command Syntax:

```
bridge GROUP protocol PROTOCOL vlan-bridge
GROUP <1-1> Bridge group name used for bridging.
PROTOCOL
ieee IEEE 802.1Q spanning-tree protocol.
mstp IEEE 802.1s multiple spanning-tree protocol.
rstp IEEE 802.1w rapid spanning-tree protocol.
```

4. Example:

The following example chooses the PROTOCOL (**rstp**) on bridge GROUP (1):

```
switch_a(config)#bridge 1 protocol rstp vlan-bridge
switch_a(config)#
```

Multiple Spanning Tree Protocol:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable the Multiple Spanning Tree protocol on a bridge. Use the no form of the command to disable the Multiple Spanning Tree protocol on a bridge.

3. Command Syntax:

```
bridge GROUP multiple-spanning-tree enable
```

no bridge GROUP multiple-spanning-tree enable BRIDGE-FORWARD  
 GROUP <1-1> Bridge group name used for bridging.  
 BRIDGE-FORWARD Puts all ports of the specified bridge into the forwarding state.

4. Example:

The following example enables or disables the **multiple-spanning-tree** on bridge GROUP (1):

```
switch_a(config)#bridge 1 multiple-spanning-tree enable
switch_a(config)#no bridge 1 multiple-spanning-tree enable bridge-forward
switch_a(config)#
```

Rapid Spanning Tree Protocol:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable the Rapid Spanning Tree protocol on a bridge.  
 Use the no form of the command to disable the Rapid Spanning Tree protocol on a bridge.

3. Command Syntax:

bridge GROUP rapid-spanning-tree enable  
 no bridge GROUP rapid-spanning-tree enable BRIDGE-FORWARD  
 GROUP <1-1> Bridge group name used for bridging.  
 BRIDGE-FORWARD Puts all ports of the specified bridge into the forwarding state.

4. Example:

The following example enables or disables the **rapid-spanning-tree** on bridge GROUP (1):

```
switch_a(config)#bridge 1 rapid-spanning-tree enable
switch_a(config)#no bridge 1 rapid-spanning-tree enable bridge-forward
switch_a(config)#
```

Spanning Tree Protocol:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable the Spanning Tree protocol on a bridge.  
 Use the no form of the command to disable the Spanning Tree protocol on a bridge.

3. Command Syntax:

```
bridge GROUP spanning-tree enable
no bridge GROUP spanning-tree enable BRIDGE-FORWARD
GROUP <1-1> Bridge group name used for bridging.
BRIDGE-FORWARD Puts all ports of the specified bridge into the forwarding state.
```

4. Example:

The following example enables or disables the **spanning-tree** on bridge GROUP (1):

```
switch_a(config)#bridge 1 spanning-tree enable
switch_a(config)#no bridge 1 spanning-tree enable bridge-forward
switch_a(config)#
```

Bridge Priority (0..61440):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set bridge priority for the common instance. Using a lower priority indicates a greater likelihood of the bridge becoming root.

3. Command Syntax:

```
bridge GROUP priority PRIORITY
no bridge GROUP priority
GROUP <1-1> The ID of the bridge group for which the priority is set.
PRIORITY <0-61440> The bridge priority.
```

4. Example:

The following example sets the **priority** PRIORITY (**4096**) of bridge GROUP (1):

```
switch_a(config)#bridge 1 priority 4096
switch_a(config)#
```

Hello Time (sec) (1..9):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the hello-time, the time in seconds after which (if this bridge is the root bridge) all the bridges in a bridged LAN exchange Bridge Protocol Data Units (BPDUs).

3. Command Syntax:

```
bridge GROUP hello-time HELLOTIME
```

```
no bridge GROUP hello-time
```

GROUP <1-1> The ID of the bridge group to which this hello time is assigned.

HELLOTIME <1-9> The hello BPDU interval in seconds.

4. Example:

The following example sets the **hello-time HELLOTIME (9)** of bridge GROUP (1):

```
switch_a(config)#bridge 1 hello-time 9
switch_a(config)#
```

Max Age (sec) (6..28):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the max-age for a bridge.

Use the no parameter with this command to restore the default value of max-age.

3. Command Syntax:

```
bridge GROUP max-age MAXAGE
```

```
no bridge GROUP max-age
```

GROUP <1-1> The ID of the bridge group to which this maximum age time is assigned.

MAXAGE <6-28> The maximum time, in seconds, to listen for the root bridge.

4. Example:

The following example sets the **max-age MAXAGE (28)** of bridge GROUP (1):

```
switch_a(config)#bridge 1 max-age 28
switch_a(config)#
```

Forward Delay (sec) (4..30):

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the time (in seconds) after which (if this bridge is the root bridge) each port changes states to learning and forwarding.

Use the no parameter with this command to restore the default value.

3. Command Syntax:

bridge GROUP forward-time FORWARD\_DELAY

no bridge GROUP forward-time

GROUP <1-1> The ID of the bridge group to which this delay time is assigned.

FORWARD\_DELAY <4-30> the forwarding time delay in seconds.

4. Example:

The following example sets the **forward-time FORWARD\_DELAY (30)** of bridge GROUP (1):

```
switch_a(config)#bridge 1 forward-time 30
switch_a(config)#
```

---

### **RSTP Port Setting**

Priority(Granularity 16):

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to set the port priority for a bridge. The lower priority indicates a greater likelihood of the bridge becoming root.

3. Command Syntax:

bridge GROUP priority PRIORITY

GROUP <1-1> the ID of the bridge group.

PRIORITY <0-240> The priority to be assigned to the group.

4. Example:

The following example sets the priority PRIORITY (100) of the interface fe1



(port 1) of bridge GROUP (1):

```
switch_a(config)#interface fe1
switch_a(config-if)#bridge 1 priority 100
switch_a(config-if)#
```

Admin. Path Cost:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to set the cost of a path associated with a bridge-group.  
Use the no parameter with this command to restore the default cost of a path associated with a bridge-group.

3. Command Syntax:

bridge GROUP path-cost PATHCOST

no bridge GROUP path-cost

GROUP <1-1> the ID of the bridge group.

PATHCOST <1-200000000> The cost to be assigned to the group.

4. Example:

The following example sets the cost (**123**) of the interface fe1 (port 1) of bridge GROUP (1):

```
switch_a(config)#interface fe1
switch_a(config-if)#bridge 1 path-cost 123
switch_a(config-if)#
```

Point to Point Link:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **spanning-tree link-type** command to set the link type of a port to enable or disable rapid transition.

Use the **no spanning-tree link-type** command to set a port to its default state and to disable rapid transition.

3. Command Syntax:

(no) spanning-tree link-type LINKTYPE

LINKTYPE The link type to be assigned to the port.

point-to-point Enable rapid transition.

shared Disable rapid transition.

4. Example:

The following example sets the link-type LINKTYPE (**point-to-point**) of the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#spanning-tree link-type point-to-point
switch_a(config-if)#
```

---

Autoedge:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **spanning-tree autoedge** command to assist in automatic identification of the edge port.

Use the **no spanning-tree autoedge** command to disable this feature.

3. Command Syntax:

(no) spanning-tree autoedge

4. Example:

The following example enables the **spanning-tree autoedge** of the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#spanning-tree autoedge
switch_a(config-if)#
```

---

Edgeport:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **spanning-tree edgeport** command to set a port as an edge-port and to enable rapid transitions.

Use the **no spanning-tree edgeport** command to set a port to its default state (not an edge-port) and to disable rapid transitions.

3. Command Syntax:

(no) spanning-tree edgeport

4. Example:

The following example enables the **spanning-tree edgeport** of the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#spanning-tree edgeport
switch_a(config-if)#
```

---

## **MSTP Properties**

Region Name:

1. Command Mode: MST Configuration mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to MST Configuration mode.

The **switch\_a(config-mst)#** prompt will show on the screen.

```
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#
```

2. Usage:

Use this command to create an MST region and specify a name to it. MST bridges of a region form different spanning trees for different VLANs. By default, each MST bridge starts with the region name as its bridge address. This means each MST bridge is a region by itself, unless specifically added to one.

3. Command Syntax:

bridge GROUP region REGION\_NAME

no bridge GROUP region

GROUP <1-1> Specify the bridge-group ID.

REGION\_NAME Specify the name of the region.

4. Example:

The following example creates an MST region and specifies a name (**regionname**) to it in bridge GROUP (1):

```
Switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#bridge 1 region regionname
switch_a(config-mst)#
```

#### Revision Level:

1. Command Mode: MST Configuration mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to MST Configuration mode.

The **switch\_a(config-mst)#** prompt will show on the screen.

```
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#
```

#### 2. Usage:

Use this command to specify the number for configuration information. The default value of revision number is 0.

#### 3. Command Syntax:

```
bridge GROUP revision REVISION_NUM
GROUP <1-1> Specify the bridge-group ID.
REVISION_NUM <0-255> Revision number.
```

#### 4. Example:

The following example specifies a revision number (**25**) of MST configuration in bridge GROUP (**1**):

```
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#bridge 1 revision 25
switch_a(config-mst)#
```

#### Max Hops:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).  
The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

#### 2. Usage:

Use this command to specify the maximum allowed hops for BPDU in an MST region. This parameter is used by all the instances of the MST. Specifying the max hops for a BPDU prevents the messages from looping indefinitely in the network. When a bridge receives a MST BPDU that has exceeded the allowed max-hops, it discards the BPDU.

#### 3. Command Syntax:

```
bridge GROUP max-hops HOP_COUNT
no bridge GROUP max-hops
```

GROUP <1-1> Specify the bridge-group ID.  
 HOP\_COUNT Maximum hops the BPDU will be valid for.

4. Example:

The following example specifies the maximum allowed hops (**25**) for BPDU in bridge GROUP (**1**):

```
switch_a(config)#bridge 1 max-hops 25
switch_a(config)#
```

**MSTP Instance Setting**

Bridge Instance VLAN:

1. Command Mode: MST Configuration mode  
 Logon to Configure Mode (Configure Terminal Mode).  
 Then logon to MST Configuration mode.

The **switch\_a(config-mst)#** prompt will show on the screen.

```
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#
```

2. Usage:

Use this command to simultaneously add multiple VLANs for the corresponding instance of a bridge. This command can be used only after the VLANs are defined. Use the no parameter with this command to simultaneously remove multiple VLANs for the corresponding instance of a bridge.

3. Command Syntax:

```
bridge GROUP instance INSTANCE_ID vlan VLAN_ID
no bridge GROUP instance INSTANCE_ID vlan VLAN_ID
```

GROUP <1-1> Specify the bridge-group ID.  
 INSTANCE\_ID <1-15> Specify the instance ID.  
 VLAN\_ID <1-4094> Specify multiple VLAN IDs corresponding to the bridge instance

4. Example:

The following example associates multiple VLANs (**10**) and (**20**) to instance (**1**) of bridge GROUP (**1**):

```
switch_a(config)#bridge 1 protocol mstp
switch_a(config)#spanning-tree mst configuration
switch_a(config-mst)#bridge 1 instance 1 vlan 10, 20
switch_a(config-mst)#
```

Bridge Instance Priority:

1. Command Mode: Configure mode  
 Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the bridge priority for an MST instance to the value specified. Use the no parameter with this command to restore the default value of the bridge priority. The lower the priority of the bridge, the better the chances are the bridge becoming a root bridge or a designated bridge for the LAN. The priority values can be set only in increments of 4096.

3. Command Syntax:

```
bridge GROUP instance INSTANCE_ID priority BRIDGE_PRIORITY
no bridge GROUP instance INSTANCE_ID priority
GROUP <1-1> Specify the bridge-group ID.
INSTANCE_ID Specify the instance ID.
BRIDGE_PRIORITY <0-61440> Specify the bridge priority.
```

4. Example:

The following example sets the bridge priority (**0**) for an MST instance (**3**) in bridge GROUP (**1**):

```
switch_a(config)#bridge 1 instance 3 priority 0
switch_a(config)#
```

### **MSTP Port Setting**

Bridge-Group Instance:

1. Command Mode: Interface mode  
 Logon to Configure Mode (Configure Terminal Mode).  
 Then logon to Interface mode.  
 fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to assign a Multiple Spanning Tree instance to a port. Use the no parameter with this command to remove the instance.

3. Command Syntax:

```
bridge GROUP instance INSTANCE_ID
no bridge GROUP instance INSTANCE_ID
GROUP <1-1> Specify the bridge-group ID.
INSTANCE_ID Specify the instance ID.
```

4. Example:

The following example assigns a Multiple Spanning Tree instance (**3**) to a port (**fe1**) in bridge GROUP (**1**):

```
switch_a(config)#interface fe1
switch_a(config-if)#bridge-group 1 instance 3
switch_a(config-if)#
```

---

#### Bridge-Group Instance Priority:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

#### 2. Usage:

Use this command to set the port priority for a bridge group. The Multiple Spanning Tree Protocol uses port priority as a tiebreaker to determine which port should forward frames for a particular instance on a LAN, or which port should be the root port for an instance. A lower value implies a better priority. In the case of the same priority, the interface index will serve as the tiebreaker, with the lower-numbered interface being preferred over others. The permitted range is 0-240. The priority values can only be set in increments of 16.

#### 3. Command Syntax:

```
bridge GROUP instance INSTANCE_ID priority PRIORITY
GROUP <1-1> Specify the bridge-group ID.
INSTANCE_ID <1-15> Specify the instance ID.
PRIORITY <0-240> Specify the port priority in a range of <0-240>.
```

#### 4. Example:

The following example sets the port priority (**121**) for Multiple Spanning Tree instance (**3**) to a port (**fe1**) in bridge GROUP (**1**):

```
switch_a(config)#interface fe1
switch_a(config-if)#bridge-group 1 instance 3 priority 121
switch_a(config-if)#
```

---

#### Bridge-Group Instance Path-Cost:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use this command to set the cost of a path associated with an interface. Use the no parameter with this command to restore the default cost value of the path. A lower path-cost indicates a greater likelihood of the specific interface becoming a root.

## 3. Command Syntax:

```
bridge GROUP instance INSTANCE_ID path-cost PATH_COST
```

GROUP <1-1> Specify the bridge-group ID.

INSTANCE\_ID <1-15> Specify the instance ID.

PATH\_COST <1-200000000> Specify the cost of path in the range of <1-200000000>.

## 4. Example:

The following example sets the path cost (**1000**) for Multiple Spanning Tree instance (**3**) to a port (**fe1**) in bridge GROUP (**1**):

```
switch_a(config)#interface fe1
switch_a(config-if)#bridge-group 1 instance 3 path-cost 1000
switch_a(config-if)#
```

---

## Ring Setting

Ring state:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

## 2. Usage:

Use this command to enable Ring state. Use the no parameter with this command to disable Ring state.

## 3. Command Syntax:

```
bridge GROUP protocol ring
```

```
no bridge GROUP ring enable BRIDGE-FORWARD
```

GROUP <1-1> Specify the bridge-group ID.

BRIDGE-FORWARD Puts all ports of the specified bridge into the forwarding state.

## 4. Example:

The following example enables Ring state in bridge GROUP (**1**):

```
switch_a(config)#bridge 1 protocol ring
switch_a(config)#
```



Set ring port:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set Ring port 1 and Ring port 2.

3. Command Syntax:

```
ring set-port RING_PORT_1 RING_PORT_2
```

RING\_PORT\_1 Specify the Ring port 1.

RING\_PORT\_2 Specify the Ring port 2.

4. Example:

The following example sets the fe1 and fe2 as Ring port 1 and Ring port 2:

```
switch_a(config)#ring set-port fe1 fe2  
switch_a(config)#
```

---

Ring-coupling state:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable Ring-coupling state. Use the no parameter with this command to disable Ring-coupling state.

3. Command Syntax:

```
(no) ring-coupling enable
```

4. Example:

The following example enables Ring-coupling state:

```
switch_a(config)#ring-coupling enable  
switch_a(config)#
```

---

Set ring-coupling port:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set Ring-coupling port 1 and Ring-coupling port 2.

3. Command Syntax:

```
ring set-coupling-port COUPLING_PORT_1 COUPLING_PORT_2  
COUPLING_PORT_1 Specify the Ring-coupling port 1.  
COUPLING_PORT_2 Specify the Ring-coupling port 2.
```

4. Example:

The following example sets the fe3 and fe4 as Ring-coupling port 1 and Ring port-coupling 2:

```
switch_a(config)#ring set-coupling-port fe3 fe4  
switch_a(config)#
```

---

### **Chain Setting**

Chain Protocol:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1  
switch_a(config-if)#
```

2. Usage:

Use this command to set Chain Protocol to an interface. Use the no parameter with this command to revoke Chain Protocol from an interface.

3. Command Syntax:

```
chain port enable  
no chain port
```

4. Example:

The following example sets Chain Protocol to the interface fe1 (port 1):

```
switch_a(config)#interface fe1  
switch_a(config-if)#chain port enable  
switch_a(config-if)#
```

---

Chain Priority:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).  
The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the Switch priority for running chain protocol. Switch with lower priority will run as Master (forwarding) port. Use the no form of the command to restore default value (128).

3. Command Syntax:

```
bridge GROUP chain-priority <0-255>
no bridge GROUP chain-priority
  Group = <1-1> Bridge Group name for bridging.
  <0-255> The Switch priority for running chain protocol.
```

4. Example:

The following example sets the new Switch priority (**10**) to bridge GROUP (**1**):

```
switch_a(config)#bridge 1 chain-priority 10
switch_a(config)#
```

Chain Timeout:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the Switch timeout count for running chain protocol. That this timeout count multiplies 200ms is the chain recovery time. Use the no form of the command to restore default value (5).

3. Command Syntax:

```
bridge GROUP chain-timeout <3-255>
no bridge GROUP chain-timeout
  Group = <1-1> Bridge Group name for bridging.
  <3-255> The Switch timeout count for running chain protocol.
```

4. Example:

The following example sets the new Switch timeout (**10**) to bridge GROUP (**1**):

```
switch_a(config)#bridge 1 chain-timeout 10
switch_a(config)#
```

## VLAN

VLAN Mode Setting, 802.1Q VLAN Setting, 802.1Q Port Setting, Port Based VLAN

### 802.1Q VLAN Setting

VLAN Database:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **vlan database** command to enter the VLAN configuration mode.

3. Command Syntax:

vlan database

4. Example:

The following example changes to VLAN configuration mode from Configure mode:

```
switch_a(config)#vlan database
switch_a(config-vlan)#
```

Add VLAN/Delete VLAN:

1. Command Mode: VLAN Configure mode

Logon to Configure Mode (Configure Terminal Mode).

Logon to VLAN Configure Mode.

The **switch\_a(config-vlan)#** prompt will show on the screen.

```
switch_a(config)#vlan database
switch_a(config-vlan)#
```

2. Usage:

This command enables or disables the state of a particular VLAN on a bridge basis. Specifying the disable state causes all forwarding over the specified VLAN ID on the specified bridge to cease. Specifying the enable state allows forwarding of frames on the specified VLAN-aware bridge.

3. Command Syntax:

vlan VLANID bridge GROUP name VLAN\_NAME state enable/disable  
no vlan VLANID bridge GROUP

VLANID The VID of the VLAN that will be enabled or disabled on the bridge <2-4094>.

GROUP <1-1> The ID of the bridge-group on which the VLAN will be affected.

VLAN\_NAME The ASCII name of the VLAN. Maximum length: 16 characters.

enable Sets VLAN into an enable state.

disable Sets VLAN into a disable state.

#### 4. Example:

The following example enables the vlan VLANID (2) and name VLAN\_NAME (**vlan2**) of bridge GROUP (1):

```
switch_a(config-vlan)#vlan 2 bridge 1 name vlan2 state enable
switch_a(config-vlan)#
```

### 802.1Q Port Setting

Switchport mode access:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

#### 2. Usage:

Use **switchport mode access** command to set the switching characteristics of the Layer-2 interface to access mode, and classify untagged frames only.

Use the **no switchport access** command to reset the mode of the Layer-2 interface to access (default).

#### 3. Command Syntax:

```
switchport mode access
```

```
no switchport access
```

#### 4. Example:

The following example sets the **switchport mode access** of the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#switchport mode access
switch_a(config-if)#
```

Switchport mode hybrid:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

## 2. Usage:

Use **switchport mode hybrid** command to set the switching characteristics of the Layer-2 interface as hybrid, and classify both tagged and untagged frames.

Use the **no switchport hybrid** command to reset the mode of the Layer-2 interface to access (default).

## 3. Command Syntax:

switchport mode hybrid

switchport mode hybrid acceptable-frame-type all/vlan-tagged

no switchport hybrid

all Set all frames can be received.

vlan-tagged Set vlan-tagged frames can only be received.

## 4. Example:

The following example sets the **switchport mode hybrid** of the interface fe1 (port 1) and all frames to be received on interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#switchport mode hybrid acceptable-frame-type all
switch_a(config-if)#
```

Switchport mode trunk:

### 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

### 2. Usage:

Use **switchport mode trunk** command to set the switching characteristics of the Layer-2 interface as trunk, and specify only tagged frames.

Use the **no switchport trunk** command to reset the mode of the Layer-2 interface to access (default).

### 3. Command Syntax:

switchport mode trunk

no switchport trunk

### 4. Example:

The following example sets the **switchport mode trunk** of the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#switchport mode trunk
switch_a(config-if)#
```

Switchport hybrid allowed vlan:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to set the switching characteristics of the Layer-2 interface to hybrid. Both tagged and untagged frames will be classified over hybrid interfaces.

Use the no parameter to turn off allowed hybrid switching.

3. Command Syntax:

```
switchport hybrid allowed vlan all
switchport hybrid allowed vlan none
switchport hybrid allowed vlan add VLANID egress-tagged enable/disable
switchport hybrid allowed vlan remove VLANID
no switchport hybrid vlan
```

- all Allow all VLANs to transmit and receive through the Layer-2 interface.
- none Allow no VLANs to transmit and receive through the Layer-2 interface.
- add Add a VLAN to the member set.
- remove Remove a VLAN from the member set.
- VLANID <2-4094> The ID of the VLAN or VLANs that will be added to, or removed from, the Layer-2 interface.

For a VLAN range, specify two VLAN numbers: lowest, then highest number in the range, separated by a hyphen.

For a VLAN list, specify the VLAN numbers separated by commas.

egress-tagged

- enable Enable the egress tagging for the outgoing frames.
- disable Disable the egress tagging for the outgoing frames.

4. Example:

The following example specifies to **add** the interface fe1 (port 1) to VLANID (2) and **enable** the **egress-tagged** for the outgoing frames on interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#switchport hybrid allowed vlan add 2 egress-tagged enable
```

```
switch_a(config-if)#
```

Switchport trunk allowed vlan:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use this command to set the switching characteristics of the Layer-2 interface to trunk. The all parameter indicates that any VLAN ID is part of its port's member set. The none parameter indicates that no VLAN ID is configured on this port. The add and remove parameters will add and remove VLAN IDs to/from the port's member set.

Use the no parameter to remove all VLAN IDs configured on this port.

3. Command Syntax:

```
switchport trunk allowed vlan all
switchport trunk allowed vlan none
switchport trunk allowed vlan add VLANID
switchport trunk allowed vlan remove VLANID
switchport trunk allowed vlan except VLANID
no switchport trunk vlan
```

all Allow all VLANs to transmit and receive through the Layer-2 interface.

none Allow no VLANs to transmit and receive through the Layer-2 interface.

add Add a VLAN to transmit and receive through the Layer-2 interface.

remove Remove a VLAN from transmit and receive through the Layer-2 interface.

except All VLANs, except the VLAN for which the ID is specified, are part of its ports member set.

VLANID <2-4094> The ID of the VLAN or VLANs that will be added to, or removed from, the Layer-2 interface. A single VLAN, VLAN range, or VLAN list can be set.

For a VLAN range, specify two VLAN numbers: lowest, then highest number in the range, separated by a hyphen.

For a VLAN list, specify the VLAN numbers separated by commas.

4. Example:

The following example specifies to **add** the interface fe1 (port 1) to VLANID (2):

```
switch_a(config)#interface fe1
switch_a(config-if)#switchport trunk allowed vlan add 2
switch_a(config-if)#
```



---

### Port Based VLAN

Switchport portbase add/remove vlan:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1  
switch_a(config-if)#
```

2. Usage:

Use this command to set or remove the default VLAN for the interface.

3. Command Syntax:

switchport portbase add | remove vlan VLANID

VLANID The ID of the VLAN will be added to or removed from the Layer-2 interface.

4. Example:

The following example specifies to **add** the interface fe1 (port 1) to VLANID (2):

```
switch_a(config)#interface fe1  
switch_a(config-if)#switchport portbase add vlan 2  
switch_a(config-if)#
```

## QoS

Global Configuration, 802.1p Priority, DSCP

### **Global Configuration**

QoS:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **mls qos enable** command to globally enable QoS.

Use the **no mls qos** command to globally disable QoS.

3. Command Syntax:

mls qos enable

(no) mls qos

4. Example:

The following example globally enables QoS on the switch:

```
switch_a(config)#mls qos enable  
switch_a(config)#
```

---

Trust:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **mls qos trust** command to turn on QoS trust CoS or DSCP.

Use the **no mls qos trust** command to turn off QoS trust CoS or DSCP.

3. Command Syntax:

(no) mls qos trust cos/dscp

cos Class of Service.

dscp Differentiated Service Code Point.

4. Example:

The following example turns on QoS trust CoS on the switch:

```
switch_a(config)#mls qos trust cos  
switch_a(config)#
```

---

**Strict Priority:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **priority-queue out** command to enable the egress expedite queue.

Use the **no priority-queue out** command to disable the egress expedite queue.

3. Command Syntax:

(no) priority-queue out

4. Example:

The following example enables the egress expedite queue on the switch:

```
switch_a(config)#priority-queue out
switch_a(config)#
```

---

**Weighted Round Robin:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **wrr-queue bandwidth** command to specify the bandwidth ratios of the transmit queues.

3. Command Syntax:

wrr-queue bandwidth WRR\_WTS

WRR\_WTS Weighted Round Robin (WRR) weights for the 4 queues (4 values separated by spaces). Range is 1-20.

4. Example:

The following example specifies the bandwidth ratios of the transmit queues on the switch:

```
switch_a(config)#wrr-queue bandwidth 1 2 4 8
switch_a(config)#
```

### 802.1p Priority

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **wrr-queue cos-map** command to specify CoS values for a queue.

3. Command Syntax:

wrr-queue cos-map QUEUE\_ID COS\_VALUE

QUEUE\_ID Queue ID. Range is 0-3.

COS\_VALUE CoS values. Up to 8 values (separated by spaces). Range is 0-7.

4. Example:

The following example shows mapping CoS values 0 and 1 to queue 1 on the switch:

```
switch_a(config)#wrr-queue cos-map 1 0 1
switch_a(config)#
```

---

### DSCP

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **mls qos map dscp-queue** command to map the DSCP values to a queue.

3. Command Syntax:

mls qos map dscp-queue DSCP\_VALUE to QUEUE\_ID

DSCP\_VALUE DSCP values. Up to 8 values (separated by spaces). Range is 0-63.

QUEUE\_ID Queue ID. Range is 0-3.

4. Example:

The following example shows mapping DSCP values 0 to 3 to queue 1 on the switch:

```
switch_a(config)#mls qos map dscp-queue 0 1 2 3 to 1
switch_a(config)#
```

## SNMP

SNMP General Setting, SNMP v1/v2c, SNMP v3

### **SNMP General Setting**

SNMP Status:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server enable** command to enable and **no snmp-server enable** command to disable SNMP to the switch.

3. Command Syntax:

(no) snmp-server enable

4. Example:

The following example enables SNMP to the switch:

```
switch_a(config)#snmp-server enable
switch_a(config)#
```

---

Description:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server description** command to specify and **no snmp-server description** command to remove description for SNMP.

3. Command Syntax:

snmp-server description DESCRIPTION

no snmp-server description

DESCRIPTION The description for SNMP.

4. Example:

The following example specifies description (**description**) for SNMP:

```
switch_a(config)#snmp-server description description
switch_a(config)#
```

---

Location:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server location** command to specify and **no snmp-server location** command to remove location for SNMP.

3. Command Syntax:

snmp-server location LOCATION

no snmp-server location

LOCATION The location for SNMP.

4. Example:

The following example specifies location (**location**) for SNMP:

```
switch_a(config)#snmp-server location location
switch_a(config)#
```

---

Contact:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server contact** command to specify and **no snmp-server contact** command to remove contact for SNMP.

3. Command Syntax:

snmp-server contact CONTACT

no snmp-server contact

CONTACT The contact for SNMP.

4. Example:

The following example specifies contact (**contact**) for SNMP:

```
switch_a(config)#snmp-server contact contact
switch_a(config)#
```

---

Trap Community Name:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify trap community name for SNMP.

Use the no parameter with this command to remove trap community name for SNMP.

3. Command Syntax:

snmp-server trap-community <1-5> NAME

no snmp-server trap-community <1-5>

<1-5> The trap community 1-5.

NAME The trap community name for SNMP.

4. Example:

The following example specifies trap community name 1 (**name**) for SNMP:

```
switch_a(config)#snmp-server trap-community 1 name
switch_a(config)#
```

---

Trap Host IP Address:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify trap host IP address for SNMP.

Use the no parameter with this command to remove trap host IP address for SNMP.

3. Command Syntax:

snmp-server trap-ipaddress <1-5> IP-ADDRESS

no snmp-server trap-ipaddress <1-5>

<1-5> The trap host IP address 1-5.

IP-ADDRESS The trap host IP address for SNMP. A.B.C.D specifies the IP address.

4. Example:

The following example specifies trap host 1 IP address (**192.168.1.20**) for SNMP:

```
switch_a(config)#snmp-server trap-ipaddress 1 192.168.1.20
switch_a(config)#
```

---

**Link Down Trap:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server trap-type enable linkDown** command to enable link down trap for SNMP.

Use the **no snmp-server trap-type enable linkDown** command to disable link down trap for SNMP.

3. Command Syntax:

(no) snmp-server trap-type enable linkDown

4. Example:

The following example enables link down trap for SNMP:

```
switch_a(config)#snmp-server trap-type enable linkDown  
switch_a(config)#
```

---

**Link Up Trap:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server trap-type enable linkUp** command to enable link up trap for SNMP.

Use the **no snmp-server trap-type enable linkUp** command to disable link up trap for SNMP.

3. Command Syntax:

(no) snmp-server trap-type enable linkUp

4. Example:

The following example enables link up trap for SNMP:

```
switch_a(config)#snmp-server trap-type enable linkUp  
switch_a(config)#
```

---

**SNMP v1/v2c**

Get Community Name:

1. Command Mode: Configure mode



Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server community get** command to specify and **no snmp-server community get** command to remove get community name for SNMP.

3. Command Syntax:

snmp-server community get NAME

no snmp-server community get

NAME The get community name for SNMP.

4. Example:

The following example specifies get community name (**name**) for SNMP:

```
switch_a(config)#snmp-server community get name  
switch_a(config)#
```

---

Set Community Name:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **snmp-server community set** command to specify and **no snmp-server community set** command to remove set community name for SNMP.

3. Command Syntax:

snmp-server community set NAME

no snmp-server community set

NAME The set community name for SNMP.

4. Example:

The following example specifies set community name (**name**) for SNMP:

```
switch_a(config)#snmp-server community set name  
switch_a(config)#
```

---

### SNMP v3

SNMPv3 No-Auth:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Add a user using snmp v3 with read-only or read-write access mode and without authentication. Use the no form of the command to delete this user.

3. Command Syntax:

(no) snmp-server v3-user USERNAME (ro | rw) noauth

USERNAME Specify a user name.

ro read-only access mode

rw read-write access mode

4. Example:

The following example adds a user (**myuser**) using snmp v3 with read-only access mode and without authentication:

```
switch_a(config)#snmp-server v3-user myuser ro noauth
switch_a(config)#
```

SNMPv3 Auth-MD5, SNMPv3 Auth-SHA:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Add a user using snmp v3 with read-only or read-write access mode and with MD5 or SHA authentication. Use the no form of the command to delete this user.

3. Command Syntax:

(no) snmp-server v3-user USERNAME (ro | rw) auth (md5 | sha)

AUTH\_PASSWORD

USERNAME Specify a user name.

ro read-only access mode

rw read-write access mode

md5 authentication method

sha authentication method

AUTH\_PASSWORD authentication password

4. Example:

The following example adds a user (**myuser**) using snmp v3 with read-write access mode and MD5 authentication (**mypassword**):

```
switch_a(config)#snmp-server v3-user myuser rw auth md5 mypassword
switch_a(config)#
```

SNMPv3 Priv Auth-MD5, SNMPv3 Priv Auth-SHA:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Add a user using snmp v3 with read-only or read-write access mode, MD5 or SHA authentication, and privacy. Use the no form of the command to delete this user.

3. Command Syntax:

(no) snmp-server v3-user USERNAME (ro | rw) priv auth (md5 | sha) AUTH\_PASSWORD des PRIV\_PASS\_PHRASE

USERNAME Specify a user name.

ro read-only access mode

rw read-write access mode

md5 authentication method

sha authentication method

AUTH\_PASSWORD authentication password

PRIV\_PASS\_PHRASE encryption pass phrase

4. Example:

The following example adds a user (**myuser**) using snmp v3 with read-write access mode, MD5 authentication (**mypassword**), and encryption pass phrase (**mypassphrase**):

```
switch_a(config)#snmp-server v3-user myuser rw priv md5 mypassword
des mypassphrase
switch_a(config)#
```

## 802.1x

Radius Configuration, Port Authentication

### **Radius Configuration**

Radius Status:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **dot1x system-auth-ctrl** command to globally enable authentication.

Use **no dot1x system-auth-ctrl** command to globally disable authentication.

3. Command Syntax:

(no) dot1x system-auth-ctrl

4. Example:

The following example globally enables authentication:

```
switch_a(config)#dot1x system-auth-ctrl
switch_a(config)#
```

---

Radius Server IP:

Radius Server Port:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify the IP address of the remote radius server host and assign authentication and accounting destination port number.

3. Command Syntax:

(no) radius-server host IP-ADDRESS auth-port PORT

IP-ADDRESS A.B.C.D specifies the IP address of the radius server host.

PORT specifies the UDP destination port for authentication requests. The host is not used for authentication if set to 0.

4. Example:

The following example specifies the IP address (**192.168.1.100**) of the remote radius server host and assigns authentication and accounting

destination port number (**1812**):

```
switch_a(config)#radius-server host 192.168.1.100 auth-port 1812
switch_a(config)#
```

Secret Key:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the shared secret key between a Radius server and a client.

3. Command Syntax:

(no) radius-server host IP-ADDRESS key KEY

IP-ADDRESS A.B.C.D specifies the IP address of the radius server host.

KEY specifies the secret key shared among the radius server and the 802.1x client.

4. Example:

The following example specifies the IP address (**192.168.1.100**) of the remote radius server host and set the secret key (**ipi**) shared among the radius server and the 802.1x client:

```
switch_a(config)#radius-server host 192.168.1.100 key ipi
switch_a(config)#
```

Timeout:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify the number of seconds a Switch waits for a reply to a radius request before retransmitting the request.

3. Command Syntax:

radius-server timeout SEC

no radius-server timeout

SEC <1-1000> The number of seconds for a Switch to wait for a server host to reply before timing out. Enter a value in the range 1 to 1000.

4. Example:

The following example specifies **20** seconds for the Switch to wait for a server host to reply before timing out:

```
switch_a(config)#radius-server timeout 20
switch_a(config)#
```

Retransmit:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify the number of times the Switch transmits each radius request to the server before giving up.

3. Command Syntax:

radius-server retransmit RETRIES

no radius-server retransmit

RETRIES <1-100> Specifies the retransmit value. Enter a value in the range 1 to 100.

4. Example:

The following example specifies the retransmit value **12**:

```
switch_a(config)#radius-server retransmit 12
switch_a(config)#
```

---

### **Port-Based Authentication**

Authentication State:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

2. Usage:

Use **dot1x reauthentication** command to enable reauthentication on a port.

Use **no dot1x reauthentication** command to disable reauthentication on a port.

3. Command Syntax:

(no) dot1x reauthentication

#### 4. Example:

The following example specifies to enable reauthentication on the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#dot1x reauthentication
switch_a(config-if)#
```

---

#### Port Control:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
switch_a(config-if)#
```

#### 2. Usage:

Use this command to force a port state.

Use **no dot1x port-control** command to remove a port from the 802.1x management.

#### 3. Command Syntax:

dot1x port-control auto | force-authorized | force-unauthorized

no dot1x port-control

auto Specify to enable authentication on port.

force-authorized Specify to force a port to always be in an authorized state.

force-unauthorized Specify to force a port to always be in an unauthorized state.

#### 4. Example:

The following example specifies to enable authentication on the interface fe1 (port 1):

```
switch_a(config)#interface fe1
switch_a(config-if)#dot1x port-control auto
switch_a(config-if)#
```

---

#### Periodic Reauthentication:

##### Reauthentication Period:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
fe1 means port 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface fe1
```

```
switch_a(config-if)#
```

2. Usage:

Use this command to set the interval between reauthorization attempts.

Use **no dot1x timeout re-authperiod** command to delete the interval between reauthorization attempts.

3. Command Syntax:

```
dot1x timeout re-authperiod SECS
```

```
no dot1x timeout re-authperiod
```

SECS <1-4294967295> Specify the seconds between reauthorization attempts. The default time is 3600 seconds.

4. Example:

The following example specifies to set the interval **25** seconds between reauthorization attempts:

```
switch_a(config)#interface fe1
switch_a(config-if)#dot1x timeout re-authperiod 25
switch_a(config-if)#
```



## Other Protocols

GVRP, IGMP Snooping, NTP, GMRP, DHCP Server

### GVRP

GVRP:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **set gvrp enable bridge** command to enable (set) and **set gvrp disable bridge** command to disable (reset) GVRP globally for the bridge instance. This command does not enable/disable GVRP in all ports of the bridge. After enabling GVRP globally, use the **set port gvrp enable** command to enable GVRP on individual ports of the bridge.

3. Command Syntax:

```
set gvrp enable bridge GROUP
```

```
set gvrp disable bridge GROUP
```

GROUP Bridge-group ID used for bridging.

4. Example:

The following example globally enables GVRP to bridge GROUP (1):

```
switch_a(config)#set gvrp enable bridge 1  
switch_a(config)#
```

---

Dynamic VLAN creation:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **set gvrp dynamic-vlan-creation enable bridge** command to enable and **set gvrp dynamic-vlan-creation disable bridge** command to disable dynamic VLAN creation for a specific bridge instance.

3. Command Syntax:

```
set gvrp dynamic-vlan-creation enable bridge GROUP
```

```
set gvrp dynamic-vlan-creation disable bridge GROUP
```

GROUP Bridge-group ID used for bridging.

#### 4. Example:

The following example enables dynamic VLAN creation for bridge GROUP (1):

```
switch_a(config)#set gvrp dynamic-vlan-creation enable bridge 1
switch_a(config)#
```

---

Per port setting:

GVRP:

##### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

##### 2. Usage:

Use **set port gvrp enable** command to enable and **set port gvrp disable** command to disable GVRP on a port or all ports in a bridge.

##### 3. Command Syntax:

```
set port gvrp enable all/IFNAME
```

```
set port gvrp disable all/IFNAME
```

all All ports added to recently configured bridge.

IFNAME The name of the interface.

#### 4. Example:

The following example enables GVRP on the interface fe1 (port 1):

```
switch_a(config)#set port gvrp enable fe1
switch_a(config)#
```

---

Per port setting:

GVRP applicant:

##### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

##### 2. Usage:

Use this command to set the GVRP applicant state to normal or active.

##### 3. Command Syntax:

```
set gvrp applicant state active/normal IFNAME
```

active Active state

normal Normal state

IFNAME Name of the interface.

#### 4. Example:

The following example sets GVRP applicant state to active on the interface fe1 (port 1):

```
switch_a(config)#set gvrp applicant state active fe1
switch_a(config)#
```

---

#### Per port setting:

GVRP registration:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

#### 2. Usage:

Use this command to set GVRP registration to normal, fixed, and forbidden registration mode for a given port.

#### 3. Command Syntax:

set gvrp registration normal IF\_NAME

set gvrp registration fixed IF\_NAME

set gvrp registration forbidden IF\_NAME

normal Specify dynamic GVRP multicast registration and deregistration on the port.

fixed Specify the multicast groups currently registered on the switch are applied to the port, but any subsequent registrations or deregistrations do not affect the port. Any registered multicast groups on the port are not deregistered based on the GARP timers.

forbidden Specify that all GVRP multicasts are deregistered, and prevent any further GVRP multicast registration on the port.

IF\_NAME The name of the interface.

#### 4. Example:

The following example sets GVRP registration to fixed registration mode on the interface fe1 (port 1):

```
switch_a(config)#set gvrp registration fixed fe1
switch_a(config)#
```

---

## IGMP Snooping

IGMP mode:

Querier:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

## 2. Usage:

Use **ip igmp snooping querier** command to enable IGMP querier operation on a subnet (VLAN) when no multicast routing protocol is configured in the subnet (VLAN). When enabled, the IGMP Snooping querier sends out periodic IGMP queries for all interfaces on that VLAN.

Use the **no ip igmp snooping querier** command to disable IGMP querier configuration.

## 3. Command Syntax:

(no) ip igmp snooping querier

## 4. Example:

The following example enables IGMP snooping querier:

```
switch_a(config)# ip igmp snooping querier
switch_a(config)#
```

---

## IGMP mode:

### Passive:

#### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

## 2. Usage:

Use **ip igmp snooping** command to enable IGMP Snooping. This command is given in the Global Config mode. IGMP Snooping is enabled at the switch level.

Use the **no ip igmp snooping** command to globally disable IGMP Snooping.

## 3. Command Syntax:

(no) ip igmp snooping enable

## 4. Example:

The following example enables IGMP snooping on the switch:

```
switch_a(config)# ip igmp snooping enable
switch_a(config)#
```

---

## IGMP version:

#### 1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1  
switch_a(config-if)#
```

2. Usage:

Use **ip igmp version** command to set the current IGMP protocol version on an interface.

To return to the default version, use the **no ip igmp version** command.

3. Command Syntax:

ip igmp version VERSION

no ip igmp version

VERSION IGMP protocol version number.

4. Example:

The following example sets the IGMP protocol version 3 on **vlan1.1**:

```
switch_a(config)#interface vlan1.1  
switch_a(config-if)#ip igmp version 3  
switch_a(config-if)#
```

---

Fast-leave:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1  
switch_a(config-if)#
```

2. Usage:

Use **ip igmp snooping fast-leave** command to enable IGMP Snooping fast-leave processing. Fast-leave processing is analogous to immediate leave processing; the IGMP group-membership is removed, as soon as an IGMP leave group message is received without sending out a group-specific query.

Use the **no ip igmp snooping fast-leave** command to disable fast-leave processing.

3. Command Syntax:

(no) ip igmp snooping fast-leave

4. Example:

The following example enables IGMP snooping fast-leave on **vlan1.1**:

```
switch_a(config)#interface vlan1.1  
switch_a(config-if)#ip igmp snooping fast-leave  
switch_a(config-if)#
```

IGMP querier:

Query-interval:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **ip igmp query-interval** command to configure the frequency of sending IGMP host query messages.

To return to the default frequency, use the **no ip igmp query-interval** command.

3. Command Syntax:

```
ip igmp query-interval INTERVAL
```

```
no ip igmp query-interval
```

INTERVAL <1-18000> Frequency (in seconds) at which IGMP host query messages are sent. Default: 125 seconds.

4. Example:

The following example changes the frequency of sending IGMP host-query messages to 2 minutes on **vlan1.1**:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp query-interval 120
switch_a(config-if)#
```

IGMP querier:

Max-response-time:

1. Command Mode: Interface mode  
Logon to Configure Mode (Configure Terminal Mode).  
Then logon to Interface mode.  
vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **ip igmp query-max-response-time** command to configure the maximum response time advertised in IGMP queries.

To restore to the default value, use the **no ip igmp query-max-response-time** command.

3. Command Syntax:

```
ip igmp query-max-response-time RESPONSETIME
no ip igmp query-max-response-time
RESPONSETIME <1-240> Maximum response time (in seconds)
advertised in IGMP queries. Default: 10 seconds.
```

4. Example:

The following example configures a maximum response time of 8 seconds on **vlan1.1**:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp query-max-response-time 8
switch_a(config-if)#
```

IGMP passive snooping:

Static mc router port:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **ip igmp snooping mrouter interface** command to statically configure the specified VLAN constituent interface as a multicast router interface for IGMP Snooping in that VLAN.

Use the **no ip igmp snooping mrouter interface** command to remove the static configuration of the interface as a multicast router interface.

3. Command Syntax:

```
(no) ip igmp snooping mrouter interface IFNAME
IFNAME Specify the name of the interface
```

4. Example:

The following example shows interface fe1 (port 1) statically configured to be a multicast router interface on **vlan1.1**:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp snooping mrouter interface fe1
switch_a(config-if)#
```

IGMP passive snooping:

Report suppression:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **ip igmp snooping report-suppression** command to enable report suppression for IGMP versions 1 and 2.

Use the **no ip igmp snooping report-suppression** command to disable report suppression.

3. Command Syntax:

(no) ip igmp snooping report-suppression

4. Example:

The following example enables report suppression for IGMPv2 reports on **vlan1.1**:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#ip igmp version 2
switch_a(config-if)#ip igmp snooping report-suppression
switch_a(config-if)#
```

## **NTP**

Adjust RTC Time:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify system time to Switch.

3. Command Syntax:

rtc adjust-system-time YEAR MONTH DAY HOUR MINUTE SECOND

YEAR <0-99> specifies year 2000 ~ 2099 to Switch.

MONTH <1-12> specifies January ~ December to Switch.

DAY <1-31> specifies day to Switch.

HOUR <0-23> specifies hour to Switch.

MINUTE <0-59> specifies minute to Switch.

SECOND <0-59> specifies second to Switch.



#### 4. Example:

The following example adjusts system time to Switch:

```
switch_a(config)#rtc adjust-system-time 2009 1 1 0 14 4
switch_a(config)#
```

---

#### NTP Status:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

---

#### 2. Usage:

Use **ntp enable** command to enable NTP for the Switch.

Use **no ntp enable** command to disable NTP for the Switch.

#### 3. Command Syntax:

(no) ntp enable

#### 4. Example:

The following example enables NTP for the Switch:

```
switch_a(config)#ntp enable
switch_a(config)#
```

---

#### NTP Server:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

---

#### 2. Usage:

Use this command to specify the IP address or Domain name of NTP server.

#### 3. Command Syntax:

ntp server IP-ADDRESS | DOMAIN-NAME

IP-ADDRESS A.B.C.D specifies the IP address of NTP server.

DOMAIN-NAME Specifies the Domain name of NTP server.

#### 4. Example:

The following example specifies the IP address (**192.168.1.100**) of NTP server:

```
switch_a(config)#ntp server 192.168.1.100
switch_a(config)#
```

---

---

**Sync Time:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use **ntp sync-time** command to synchronize time with NTP server.

3. Command Syntax:

```
ntp sync-time
```

4. Example:

The following example synchronizes time with NTP server:

```
switch_a(config)#ntp sync-time
switch_a(config)#
```

---

**Time Zone:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to to set time zone.

3. Command Syntax:

```
clock timezone TIMEZONE
```

TIMEZONE Specifies the time zone. (Please refer the Appendix B)

4. Example:

The following example sets time zone (Canada/Yukon):

```
switch_a(config)#clock timezone YST9YDT
switch_a(config)#
```

---

**Polling Interval:**

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to specify the polling interval.

### 3. Command Syntax:

ntp polling-interval MINUTE

MINUTE <1-10080> The polling interval. Enter a value in the range 1 to 10080 minutes.

### 4. Example:

The following example specifies the polling interval **60** minutes:

```
switch_a(config)#ntp polling interval 60
switch_a(config)#
```

---

### Daylight Saving Mode:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

### 2. Usage:

Use this command to enable daylight saving.

Use **no clock summer-time** command to disable daylight saving.

### 3. Command Syntax:

clock summer-time TIMEZONE weekday WEEK DAY MONTH HOUR  
MINUTE WEEK DAY MONTH HOUR MINUTE OFFSET

TIMEZONE Specifies the daylight saving timezone.

WEEK <1-5> Specifies starting/ending week of daylight savings time.

DAY <0-6> Specifies from Sunday to Saturday.

MONTH <1-12> Specifies from January to December.

HOUR <0-23> Specifies from 0 to 23.

MINUTE <0-59> Specifies from 0 to 59.

OFFSET <1-1440> Specifies from 1 to 1440 minutes.

clock summer-time TIMEZONE date DAY MONTH HOUR MINUTE DAY  
MONTH HOUR MINUTE OFFSET

TIMEZONE Specifies the daylight saving timezone.

DAY <1-31> Specifies from 1 to 31.

MONTH <1-12> Specifies from January to December.

HOUR <0-23> Specifies from 0 to 23.

MINUTE <0-59> Specifies from 0 to 59.

OFFSET <1-1440> Specifies from 1 to 1440 minutes.

no clock summer-time

### 4. Example:

The following example sets clock summer-time TIMEZONE (**onehour**) as daylight saving offset 60 minutes from 4 April AM0:00 to 31 October AM0:00:

```
switch_a(config)#clock summer-time onehour date 4 4 0 0 31 10 0 0 60
switch_a(config)#
```

---

## GMRP

Clear GMRP Statistics:

1. Command Mode: Privileged Exec mode  
Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

2. Usage:

Use this command to clear GMRP statistics for a given VLAN or all the VLANs configured on the Layer-2 switch. This default clearing is for all the configured VLANs.

3. Command Syntax:

clear gmrp statistics [all | vlanid VLANID] bridge BRIDGE\_NAME

all Clear GMRP statistics for all the VLANs.

VLANID vlanid <1 to 4094> Clear GMRP statistics for the particular VLAN ID.

BRIDGE\_NAME Bridge instance name.

4. Example:

The following example clears the GMRP statistics for VLAN 12 on bridge 1:

```
switch_a#clear gmrp statistics vlan 12 bridge 1  
switch_a#
```

The following example clears the GMRP statistics for all the configured VLANs on bridge 1:

```
switch_a#clear gmrp statistics all bridge 1  
switch_a#
```

---

Set GMRP:

1. Command Mode: Configure mode  
Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to enable/disable GMRP globally on a particular bridge. This command does not enable/disable GMRP in all ports of the bridge. After enabling GMRP globally, use the **set port gmrp** command to enable GMRP on individual ports of the bridge. GMRP cannot be enabled if IGMP Snooping is enabled, or if GMRP has already been configured for a particular VLAN.

3. Command Syntax:

set gmrp enable | disable bridge BRIDGE\_NAME  
enable Enable GMRP on Layer-2 switch.  
disable Disable GMRP on Layer-2 switch  
BRIDGE\_NAME The text string to use for the name of the bridge.

#### 4. Example:

The following example enables GMRP on a Layer-2 switch for bridge 1:

```
switch_a(config)#set gmrp enable bridge 1  
switch_a(config)#
```

---

#### Set Port GMRP:

##### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

##### 2. Usage:

Use this command to enable/disable GMRP on a particular port in all VLANs or all ports in a bridge. GMRP on a port cannot be enabled for all VLANs if GMRP has already been configured for a particular VLAN for the port.

##### 3. Command Syntax:

set port gmrp enable | disable all | IF\_NAME  
enable Enable GMRP on Layer-2 switch port  
disable Disable GMRP on Layer-2 switch port  
all All ports added to recently configured bridge  
IF\_NAME Specify the name of the interface.

#### 4. Example:

The following example enables GMRP on interface fe1 (port 1):

```
switch_a(config)#set port gmrp enable fe1  
switch_a(config)#
```

The following example enables GMRP on all ports:

```
switch_a(config)#set port gmrp enable all  
switch_a(config)#
```

---

#### GMRP Registration:

##### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

##### 2. Usage:

Use this command to set GMRP registration type for all ports for a given bridge.

### 3. Command Syntax:

set gmrp registration normal | fixed | forbidden IF\_NAME

normal Specify dynamic GMRP multicast registration and deregistration on the port.

fixed Specify the multicast groups currently registered on the switch are applied to the port, but any subsequent registrations or deregistrations do not affect the port. Any registered multicast groups on the port are not deregistered based on the GARP timers.

forbidden Specify that all GMRP multicasts are deregistered, and prevent any further GMRP multicast registration on the port.

IF\_NAME Defines a text string used as the name of the interface; ASCII string from 1 to 16 characters.

### 4. Example:

The following example sets interface fe1 (port 1) to normal registration:

```
switch_a(config)#set gmrp registration normal fe1
switch_a(config)#
```

---

### GMRP Forward All:

#### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

#### 2. Usage:

Use this command to set the GMRP forward all option for an interface.

#### 3. Command Syntax:

set gmrp fwdall enable | disable IF\_NAME

IF\_NAME Interface name.

#### 4. Example:

The following example enables GMRP forwarding on a Layer-2 switch for interface fe1 (port 1):

```
switch_a(config)#set gmrp fwdall enable fe1
switch_a(config)#
```

---

### Set GMRP Timer:

#### 1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

## 2. Usage:

Use this command to set the values for the GMRP Join, Leave, and Leaveall timers for a specified bridge. The default is the join timer (200 milliseconds); the leave timer is 600 milliseconds (ms); and the leaveall timer is 10000 milliseconds (ms).

## 3. Command Syntax:

```
set gmrp timer [join | leave | leaveall] TIMER_VALUE IF_NAME
```

join Type of timer

leave Type of timer

leaveall Type of timer

TIMER\_VALUE Timervalue in centiseconds.

IF\_NAME Specify the name of the interface.

## 4. Example:

The following example sets the join timers 100 centiseconds for interface fe1 (port 1):

```
switch_a(config)#set gmrp join timer 100 fe1  
switch_a(config)#
```

---

## **DHCP Server**

DHCP Binding Table:

1. Command Mode: Privileged Exec mode

Logon to Privileged Exec Mode (Enable Mode).

The **switch\_a#** prompt will show on the screen.

```
switch_a#
```

## 2. Usage:

Use **show dhcp-server binding** command to display DHCP Server information.

## 3. Command Syntax:

```
show dhcp-server binding
```

## 4. Example:

The following example displays DHCP Server information:

```
switch_a#show dhcp-server binding
```

---

DHCP Server Status:

1. Command Mode: Interface mode

Logon to Configure Mode (Configure Terminal Mode).

Then logon to Interface mode.

vlan1.1 means vlan 1.

The **switch\_a(config-if)#** prompt will show on the screen.

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#
```

2. Usage:

Use **dhcp-server enable** command to start the DHCP Server.

Use **no dhcp-server enable** command to disable DHCP Server.

3. Command Syntax:

(no) dhcp-server enable

4. Example:

The following example starts the DHCP Server:

```
switch_a(config)#interface vlan1.1
switch_a(config-if)#dhcp-server enable
switch_a(config-if)#
```

DHCP Server Range:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the default IP lease block for the DHCP Server.

3. Command Syntax:

dhcp-server range A.B.C.D A.B.C.D

A.B.C.D The default Start IP for the DHCP Server.

A.B.C.D The default End IP for the DHCP Server.

4. Example:

The following example sets the default IP lease block for the DHCP Server:

```
switch_a(config)#dhcp-server range 192.168.1.100 192.168.1.250
switch_a(config)#
```

DHCP Server Subnet-mask:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:



Use this command to set the default subnet mask for the DHCP Server.  
Use the no form of this command to remove this setting.

3. Command Syntax:

```
dhcp-server subnet-mask A.B.C.D
```

```
no dhcp-server subnet-mask
```

A.B.C.D The default subnet mask for the DHCP Server.

4. Example:

The following example sets the default subnet mask for the DHCP Server:

```
switch_a(config)#dhcp-server subnet-mask 255.255.255.0  
switch_a(config)#
```

---

DHCP Server Gateway:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the default gateway for the DHCP Server.

Use the no form of this command to remove this setting.

3. Command Syntax:

```
dhcp-server gateway A.B.C.D
```

```
no dhcp-server gateway
```

A.B.C.D The default gateway for the DHCP Server.

4. Example:

The following example sets the default gateway for the DHCP Server:

```
switch_a(config)#dhcp-server gateway 192.168.1.254  
switch_a(config)#
```

---

DHCP Server DNS:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

2. Usage:

Use this command to set the default DNS for the DHCP Server.

Use the no form of this command to remove this setting.

3. Command Syntax:

dhcp-server dns 1 | 2 A.B.C.D

no dhcp-server dns 1 | 2

A.B.C.D The default DNS for the DHCP Server.

#### 4. Example:

The following example sets the default DNS for the DHCP Server:

```
switch_a(config)#dhcp-server dns 1 192.168.1.20
switch_a(config)#
```

DHCP Server Lease Time:

1. Command Mode: Configure mode

Logon to Configure Mode (Configure Terminal Mode).

The **switch\_a(config)#** prompt will show on the screen.

```
switch_a(config)#
```

#### 2. Usage:

Use this command to set the default lease time for the DHCP Server. Use the value 0 to reset this setting.

#### 3. Command Syntax:

dhcp-server lease-time <0-86400>

<0-86400> The default lease time for the DHCP Server (default: 86400).

#### 4. Example:

The following example sets the default lease time for the DHCP Server:

```
switch_a(config)#dhcp-server lease-time 86400
switch_a(config)#
```

# Specifications

<b>Applicable Standards</b>	IEEE 802.3 10Base-T IEEE 802.3u 100Base-TX IEEE 802.3ab 1000Base-T IEEE 802.3z 1000Base-SX/LX
<b>Switching Method</b>	Store-and-Forward
<b>Forwarding Rate</b>	
10Base-T	10 / 20Mbps half / full-duplex
100Base-TX	100 / 200Mbps half / full-duplex
1000Base-T/SX/LX/BX	2000Mbps full-duplex
<b>Performance</b>	14,880pps for 10Mbps 148,810pps for 100Mbps 1,488,100pps for 1000Mbps
<b>Cable</b>	
10Base-T	2-pair UTP/STP Cat. 3, 4, 5 Up to 100m (328ft)
100Base-TX	2-pair UTP/STP Cat. 5 Up to 100m (328ft)
1000Base-T	4-pair UTP/STP Cat. 5 Up to 100m (328ft)
1000Base-SX/LX/BX	MMF (50 or 62.5µm), SMF (9 or 10µm)
<b>LED Indicators</b>	Per unit – Power Per port – 10/100TX: Link/ACT 1000Base SFP: Link/ACT
<b>Dimensions</b>	442mm (W) x 343mm (D) x 44.2mm (H) (17.4" (W) x 13.5" (D) x 1.74" (H))
<b>Net Weight</b>	5.15Kg (11.35lbs.)
<b>Power Input</b>	Terminal Block power input: +48 ~ +57VDC or -48 ~ -57VDC
<b>Power Consumption</b>	390W Max. (Full load with PoE) 30W Max. (Without PoE)
<b>Operating Temperature</b>	-40°C to 75°C (-40°F to 167°F) Tested for functional operation @ -40°C to 85°C (-40°F to 185°F)
<b>Storage Temperature</b>	-40°C to 85°C (-40°F to 185°F)
<b>Humidity</b>	5%-95% non-condensing
<b>EMI</b>	FCC Part 15, Class A EN61000-6-4: EN55022, EN61000-3-2, EN61000-3-3
<b>EMS</b>	EN61000-6-2: EN61000-4-2 (ESD Standard) EN61000-4-3 (Radiated RFI Standards) EN61000-4-4 (Burst Standards) EN61000-4-5 (Surge Standards) EN61000-4-6 (Induced RFI Standards) EN61000-4-8 (Magnetic Field Standards)
<b>Environmental Test Compliance</b>	IEC60068-2-6 Fc (Vibration Resistance) IEC60068-2-27 Ea (Shock) IEC60068-2-32 Ed (Free Fall)

# Appendix A

## DB9 DCE pin assignment

Pin no.	Name	RS232 Signal name
1	DCD	Data Carrier detect
2	RxD	Received data
3	TxD	Transmit data
4	---	N/C
5	GND	Signal ground
6	DSR	Data set Ready
7	---	N/C
8	CTS	Clear to send
9	---	N/C

## Appendix B

Time Zone	Country and City Lists
Europe	
MEZ-1MESZ	Europe/Vienna, Europe/Berlin, Europe/Zurich
MET-1METDST	Africa/Tunis, CET, MET, Europe/Tirane, Europe/Andorra, Europe/Brussels, Europe/Prague, Europe/Copenhagen, Europe/Paris, Europe/Gibraltar, Europe/Budapest, Europe/Rome, Europe/Vaduz, Europe/Luxembourg, Europe/Malta, Europe/Monaco, Europe/Amsterdam, Europe/Oslo, Europe/Warsaw, Europe/Belgrade, Europe/Madrid, Africa/Ceuta, Europe/Stockholm, Europe/Vatican, Europe/San_Marino, Arctic/Longyearbyen, Atlantic/Jan_Mayen, Europe/Ljubljana, Europe/Sarajevo, Europe/Skopje, Europe/Zagreb, Europe/Bratislava, Poland
EET-2EETDST	Asia/Nicosia, EET, Europe/Minsk, Europe/Sofia, Europe/Athens, Europe/Vilnius, Europe/Chisinau, Europe/Istanbul, Europe/Kiev, Europe/Uzhgorod, Europe/Zaporozhye, Europe/Nicosia, Asia/Istanbul, Europe/Tiraspol, Turkey
GMT0BST	Europe/London, Europe/Dublin, Eire, Europe/Belfast, GB, GB-Eire
WET0WETDST	WET, Atlantic/Faeroe, Atlantic/Madeira, Atlantic/Canary
PWT0PST	Europe/Lisbon, Portugal
MST-3MDT	Europe/Moscow, W-SU
EUT-1EUTDST	America/Scoresbysund, Atlantic/Azores
EUT-2EUTDST	Asia/Beirut, Europe/Simferopol
EUT-3EUTDST	Asia/Tbilisi
EUT-4EUTDST	Europe/Samara
EUT-6EUTDST	Asia/Almaty, Asia/Qyzylorda
EUT-8EUTDST	Asia/Ulaanbaatar
Russian Federation	
RFT-2RFTDST	Europe/Kaliningrad
RFT-3RFTDST	Europe/Moscow
RFT-4RFTDST	Asia/Yerevan, Asia/Baku, Asia/Oral, Asia/Ashkhabad

RFT-5RFTDST	Asia/Aqtobe, Asia/Aqtau, Asia/Bishkek, Asia/Yekaterinburg
RFT-6RFTDST	Asia/Omsk, Asia/Novosibirsk
RFT-7RFTDST	Asia/Hovd, Asia/Krasnoyarsk
RFT-8RFTDST	Asia/Irkutsk, Asia/Chungking, Asia/Ulan_Bator
RFT-9RFTDST	Asia/Choibalsan, Asia/Yakutsk
RFT-10RFTDST	Asia/Vladivostok
RFT-11RFTDST	Asia/Sakhalin, Asia/Magadan
RFT-12RFTDST	Asia/Kamchatka, Asia/Anadyr
North America	
PST8PDT	America/Los_Angeles, US/Pacific-New, PST8PDT, US/Pacific, SystemV/PST8PDT
MST7MDT	America/Denver, America/Boise, America/Cambridge_Bay, America/Shiprock, MST7MDT, Navajo, US/Mountain, SystemV/MST7MDT
MST7	America/Phoenix, MST, US/Arizona, SystemV/MST7
CST6CDT	America/Chicago, America/North_Dakota/Center, America/Menominee, America/Costa_Rica, America/Managua, CST6CDT, US/Central, SystemV/CST6CDT
EST5EDT	America/New_York, America/Kentucky/Louisville, America/Kentucky/Monticello, America/Detroit, America/Pangnirtung, America/Louisville, EST5EDT, US/Eastern, US/Michigan, SystemV/EST5EDT
AST4ADT	America/Thule, Atlantic/Bermuda, SystemV/AST4ADT
EST5	America/Coral_Harbour, America/Cayman, America/Jamaica, America/Panama, EST, Jamaica, SystemV/EST5
AST10ADT	America/Adak, America/Atka, US/Aleutian
YST9YDT	Canada/Yukon
NST3:30NDT	America/St_Johns, Canada/Newfoundland
NAST3NADT	America/Godthab, America/Miquelon
NAST9NADT	Pacific/Pitcairn, America/Juneau, America/Yakutat, America/Anchorage, America/Nome, US/Alaska, SystemV/YST9YDT, SystemV/PST8
South America & Central America	
TTST4	America/Port_of_Spain
SAT3	America/Argentina/Buenos_Aires,

	America/Argentina/Cordoba, America/Argentina/Tucuman, America/Argentina/La_Rioja, America/Argentina/San_Juan, America/Argentina/Jujuy, America/Argentina/Catamarca, America/Argentina/Mendoza, America/Argentina/Rio_Gallegos, America/Argentina/Ushuaia, America/Argentina/ComodRivadavia, America/Buenos_Aires, America/Cordoba, America/Jujuy, America/Mendoza
EBST3EBDT	America/Fortaleza, America/Recife, America/Araguaina, America/Maceio, America/Bahia, America/Sao_Paulo, America/Cuiaba, America/Montevideo, America/Catamarca, America/Rosario, Brazil/East
WBST4WBDT	America/Campo_Grande, America/Boa_Vista, America/Manaus, Atlantic/Stanley, America/Asuncion, Brazil/West
ACRE5	America/Rio_Branco, America/Porto_Acre, Brazil/Acre
NORO2	America/Noronha, Brazil/DeNoronha
CST4CDT	Antarctica/Palmer, America/Santiago, Chile/Continental
EIST6EIDT	Pacific/Easter, Chile/EasterIsland
Asia	
MST-8	Asia/Kuala_Lumpur, Asia/Kuching
CST-8	Asia/Harbin, Asia/Shanghai, Asia/Chongqing, Asia/Urumqi, Asia/Kashgar, Asia/Hong_Kong, Asia/Macau, Asia/Macao, Hongkong, PRC, ROC
Oceania	
CST-9:30CDT	Australia/Adelaide, Australia/Broken_Hill, Australia/South, Australia/Yancowinna
EST-10EDT	Australia/Brisbane, Australia/Lindeman, Australia/Currie, Australia/Melbourne, Australia/Sydney, Australia/ACT, Australia/Canberra, Australia/NSW, Australia/Queensland, Australia/Tasmania, Australia/Victoria
LHT-10:30LHDT	Australia/Lord_Howe, Australia/LHI
TST-10TDT	Australia/Hobart
NZST-12NZDT	Antarctica/McMurdo, Pacific/Auckland,

	Antarctica/South_Pole, NZ
CIST-12:45CIDT	Pacific/Chatham, NZ-CHAT
Africa	
SAST-2	Africa/Maseru, Africa/Johannesburg, Africa/Mbabane
EST-2EDT	Africa/Cairo, Egypt
UAEST-4	Asia/Dubai
IST-3IDT	Asia/Baghdad
JST-2JDT	Asia/Amman
SST-2SDT	Asia/Damascus
Universal	
UCT	Africa/Ouagadougou, Africa/Abidjan, Africa/Banjul, Africa/Accra, Africa/Conakry, Africa/Bissau, Africa/Monrovia, Africa/Bamako, Africa/Nouakchott, Africa/Casablanca, Africa/El_Aaiun, Atlantic/St_Helena, Africa/Sao_Tome, Africa/Dakar, Africa/Freetown, Africa/Lome, America/Danmarkshavn, Atlantic/Reykjavik, Etc/GMT, Etc/UTC, Etc/UCT, GMT, Etc/Universal, Etc/Zulu, Etc/Greenwich, Etc/GMT-0, Etc/GMT+0, Etc/GMT0, Africa/Timbuktu, GMT+0, GMT-0, GMT0, Greenwich, Iceland, UCT, UTC, Universal, Zulu
UCT1	Atlantic/Cape_Verde, Etc/GMT+1
UCT2	Atlantic/South_Georgia, Etc/GMT+2
UCT3	Antarctica/Rothera, America/Belem, America/Cayenne, America/Paramaribo, Etc/GMT+3
UCT4	America/Anguilla, America/Antigua, America/Barbados, America/Dominica, America/Grenada, America/Guadeloupe, America/Martinique, America/Montserrat, America/Puerto_Rico, America/St_Kitts, America/St_Lucia, America/St_Vincent, America/Tortola, America/St_Thomas, America/Aruba, America/La_Paz, America/Porto_Velho, America/Curacao, America/Caracas, America/Guyana, Etc/GMT+4, America/Virgin, SystemV/AST4
UCT5	America/Guayaquil, America/Eirunepe, America/Lima, Etc/GMT+5
UCT6	America/Belize, America/El_Salvador, America/Tegucigalpa, Pacific/Galapagos, Etc/GMT+6



UCT7	Etc/GMT+7
UCT8	Etc/GMT+8
UCT9	Pacific/Gambier, Etc/GMT+9, SystemV/YST9
UCT10	Pacific/Rarotonga, Pacific/Tahiti, Pacific/Fakaofu, Pacific/Johnston, Pacific/Honolulu, Etc/GMT+10, HST, US/Hawaii, SystemV/HST10
UCT11	Pacific/Niue, Pacific/Pago_Pago, Pacific/Apia, Pacific/Midway, Etc/GMT+11, Pacific/Samoa, US/Samoa
UCT-1	Africa/Algiers, Africa/Luanda, Africa/Porto-Novo, Africa/Douala, Africa/Bangui, Africa/Ndjamena, Africa/Kinshasa, Africa/Brazzaville, Africa/Malabo, Africa/Libreville, Africa/Windhoek, Africa/Niamey, Africa/Lagos, Etc/GMT-1
UCT-2	Africa/Gaborone, Africa/Bujumbura, Africa/Lubumbashi, Africa/Tripoli, Africa/Blantyre, Africa/Maputo, Africa/Kigali, Africa/Lusaka, Africa/Harare, Etc/GMT-2, Libya
UCT-3	Indian/Comoro, Africa/Djibouti, Africa/Asmera, Africa/Addis_Ababa, Africa/Nairobi, Indian/Antananarivo, Indian/Mayotte, Africa/Mogadishu, Africa/Khartoum, Africa/Dar_es_Salaam, Africa/Kampala, Antarctica/Syowa, Asia/Bahrain, Asia/Kuwait, Asia/Qatar, Asia/Riyadh, Asia/Aden, Etc/GMT-3
UCT-4	Indian/Mauritius, Indian/Reunion, Indian/Mahe, Asia/Muscat, Etc/GMT-4
UCT-5	Indian/Kerguelen, Indian/Maldives, Asia/Karachi, Asia/Dushanbe, Asia/Ashgabat, Asia/Samarkand, Asia/Tashkent, Etc/GMT-5
UCT-5:45	Asia/Katmandu
UCT-6	Antarctica/Mawson, Antarctica/Vostok, Asia/Dhaka, Asia/Thimphu, Indian/Chagos, Asia/Colombo, Etc/GMT-6, Asia/Dacca, Asia/Thimbu
UCT-6:30	Asia/Rangoon, Indian/Cocos
UCT-7	Antarctica/Davis, Asia/Phnom_Penh, Asia/Jakarta, Asia/Pontianak, Asia/Vientiane, Asia/Bangkok, Asia/Saigon, Indian/Christmas, Etc/GMT-7
UCT-8	Antarctica/Casey, Asia/Brunei, Asia/Taipei,

	Asia/Makassar, Asia/Manila, Asia/Singapore, Etc/GMT-8, Asia/Ujung_Pandang, Singapore
UCT-9	Asia/Dili, Asia/Jayapura, Pacific/Palau, Etc/GMT-9
UCT-9:30	Australia/Darwin, Australia/North
UCT-10	Antarctica/DumontDUrville, Pacific/Guam, Pacific/Saipan, Pacific/Truk, Pacific/Noumea, Pacific/Port_Moresby, Etc/GMT-10, Pacific/Yap
UCT-11	Pacific/Ponape, Pacific/Kosrae, Pacific/Guadalcanal, Etc/GMT-11
UCT-11:30	Pacific/Norfolk
UCT-12	Pacific/Fiji, Pacific/Tarawa, Pacific/Enderbury, Pacific/Majuro, Pacific/Kwajalein, Pacific/Nauru, Pacific/Tongatapu, Pacific/Funafuti, Pacific/Wake, Pacific/Efate, Pacific/Wallis, Etc/GMT-12, Kwajalein
UCT-13	Etc/GMT-13
JST	Asia/Tokyo, Japan
KST	Asia/Seoul, Asia/Pyongyang, ROK
UCT-3:30	Asia/Tehran, Iran
UCT-4:30	Asia/Kabul
IST-2IDT	Asia/Jerusalem, Asia/Gaza, Asia/Tel_Aviv, Israel
CST6MEX	America/Cancun, America/Merida, America/Monterrey, America/Mexico_City, America/Lima, Mexico/General
CST6	America/Regina, America/Swift_Current, Canada/East-Saskatchewan, Canada/Saskatchewan, SystemV/CST6
EET-2EETDST2	Europe/Bucharest
EET-2EETDST3	Europe/Tallinn, Europe/Helsinki, Europe/Riga, Europe/Mariehamn
EET-2EETDST2W2K	Europe/Istanbul
UCT-14	Pacific/Kiritimati, Etc/GMT-14
UCT9:30	Pacific/Marquesas
UCT12	Etc/GMT+12
North America (Canada)	
PST8PDT_CA	America/Vancouver, America/Dawson_Creek, America/Whitehorse, America/Dawson, Canada/Pacific
MST7MDT_CA	America/Edmonton, America/Yellowknife, America/Inuvik, Canada/Mountain
CST6CDT_CA	America/Rainy_River, America/Winnipeg,

	America/Rankin_Inlet, Canada/Central
EST5EDT_CA	America/Montreal, America/Toronto, America/Thunder_Bay, America/Nipigon, America/Iqaluit, Canada/Eastern
AST4ADT_CA	America/Goose_Bay, America/Halifax, America/Glace_Bay, Canada/Atlantic
North America (Cuba)	
EST5EDT_CU	America/Havana, Cuba
North America (Haiti)	
EST5EDT_HT	America/Nassau, America/Santo_Domingo, America/Port-au-Prince, America/Bogota
North America (Mexico)	
PST8PDT_MX	America/Tijuana, America/Ensenada, Mexico/BajaNorte
MST7MDT_MX	America/Chihuahua, America/Hermosillo, America/Mazatlan, Mexico/BajaSur
CST6CDT_MX	America/Guatemala
North America (Turks and Caicos)	
EST5EDT_TC	America/Grand_Turk
Additions Since 10g RTM	
EST5EDT_INDIANA	America/Indiana/Indianapolis, America/Indiana/Marengo, America/Indiana/Vevay, America/Fort_Wayne, America/Indianapolis, America/Indiana/Knox, America/Knox_IN, US/Indiana-Starke, US/East-Indiana
UCT-8_WA	Australia/Perth, Australia/West